

# OPERATOR'S MANUAL

# Innocent Sweeper SILENT SCOPE 2

# INDEED SILENTS COPE PER 1M © 2000 KONAMI ALL RIGHTS RESERVED.





Failure to operate the machine correctly could result in malfunction or accidents, so please read this manual carefully before commencing operation. Be sure to operate the machine as described in this manual.

Keep this manual carefully so as to be ready for use when necessary.



# **About this product**

Thank you for purchasing this KONAMI product. This manual explains how to operate your game machine correctly and safely.



- •Failure to operate the machine correctly could result in malfunction or accidents, so please read this manual carefully before commencing operation. Be sure to operate the machine as described in this manual.
- •Keep this manual carefully so as to be ready for use when necessary.
- •If the machine still fails to display or to get started, immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.
- •This manual covers the following models:

•GQ931-TB

•GQ931-SD

•GQ931-HD

The specifications of GQ931-TB may be somewhat different from GQ931-SD and GQ931-HD. In such a case, read the descriptions of the model which applies to the game machine you are operating.

- •The specifications of this product are subject to change without notice for reasons such as improving the performance.
- •The contents of this game, its main devices and design are protected under each law concerning patent, copyright and other intellectual properties.
- •Unauthorized reproduction of this document or any of its contents is strictly forbidden.
- © 2000 KONAMI ALL RIGHTS RESERVED.

# **Contents**

	Precautions for use 2			
	安全使用注意事項	. 10		
	Locations of warning and other safety labels	7		
	警告標簽等的張貼位置	. 15		
1	Specifications			
•	規 格			
2				
3	How to play			
4				
4	4 Opening and closing the doors 4-1 Opening and closing the maintenance door			
	4-2 Opening and closing the maintenance door			
	4-3 Opening and closing the monitor adjustment door			
5				
J	5-1 How to networking	22		
	5-2 Checking the game performance			
	5-3 Setting and adjustment of game mode			
	5-4 Mode descriptions			
6	Installation and assembling	•		
	6-1 Fastening the adjusters	. 38		
	6-2 Installing the step cover			
	6-3 Installing the title unit			
	6-4 Service panel			
	6-5 Power unit	. 41		
	6-6 Separating the machine	. 42		
	6-7 Moving the coin counter	45		
7	Maintenance			
	7-1 Replacing the coin selector	. 46		
	7-2 Replacing the fluorescent light			
	7-3 Replacing the start button			
	7-4 Replacing the rifle unit			
	7-5 Replacing the rifle unit microswitch			
	7-6 Replacing the scope			
	7-7 Replacing the rifle unit potentiometers			
	7-8 Taking out the PCB unit			
	7-9 Resetting the circuit protector			
	7-10 Adjusting the monitor			
	7-17 Adjusting the brightness on the scope LOD screen			
8				
9	8-1 Label locations and exploded view			
	8-2 Wiring diagram			

# Precautions for use

The following safety precautions are given throughout this manual. They must be strictly followed to protect those who install, use or maintain this product as well as to prevent other people's injuries and property damages.

# Be sure to read the following

•The following suggestions show the degree of danger and damage caused when the product is used improperly with the suggestions disregarded.



Indicates a situation where disregarding the suggestions could result in death or serious injury.



Indicates a situation where disregarding the suggestions could result in injury or product damage.

•The following graphic suggestions describe the types of precautions to be followed.



Indicates a matter of which care should be taken.



Indicates a matter which is forbidden.



Indicates a matter which should be performed without fail.

- •Definitions of qualified in-shop maintenance persons and industry specialist who handle this product.
  - •In this instruction manual, some procedures require a qualified in-shop maintenance person or industry specialist. For such instructions, a qualified person must take care of the jobs.
    •Otherwise an electric shock, machine trouble, or a serious accident may result.
  - Replacing the machine parts, inspecting and maintaining the machines, and troubleshooting must be assigned only to a qualified in-shop maintenance person or industry specialist. This booklet gives instructions that hazardous jobs in particular must be handled by an industry specialist. Qualified in-shop maintenance persons and industry specialist are defined as follows.

### **Qualified in-shop maintenance persons**

• A qualified in-shop maintenance person must have experiences in maintaining amusement machines, money changers and the like. Under the supervision of an amusement machines shop owner or manager, he or she routinely assembles, installs, inspects and maintains the amusement machines, or replaces their component units and consumable parts, in the amusement machines workshop and/or shop.

### Jobs handled by qualified in-shop maintenance persons

· Assembling, installing, inspecting and maintaining amusement machines and money changers, and replacing their component units and consumable parts.

### **Industry specialist**

· An industry specialist must be engaged in designing, manufacturing, inspecting and servicing amusement machines. Or he or she must have an education in electrical, electronic and mechanical engineering, and routinely maintain and repair amusement machines.

### Jobs handled by industry specialist

Assembling and installing amusement machines and money changers, and repairing and adjusting their electrical, electronic and mechanical component parts.

### **Setting Up**



### •Be sure to consult your nearest dealer when setting up, moving or transporting this product.

- •This product should not be set up, moved or transported by anyone other than industry specialist. Doing so could result in injury or product damage.
- ·When installing this product, set the 6 adjusters stable on the floor and make sure that the product is installed stably in a horizontal position. Unstable installation may result in injury or accident.
- ·When installing this product, use case not to apply undue force to opening and closing parts and other

movable parts. Otherwise, injury or accident may result, or the product may be damaged.	
•This product is an indoor game machine. Never set up the game machine outside. •Setting up this product outside could result in accidents or equipment failure.	$\Diamond$
<ul> <li>Do not set up the game machine near emergency exits.</li> <li>Doing so could block exits in time of emergency and could result in death or serious injury.</li> </ul>	$\Diamond$
<ul> <li>•Do not set up the game machine.</li> <li>•Otherwise an accident or malfunction may result.</li> <li>•In a place exposed to rain or moisture.</li> <li>•In a place exposed to direct sunlight.</li> <li>•In a place exposed to direct heat from air-conditioning and heating equipment, etc</li> <li>•Near hazardous flammable substance such as thinner and kerosene.</li> <li>•On an inclined or uneven floor.</li> <li>•Near fire extinguishing equipment.</li> <li>•In a place exposed to strong vibration.</li> <li>•In a place exposed to excessive dust.</li> <li>•Near equipment generating strong magnetism or electric waves.</li> </ul>	

# •Do not place containers holding chemicals or water on or near the game machine.

·Electrical shock or damage could be caused by water or foreign matter entering the inside of the machine.

### •Do not place objects near the ventilating holes.

Doing so could cause the internal temperature to rise excessively, resulting in fire or equipment failure.



### •Do not bend the power cord by force or place heavy objects on it.

Doing so could result in electric leakage or fire.



### •Never plug or unplug the power cord with wet hands.

Doing so could result in electrical shock.



### •Never unplug by pulling the power cord.

-Doing so could damage the cord, resulting in electric leakage or fire.



### **Setting Up**




- •Be sure to use indoor wiring for within the specified voltage range. For extension cord, use indoor wiring of the specified rating or more.
- •Failure to do so could result in fire or equipment failure.
- •Be sure to use the attached power cord.
- Otherwise a fire or machine trouble may result.
- •Never plug more than one cord at a time in the electrical receptacle.
- Doing so could result in fire or electrical shock.



•Do not lay the power cord, networking cable where people walk through. You may tread on or stumble over them.



-You may stumble down and get injured, or damage the power cord and networking cable.

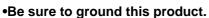

•Otherwise an electric shock or machine trouble may be caused.



•Do not apply a strong force for moving the machine.

•Otherwise, it may result in an accident or breakage of the units.

•Otherwise, it may result in an injury or damage to this product.

•Do not hold the rifle unit when moving the machine.



- •Clearance of 100 mm (3.94in) or more should be created between the game machine and walls.
- •Otherwise the machine (s) cannot be ventilated well, resulting in malfunction.
- •Do not change the DIP switch setting of this product to other than factory setting.
- Otherwise, the game can not be played properly.

### Operation



•If there is any abnormality such as smoke, bad smell or abnormal noise being emitted from the machine, immediately turn OFF the main power switch and unplug the power cord from the receptacle to stop operating it.



·Using the machine in abnormal conditions could result in fire or accidents.

### In case of abnormality -

- 1 Turn OFF the main power switch.
- 2 Unplug the power cord from the receptacle.
- 3 Contact your nearest dealer.
- •Do not leave the power cord plugged improperly or covered with dust.
  - Doing so could result in electrical shock or fire, so inspect the power cord periodically.



### Operation



- •Do not use this product anywhere other than industrial areas.
- Using in a residential area or an area next to a residential area could affect signal reception of radios, television sets, telephones, etc..



- •The following users should not play the game.
- Doing so could cause accidents or illness.
- ·Those under the influence of alcohol. •Those with drink and / or food in hand. ·Those suffering from or being treated for arm, wrist or small - of - the back ailments.
- •Do not give impact to the glass cover.
- Otherwise, it may result in an unexpected accident or injury.
- Do not plug or unplug the power cord with wet hands.
- Doing so could result in electrical shock.
- •In handling the power cord, follow the instructions below.
- Otherwise an electric leak, fire or electric shock may result. Normal communication play may also be impossible.
- Do not damage the power cord. Do not modify the power cord. •Do not bend the power cord excessively. •Do not twist the power cord. Do not heat the power cord. Do not pull the power cord. Do not bind the power cord. Do not tread on the power cord. Do not sandwich the power cord. •Do not drive a nail into the power cord.
- •If the power cord or power plug becomes damaged, stop using the machine immediately and ask your nearest dealer to replace the parts.
- Using a damaged power cord or power plug could result in fire or electrical shock.

### Inspection and cleaning



- •Be sure to turn OFF the main power switch and unplug the power cord from the receptacle before inspecting or cleaning the machine. •Failure to do so could result in electrical shock.
- When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.

- Using improper parts could result in fire or equipment failure.
- •There are high-voltaged parts inside the product. Other persons than qualified industry specialist should not open the back door and side door. When the back door and side door is opened, pay due attention not to touch the inside unnecessarily.



- Otherwise an accident or electric shock may result.
- •When opening the back door and side door, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.



- Otherwise, there may arise a danger of accident or electric shock.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.



- Otherwise, a fire, malfunction or trouble may result.
- In case of any trouble, ask your nearest dealer for repairs and other services.
- KONAMI will not resume any responsibility for the damage to the product attributable to disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- •Gently open the fluorescent light cover.
- Otherwise, the fluorescent light or other part may get broken.
- •To clean the game machine, wipe it with a soft cloth dampened in a neutral detergent and wrung out.
- ·Using thinner or other organic solvent or alcohol may decompose the material.
- Electrical shock or equipment failure could be caused by water entering the inside of the machine.

### Moving and transportation



•The game machine contains parts such as the monitor, electronic components and precision components which are sensitive to vibrations and impacts. Great care therefore should be taken when moving and transporting the game machine. Be sure not to let the machine tip over.



•Before moving the machine, be sure to turn OFF the main power switch, unplug the power cord, from the receptacle and remove the power cord and networking cable from the machine.



- Stepping on or tripping over the power cord may result in an accident or damage the machine.
- •Before moving the machine, be sure to fully lift the six adjusters and move it on the casters.
- Otherwise, an accident, breakage or trouble may result.
- •Do not apply a strong force for moving the machine.
- •Otherwise, it may result in an accident or breakage of the units.
- •Do not hold the rifle unit when moving the machine.
- •Otherwise, it may result in an injury or damage to this product.
- •When moving the monitor unit, be sure to push it along sideways (to the right or left). When moving it on a slope or getting it over a level difference, be sure to take the buddy system.



- Otherwise, the unit may turn over, resulting in an accident or damage.
- •When moving the machine, take care that no undue force is applied to the opening / closing sections or moving sections of the machine.
- •Otherwise injury, accidents or machine damage may result.

### Disposal



•When disposhing of the rifle unit of this product, do not leave it with the scope exposed.


Doing so could result in fire due to direct sunlight, etc..




# PRECAUTION IN HANDLING

- •When setting up, inspecting, maintaining, moving or transporting this product, follow the procedures and instructions set forth in this manual and perform such work safely.
- •Do not remove labels of "WARNING", "CAUTION", etc. attached to the product.
- •Do not set up, handle, inspect, maintain, move or transport this product under conditions equivalent to the condition of "WARNING" or "CAUTION" specified in this manual.
- •If a new owner is to have this product as a result of transfer, etc., be sure to give this manual to the new owner.

# Locations of warning and other safety labels

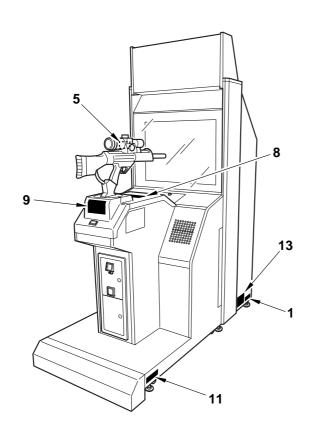

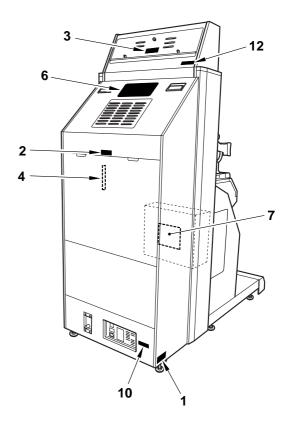

### Types of warning and other safety labels

1

### **AWARNING**

Ensure all leg levellers are securely set and game cabinet

2

### **A** WARNING

ELECTRICAL SHOCK HAZARD. DO NOT OPEN EXCEPT FOR SERVICE.

3

### **A** CAUTION

Do not open this door roughly. The fluorescent lamps are fragile

4. A HAZARDOUS VOLTAGE 397170 \ SNOOLUYZYH V

8

6

7

### **▲** CAUTION

▲ 警告(けいこく) WARNING

▲注意(ちゅうい)CAUTION

押す方向によっては転倒する場合があります。 本ユニットを移動させるときは、必ず図の方向で 押してください。また、斜面を移動するときや段差を 乗り越えるときは、必ず2人以上で行ってください。

Unit may fall if you push or truck from the wrong side. To move the unit, please push as indicated in the picture. When moving it on a slope or getting it over a level difference be sure to take the buddy system.

Do not place any objects here.
They may be knocked off by the gun.

•To avoid injuries, please keep observers away from the guns while game is in play.

9

### **▲** CAUTION

To avoid breaking the gun, please do not place any weight on it. Also, please do not touch the scope. 10

Weight 127kg(280.0lb)

11

Weight 110kg (242.5lb)

12

Weight 12kg(26.5lb)


13


MODEL	GQ931-TB SILENT SCOPE 2	
POWER	110 v / 60 Hz	
	215W(MAX)	
MANUFACTURER	KONAMI CO., LTD.	
DATE OF MANUFACTURE	January.2000	
WEIGHT	249 kg (549.0 lb)	
SERIAL NUMBER		
KONAMI &  MADE IN JAPAN PN.000071001  INDOOR USE		

 The above is an example.
 The entries are different from destination to destination.



# 1 Specifications

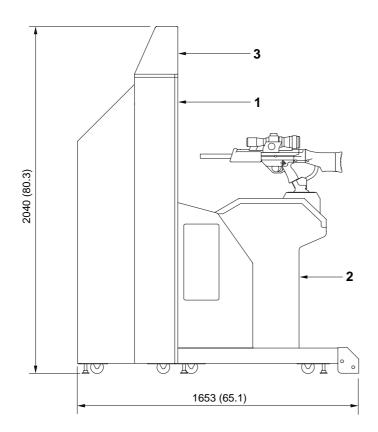

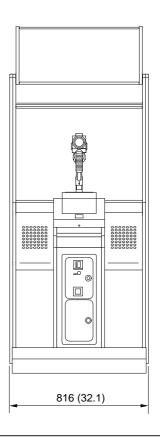

# **Specifications**


Dimensions	Refer to the figure above : mm (in)
	Approx.249 kg (549 lb)
Weight	<b>1</b> Monitor unit: Approx. 127 kg (280.0 lb) <b>3</b> Title unit: Approx. 12 kg (26.5 lb) <b>2</b> Control unit: Approx. 110 kg (242.5lb)
Rated power consumption	•GQ931-TB: 215W (MAX) •GQ931-HD/SD: 170W (235VA)
Monitor 29-inch CRT(Scope: 2-inch LCD)	
Service condition Temperature 10 to 35°C (50 to 95°F), Humidity 20 to 80% (No dewing is allowed	
Attachments	-Instruction manual This manual -Keys for coin door 2 -Keys for maintenance 2 -AC power cord 1 -Networking billboard 1 -Title unit 1 -Title unit mounting screw (M6 x 15L) 4 -Player number label 1 -Allen wrench (for servicing the scope) 1 -Networking cable 1

<sup>•</sup>If any part is defective or not found, contact your nearest dealer.


<sup>•</sup>The specifications of this product are subject to change without notice for reasons such as improving the performance.

### Allowance for Carrying-in and Installation of Product = = = =


The following allowance dimensions are necessary for carrying the product indoors.

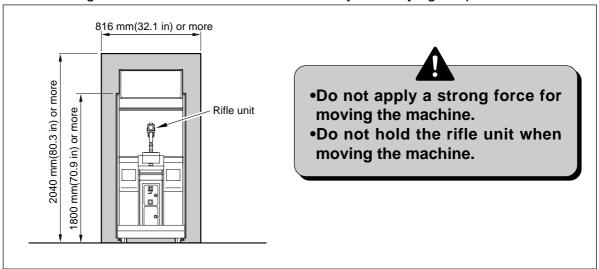

Provide a space of the following dimensions for installation of the product.

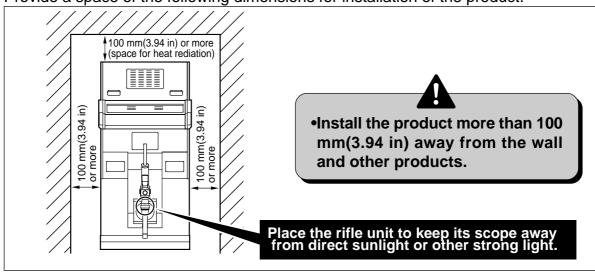

Follow the instructions below when carrying in this product with its units disconnected.

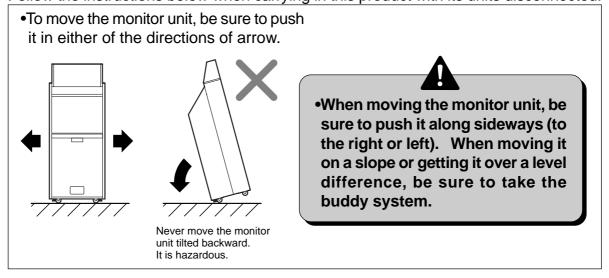

# ▮ 安全使用注意事項

本書説明爲防止危害本產品的設置、使用、維護等人員及他人和財產的安全注意事項,本書內容務請遵守。

# 務請閱讀

●本書使用如下標注,區分無視表示內容、錯誤使用時產生的危險和損害程度。

▲ 警告

該項標注表示"有可能造成死亡或身負重傷"的 內容。

▲ 注意

該項標注表示"有可能造成傷害或物品損壞"的 內容。

●本書使用如下圖標,説明務請遵守的內容種類。



本圖標表示"提請注意"的內容。



本圖標表示"禁止"的內容○



本圖標表示"強制實行"的內容。

- ●經營本產品的店內維修人員和技術人員的定義
  - ●本書中記載的説明中,凡指示為由"店內維修人員"或"技術人員"進行的操作,必須由具有專門知識和技術的人員進行。
    - ▶否則,將造成觸電或故障等重大事故。
    - ▶交換本產品零件、維修檢查、以及處置發生的異常情況時必須由"店內維修人員"或"技術人員"進行。本書中,特別是有關危險的操作規定由"技術人員"進行。有關"店內維修人員"和"技術人員"定義如下:

### 什麼是店內維修人員?

· 擁有娛樂機器、換錢機的維修經驗, 在娛樂機器(本產品)的所有者和運營者的管理下, 對娛樂設施或 店內的機器進行日常的安裝、設置、檢查維修,交換裝置和消耗零部件等對機器整體進行維修管理的人員。

### 店內維修人員的工作內容

·安裝、設置、檢查維修娛樂機器和換錢機,交換裝置和消耗零部件。

### 什麼是技術人員?

·關機器設計、製造、檢查和維修工作的人員,以及具有,擁有電子、機械工學等專門技術知識,日常對 娛樂機器進行維修管理和修理的人員。

### 技術人員的工作內容

·安裝、設置娛樂機器和換錢機,對電子部件和結構部件進行修理和調整。

### 設置時

# ▲ 警告

- ●本產品的設置、移動或搬運時,務必同當地的經銷店商洽。
  - ▶除專門人員以外,擅自設置、移動以及搬運本產品,將會導致產品損壞。
  - ▶在設置本產品時,必須在地面設置六個支腳,平穩地放在地面。否則,不穩定的放置將會導致受傷或發生事故。
  - ▶在設置本產品時,請不要對開關部位和可動部位癸分施加力量,否則將會導致受傷或發生事故,並導致產品損壞。
- ●本產品爲室內用遊戲機,絕對不可設置在室外。
  - ▶如果設置在室外,將會導致發生事故或出現故障。



- ●請不要把本產品設置在建築物的緊急出口處。
  - ▶否則發生災害時人員無法避難,將會導致傷亡。



- ●此外,請不要把本產品設置在以下場所。
  - ▶否則將會導致發生事故或出現故障。
    - · 漏雨或因潮濕結露的場所
    - · 受直射陽光照射的場所
    - · 直接受取暖用具等直接輻射的場所
    - · 煤油、稀釋劑等引火性強的危險品附近
    - · 傾斜以及強度弱的不穩定場所
    - · 消防設備附近
    - · 振動的場所
    - · 灰塵集中的場所
    - · 散發強烈磁氣和電波的機器附近
- ●本產品上側及附近,請勿放置裝水或藥品的器物。
  - ▶水分和異常物品進入內部時,將會導致觸電或發生故障。



- ■請勿在通風口附近放置物品。
  - ▶如果妨礙通氣,內部溫度上昇,將會導致發生火災或故障。



- ■請不要過分彎折或重壓電源軟線。
  - ▶否則將會導致發生漏電事故或火災。



- ●絕對不可用濕手插拔電源插頭。
  - ▶否則將會導致觸電。

禁止

- ●拔下電源插頭時,不要手持電源軟線。
  - ▶否則電源軟線破損,將會導致發生漏電事故或火災。



### 設置時

# ▲ 注意

- ●務必使用符合規格的電源。利用加長電線時,應使用符合規格的室內用線。
  - ▶否則,將會導致發生火災或故障。
- ●務請使用附屬的電源軟線。
  - ▶否則,將會導致發生火災或故障。
- ■請絕對不要使用多用插頭。
  - ▶否則,將會導致發生火災或故障。





- ●本產品必須連接地線。
  - ▶如果不連接地線,將會導致觸電或故障。
- ●移動本產品時請不要過分用力。
  - ▶否則將會導致發生事故或破損。
- ●移動本產品時,請不要手持來福槍裝置。
  - ▶否則將會導致人員受傷或發生事故,裝置受到傷損。

●請不要將電源軟線<sup>,</sup>通信用纜線設置在可被人踩拉的通道上。

▶否則將會導致人員摔倒受傷,或軟線受到傷損。




- ●設置本產品時,請距離牆壁和其他產品10公分以上。
  - ▶否則,將會導致本體不能正常散熱,發生故障。
- ●請不要改變本產品的開關位置。
  - ▶否則,將不能正常遊戲。

### 使用時

# ▲ 警告

●如果本產品萬一發生冒煙、臭味或者異常聲響時、請立即關閉主電源開關,將電源插 頭從插座上拔下,停止使用。

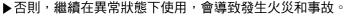



拔下電源插頭

- 1 關閉主電源開關
- 2 將電源插頭從插座上拔下
- 3 通知當地的經銷店
- ●請不要在電源插頭未正確插入插座或者堆積灰塵時放置不管。
  - ▶否則將會導致觸電或發生火災,請定期進行檢查。

—— 發生異常情況時 —



### 使用時

# ▲ 注意

●本產品不可在商工業地區以外使用。

▶如果在住宅地區或與其相鄰的地區使用,將會影響電視機、收音機和電話機等接受信號。



●請以下人士不要進行遊戲。

- ▶否則將會導致發生事故或病癥、以及致使病癥嚴重,而且還將會導致裝置發生故障。
  - 飲酒者

- · 手持飲料食品者
- · 手臂、手腕和腰部有病癥或正在治療中的患者
- ●請不要撞擊玻璃面。
  - ▶否則將會導致發生意外事故或受傷。
- ●絕對不可用濕手插拔電源插頭。
  - ▶否則將會導致觸電。



- ●使用電源軟線時,請遵守以下事項。
  - ▶否則將會導致發生漏電事故、火災或觸電。
    - ·不可損傷 ·不可加工 ·不可過分彎折 ·不可擰轉 ·不可加熱
    - ·不可拉拽 ·不可捆綁 ·不可用腳踩 ·不可夾住或釘釘
- ■萬一發生電源軟線或電源插頭損傷時,立即停止使用,委託當地的經銷店更換零件。▶在破損狀態下持續使用,將會導致發生火災或觸電。

### 檢查和清掃

# ▲ 警告

●檢查或清掃本產品時,務請關閉主電源開關,將電源插頭從插座上拔下。▶否則將會導致觸電。



- ●交換零件或消耗零件時,必須使用本公司指定的零件,絕對不可使用其他零件或混用。▶否則將會導致發生火災或故障。
- 本產品內部高壓危險,除技術人員外,不可打開背面門、側面門,並且打開時不可隨處觸摸。▶否則將會導致發生事故或觸電。
- ●打開背面門、側面門時,必須關閉主電源開關,將電源插頭從插座上拔下。 ▶否則將會導致發生事故或觸電。
- ●請不要對本説明書中未指定的部位進行分解、修理、各種設定或者改造。
  - ▶否則將會導致火災、動作失誤或故障等。需要修理等時,請委託當地的經銷店。 因對未指定的部位進行分解、修理、各種設定或者改造而導致的損害,本公司概不 負責。



拔下電源插頭



禁止分解

- ●打開螢光燈蓋罩時,請小心謹慎。
  - ▶如果用力過猛,將會導致螢光燈破損等危險。
- ●清掃本產品時,請使用浸有中性洗滌劑的軟布擰乾後進行擦拭。
  - ▶如果使用稀釋劑等有機溶劑或酒精等擦拭,會引起本體的變質。
  - ▶如果本體內部浸水,將會導致觸電或發生故障。

### 移動、搬運時

# ▲ 注意

- ●本產品裝設有顯示屏以及不抗震動的電子零件和精密零件,在移動、搬運時請小心注意。此外,絕對不可橫放。
- ●移動本產品前,務請關閉主電源開關,將電源插頭從插座上拔下,並將電源軟線, 通信用纜線從本體上取下。
  - ▶否則踩到或勾到電源軟線,將會導致發生事故或破損。
- ●移動本產品時,務必將六個支腳提高到最大限度,用腳輪移動。
  - ▶否則將會導致發生事故或破損、故障。
- ●移動本產品時請不要過分用力。
  - ▶否則將會導致發生事故或破損。
- ●移動本產品時,請不要手持來福槍裝置。
  - ▶否則將會導致人員受傷或發生事故,裝置受到傷損。



拔下電源插頭

- ●顯示器裝置根據推動方向會翻倒。移動時應面對屏幕向左右方向推動。在斜面或臺階 處移動時必須由兩個人以上進行。
  - ▶否則翻倒時造成事故和破損。
- ●移動本產時,不可強行向機體開關部位和可動部位施加過份的力量。
  - ▶否則,可致受傷或事故,破壞機器本體。

### 廢棄

# ▲ 警告


- ●廢棄處分本產品的來福槍裝置時,不可將瞄準鏡部位露出放置。
  - ▶否則,會受直射陽光等影響造成火災。




# 敬請遵守

- ●本產品的設置、使用、檢查、清掃、移動以及搬運的方法,請按照本書中記載的順序和內容安全進行。
- ●請不要撕去貼在產品上的"警告"和"注意"標簽。
- ●請不要在間接相當於警告或注意的條件下進行設置、使用、檢查、清掃、移動以及搬運。
- ●轉讓等變更本產品的所有權時,務請將本書轉交給新的所有者。

# 警告標簽等的張貼位置

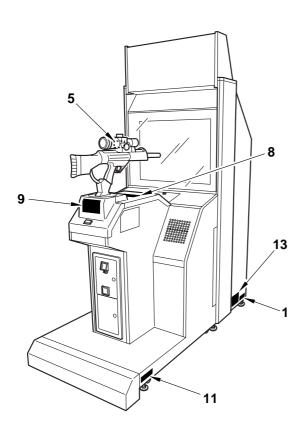

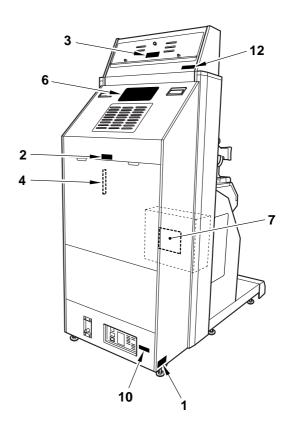

### ■警告標簽等的種類

1

### **AWARNING**

Ensure all leg levellers are securely set and game cabinet is level.

2

### **A** WARNING

ELECTRICAL SHOCK HAZARD. DO NOT OPEN EXCEPT FOR SERVICE.

3

### **A** CAUTION

Do not open this door roughly. The fluorescent lamps are fragile

4 A HAZARDOUS VOLTAGE BOLTON SNOOTHATA

8

6

7

### **▲** CAUTION

Do not place any objects here.

They may be knocked off by the gun.

 To avoid injuries, please keep observers away from the guns while game is in play.

▲ 警告(けいこく) WARNING

▲注意(ちゅうい)CAUTION

押す方向によっては転倒する場合があります。 本ユニットを移動させるときは、必ず図の方向で 押してください。また、斜面を移動するときや段差を 乗り越えるときは、必ず2人以上で行ってください。

Unit may fall if you push or truck from the wrong side. To move the unit, please push as indicated in the picture. When moving it on a slope or getting it over a level difference be sure to take the buddy system.

9

### **▲** CAUTION

To avoid breaking the gun, please do not place any weight on it. Also, please do not touch the scope. 10

Weight 127kg(280.0lb)

11

Weight 110kg (242.5lb)

12


Weight 12 kg (26.5 lb)


13

MODEL	GQ931-TB SILENT SCOPE 2		
POWER	110 v / 60 Hz		
	215W(MAX)		
MANUFACTURER	KONAMI CO., LTD.		
DATE OF MANUFACTURE	January.2000		
WEIGHT	249кд (549.0 в)		
SERIAL NUMBER			
KONAMI®  MADE IN JAPAN  INDOOR USE			

• 以上標注內容僅為示例。 不同輸出地區,其標 注內容有所不同。



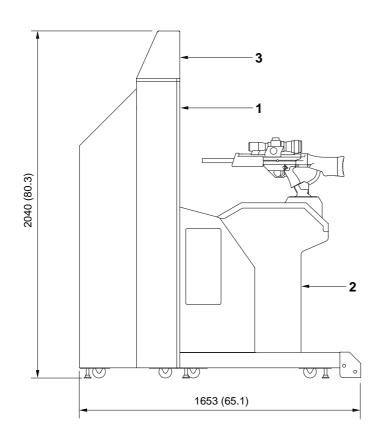

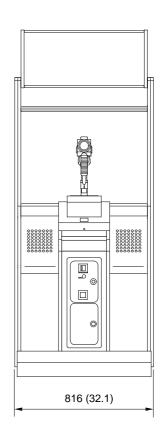


# 規格

	1	
外形尺寸	參閱上圖 mm(in)	
	總重:約249kg (549lb)	
重量	1 顯示器裝置:約127kg (280.0lb) 3 標題裝置:約12kg (26.5lb)	
	2 來福槍裝置:約110kg (242.5lb)	
<b>苑 宁 沙 邦 雨 力</b>	· GQ931-TB : 215W (MAX)	
額 定消 耗電力	· GQ931-HD/SD : 170W (235VA)	
顯 示器	29英寸彩色顯示器(瞄準鏡部位:2英寸液晶顯示器)	
使 用 條 件	溫度10~35℃(50~95°F) 濕度20~70% (不可結露)	
M   M   M   M   M   M   M   M   M   M		
	- 號鳴信競 - L形扳手(維修瞄準鏡部位用)	


- ●萬一附屬品不全或發現其他次品時,請惠詢當地的經銷店。
- ●因提高產品性能等理由,本產品的規格不經預告可能有所變更。

### ■有關搬運與設置的尺寸 ■■


爲搬進本產品,門口需要以下的尺寸。

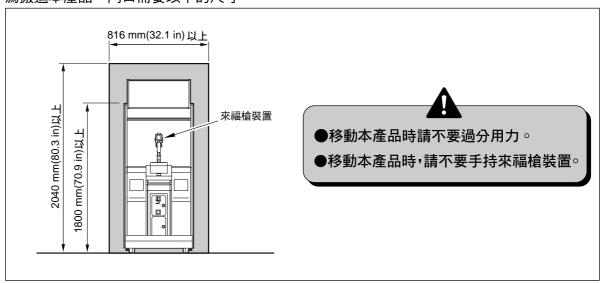


### 設置本產品時,請確保以下空間。

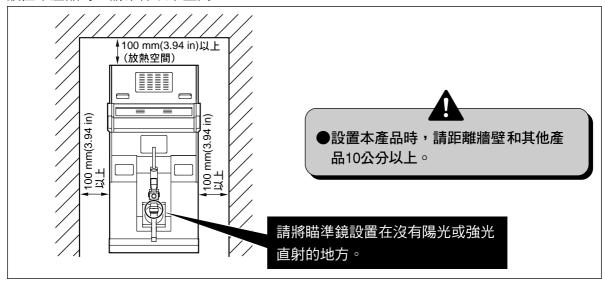

### 將本產品分開搬運時,請遵守以下指示。

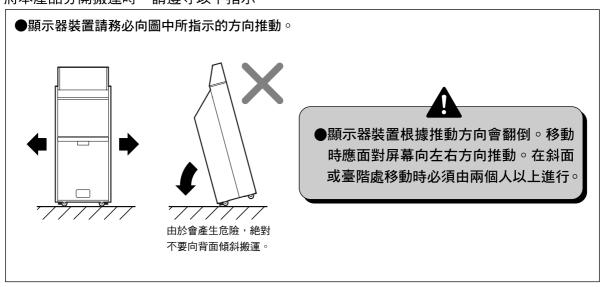

# 2 Names of parts

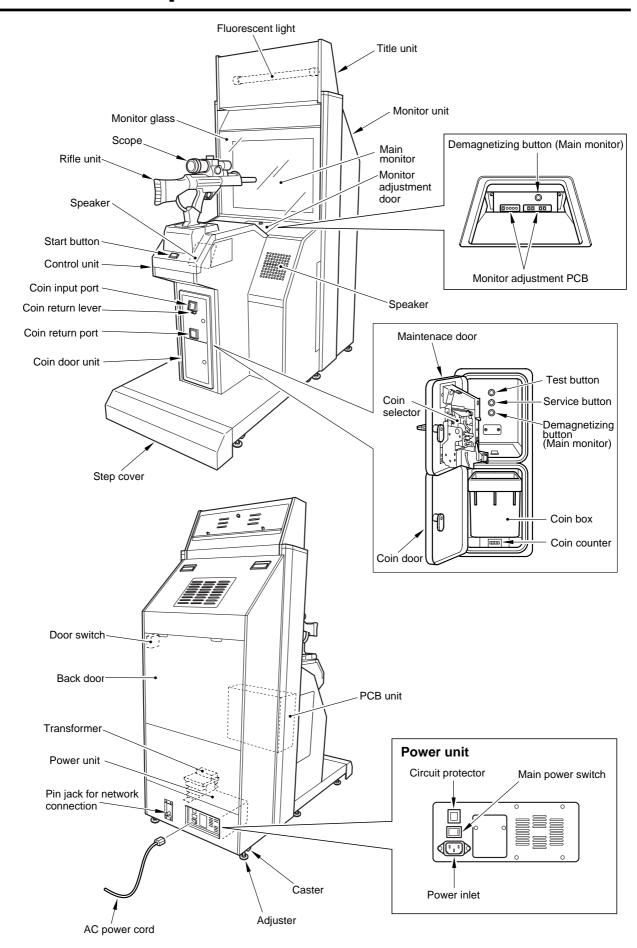

# 3 How to play

The "INNOCENT SWEEPER SILENT SCOPE 2 TM" gun shooting game is for you to look into the rifle unit's scope and snipe at enemy characters. Looking through the scope, you can find images in the distance, in the dark, through X rays or by heat-sensitive means, which cannot be pinpointed on the main monitor screen. You are challenged to find out a target quickly and shoot at it precisely at the first fire.

### How to play ——————————

- 1 Put coin(s) into the coin slot and press the start button.
- 2 The networked-play select screen shows up. In less than 10 counts, move the rifle unit to select the networked-play (accepted) or the solo play mode and pull the trigger to enter the mode. (To enter the mode, you can press the start button instead.)

  The player who can select the networked-play mode is set by the "LINK PLAYER SELECT" item on the "GAME OPTIONS" screen on page 30.
- **3** The play mode select screen shows up. In less than 10 counts, move the rifle unit to choose from the following modes and pull the trigger to enter the mode. (To enter the mode, you can press the start button instead.)
  - **Shooting range mode ....** The player tries to get the highest score possible within a specified time in the firing range.
  - •Story mode ...... A story progresses in which you come to the rescue of the missile and hostages from a terrorist group.
  - **Duel mode**(competitive play)

    The player tries to find a competing player or the CPU within a specified time. By the round-by-round match play rules, the player who has taken all the life points wins the game. (How many life points to take depends on where to hit on the target.) There are 3 courses: CITY, FOREST and AIR.

In any game mode, you can join the networked-play or the ongoing play halfway. (Note that you cannot join the game if the first player has selected the "SOLO" mode.)

- 4 Once a play mode has been selected, the game gets started automatically.
  - •Watch for an enemy on the main monitor screen, and looking through the scope, shoot at it. The rifle is loaded with 5 bullets and can also be automatically reloaded no matter how many times (the duel scene and the final scene not included).
  - If you hit anyone but the enemies, you get a penalty and lose one of your life points.
  - When you find a woman (appearing in nurse or army uniform) through the scope, you gain one life point.
  - When you find a butler inviting you for a tea break through the scope, your time is prolonged.
  - In the story mode, there are two ending styles: happy ending and bad ending.
- 5 The game is over when you have been attached and lost all your life points or when the game time is up.

### Setting the hit effect at gunning down of an enemy = = = = = = = =

•There are some levels of a hit enemy's hit effect to choose from. (Refer to "GAME OPTIONS" screen on page 30.)

### Continuing the game — — — — —

You can continue the game if you take the procedure within 10 counts (about 20 seconds) when the game is over. Some scenes are impossible to continue the game.

### 

- •When two machines are networked, the networked-play mode can be selected.
- -Put the coin(s). Within 10 counts, select the networked-play mode (accepted) or the solo play mode and pull the trigger to enter the mode. (To enter the mode, you can press the start button instead.)
- ·Various settings for the duel (competitive play) mode are referred to in "GAME OPTIONS" on page 30.

### Joining the game halfway — — — — — — — —

You can join the game halfway except the combat scene and the final scene.


# 4 Opening and closing the doors

# 4-1 Opening and closing the maintenance door


How to open the maintenance door



- •Take care not to apply any load or impact to the maintenance door when it is open.
- •After closing the maintenance door, be sure to check that the door is locked securely.
- Insert the accompanying maintenance key and turn it clockwise.

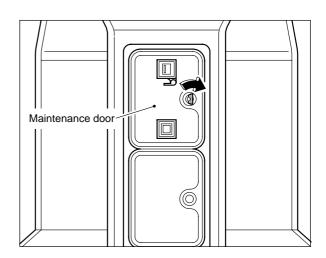

2 Open the maintenance door.

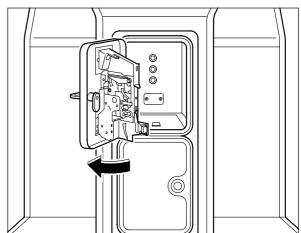


- How to close the maintenance door
- 1 Close the maintenance door.
- **2** Turn the maintenance key counterclockwise and draw it out.

# 4-2 Opening and closing the coin door

Opening and closing the coin door and removing the coin box — — — — — —



- •Take care not to apply any load or impact to the coin door when it is open.
- •Securely lock the door for protection against burglaries.
- •Note that the coin box is considerably heavy to take out if it is full of coins.
- Insert the attached coin door key in the coin door and turn it clockwise.
- Open the coin door and take out the coin box.

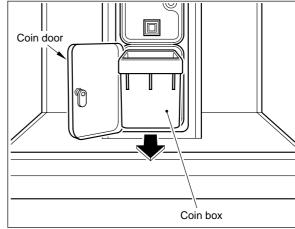


### Coin counter =

You will find the coin box when the coin door is opened.

The coin counter is located under the coin box.

•To move the coin counter onto the service panel, see page 45.

--- MEMO

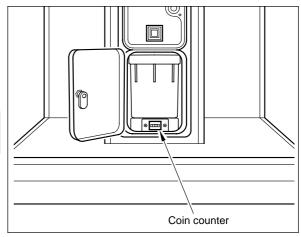


# 4-3 Opening and closing the monitor adjustment door


How to open the monitor adjustment door



- •When opening the monitor adjustment door, be careful not to hit it against the monitor glass.
- •When closing the monitor adjustment door, be very careful not to get your finger pinched by the door.
- 1 Insert the accompanying maintenance key and turn it clockwise.

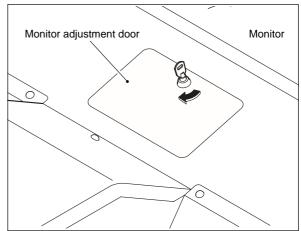

2 Open and detach the monitor adjustment door.

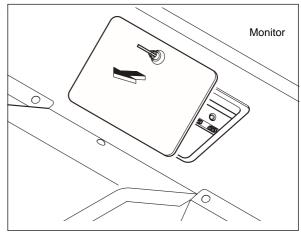


- How to close the monitor adjustment door —
- 1 Close the monitor adjustment door.
- **2** Turn the maintenance key counterclockwise and draw it out.

# 5 Networking game machines and game settings

# 5-1 How to networking

The kit's networked-play specifications allow two game machines to be connected. To network the machines, install them next to each other and connect the accompanying networking cable (2 m) to the network pin jack of the monitor unit.

- •When using the game machine independently, do not connect anything to the pin jack for network connection.
- •The network connection pin jack is dedicated to the "INNOCENT SWEEPER SILENT SCOPE  $2_{\text{TM}}$ " machine. Never use it for any other game machines and audio-visual equipment. Be sure to employ it to interconnect the same "INNOCENT SWEEPER SILENT SCOPE  $2_{\text{TM}}$ " machines.
- •Be sure to use the accompanying networking cable.
- •When the networking cable has been connected, make the "NETWORK ID" setting (see "NETWORK OPTIONS" on page 32) and then check the setting in "NETWORK CHECK".

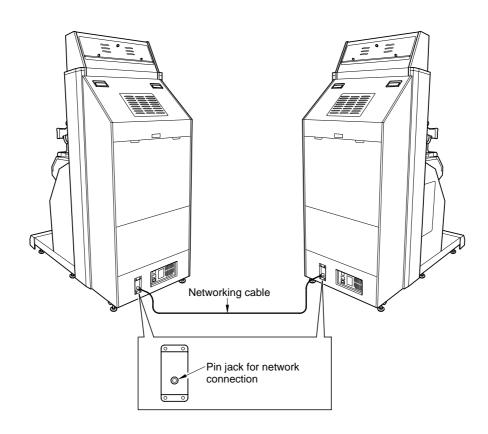

# 5-2 Checking the game performance

■ When the main power switch is turned ON after installation of machine, the game Printed Circuit Boards (PCB) is checked automatically and the result is displayed on the screen.

- •Be sure to check the PCB unit (self test) before using the machine.
- •Once the main power switch has been turned on (while the PCB unit is being checked), never touch the rifle unit until the demonstration game gets started.
- •Preferably turn OFF the main power switch while the LCD screen of the scope is off (this happens if the game is not played for longer than 30 seconds) in order to prolong the product service life.
- •Do not change the DIP switch setting of this product to other than factory setting.
- •If an abnormality persists or the machine does not operate properly, immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.

### Result of test

### If test is OK

•The machine goes to the game mode and the demonstration game gets started.

### If any abnormality is detected

• "BAD" appears on the screen, and the checking is repeated.

After the installation of this product or when the PCB unit has been repaired or replaced, turn ON the power switch while pressing the test button of the service panel to initialize the setting once to the original factory setting.

At this time, keep pressing the test button until "BACKUP DATA INITIALE COMPLETE/SCOPE SCREEN ADJUST DATA/GUN SETTING DATA/OPTION SETTINGS/RANKING DATA/BOOKKEEPING INCOME DATA/PLEASE RELEASE TEST SWITCH" appears.

Never turn ON the power switch while holding down the test button. All the "BOOKKEEPING" data will be erased. (The data once erased can not be resumed.)

If an abnormal display continues or the machine does not operate normally, immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.

### On-screen message at power on --

When the machine is powered on for the first time after installing, the following screen shows up. Set the current time correctly on the "BOOKKEEPING" screen. (See page 35.)

This message will not be displayed after you set the time unless you clear the "BOOKKEEPING" data.

To change the game mode without setting the time, please select "GAME MODE" from the main menu in the test mode. Then this message will be displayed every time you switch on the main power.

# 5-3 Setting and adjustment of game mode

Manually check and change the settings for the screen displays and game contents and change them as reguired.


### Starting the test mode = =

- 1 Turn ON the main power switch.
- 2 While the demonstration game is playing, press the test button on the service panel. (Do not turn ON the main power switch with the test button held down. The current settings as well as the BOOKKEEPING data will be erased and the machine will have the factory settings.)
  - •The main menu is displayed on the screen.

### Quit the manual test mode

- 1 Pull the rifle unit's trigger to select "GAME MODE" on the main menu screen.
- 2 Press the start button.
  - •The screen goes back to the game mode.

### Main menu screen (basic items) --

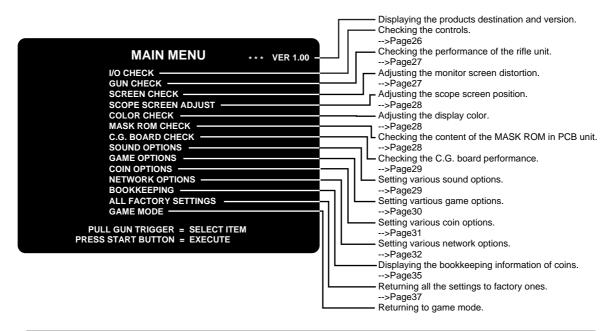

•If an error happens in "SCOPE SCREEN ADJUST DATA" or "GUN VOLUME DATA" at the start of the machine, a triangular marker is displayed at the error item. Pick up the item and make new settings. The "GAME MODE" item does not appear until those settings are properly made. This means the game cannot be played.

### - MEMO ·

### Selecting each mode -

How to select each mode from the main menu.

- -SELECT --> Pull the rifle unit's trigger.
- ·SET --> Press the start button.

After selecting a mode, refer to the page on which that mode is described in details.

# 5-4 Mode descriptions

- The original factory settings are displayed in green; the changed settings are displayed in red.
  - •Pull the rifle unit's trigger to select a setting to be modified, and press the start button to change the setting.
  - After the setting has been changed, select "SAVE AND NEXT" and press the start button for entry.
  - "NOW SAVING" will appear, the modified settings will be saved, and the screen returns to the main menu.
  - If "EXIT" is selected after the modification of the settings, the following message will appear.
  - "YOU DID NOT SAVE. DO YOU WANT TO SAVE? YES/NO" select "YES" or "NO". Pull the rifle unit's trigger to select "YES" or "NO". Press the start button for entry. If "YES" is selected, the new settings will be saved with "NOW SAVING" displayed and the screen will return to the main menu.

If "NO" is selected, the message "NO MODIFY SETTINGS" will appear, the modified settings will not be saved, but the main menu will show up again on the screen.

- •If "FACTORY SETTINGS" is selected and the start button is pressed, all the settings of the mode will go back to the factory ones.
- •If "DEFAULT SETTINGS" is selected, the settings of the mode will become the default ones.


-MEMO

### I/O CHECK

### Checking the controls

■ Mode for checking the performance of the controls.

To return to the main menu screen, pull the rifle unit's trigger and press the start button at once.

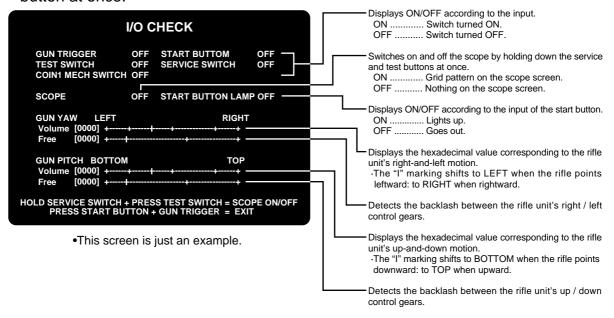

### **GUN CHECK**


### Checking the performance of the rifle unit

■ Mode for adjusting and checking the rifle unit's swing range.

Look at the screen for the marker that the gun barrel is pointing to. If the marker is extremely out of position, press the test button on the service panel to call the gun adjustment mode.

To return to the main menu screen or interrupt the gun adjustment mode, press the start button.

### Gun check mode

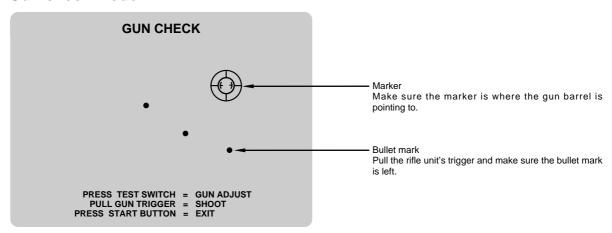

•This screen is just an example.

### Gun adjustment mode

This mode is intended to adjust the pinpointing of the rifle unit. Take the following adjustment procedure.

- 1 Point the gun barrel to the lower-left corner of the screen, and pull the rifle unit's trigger.
- **2** Point the gun barrel to the upper-right corner of the screen, and pull the rifle unit's trigger.
- **3** The "NOW SAVING" message appears and the settings will be saved. Then the "GUN CHECK" screen shows up again. Move the rifle unit and make sure the marker is in position.
  - •If an error happens in "GUN VOLUME DATA" at the start of the machine, the "Gun adjustment mode" screen shows up itself.
  - •No image appears on the scope while in the "Gun check mode" and "Gun adjustment mode".

-MEMO

# **SCREEN CHECK**

### Adjusting the monitor screen distortion

■Mode for checking the monitor screen display.

Adjust the focus, distortion and size of the image on the screen while watching the crosshatch pattern. Use the monitor adjustment PCB (See page 60) to make adjustments.

To return to the main menu screen, press the start button.

# **SCOPE SCREEN ADJUST**


### Adjusting the scope screen position

■ Mode for adjusting the display position on the scope screen.

Pull the rifle unit's trigger to select an item. Press the start button to modify the setting.

Looking into the scope, adjust so that the crosshatch pattern be centered.

To return to the main menu screen, select "SAVE AND EXIT" or "EXIT" and press the start button.

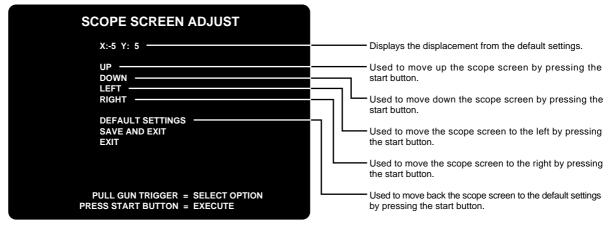

•This screen is just an example.

•The crosshatch pattern may appear slightly tilted on the scope screen. The game is not affected, however.

**MEMO** 

# **COLOR CHECK**

### Adjusting the display color

■ Mode for checking the display color.

Make the adjustment using the monitor adjustment PCB (See page 60) so that the colors of the color bars should appear properly graduated and the background should become black sufficiently.

To return to the main menu screen, press the start button.

# **MASK ROM CHECK**

### Checking the content of the MASK ROMs in PCB unit

- Mode for checking the MASK ROMs on the game PCB unit.

  If the MASK ROMs is not in trouble, "OK" is displayed: if in trouble, "BAD" is displayed. Once in this mode, this checking gets started automatically. To return to the main menu screen, press the start button.
  - •If "BAD" is indicated, turn OFF the power switch and turn it ON again. If "BAD" still appears, write down the ROM number. And immediately turn OFF the main power switch, unplug the power cord and contact your nearest dealer.


# C.G. BOARD CHECK

### Checking the C.G. board performance

■ Mode for checking the C.G. board function.

Check the function of the C.G. board by watching the motion on the screen in this mode to see if the board works normally or not.

To return to the main menu screen, press the start button.

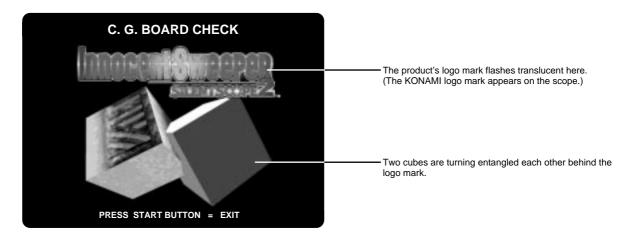


# **SOUND OPTIONS**

### **Setting various sound options**

■ Mode for setting and checking the sound options.

Pull the rifle unit's trigger to select an item. Press the start button to modify the setting.

To return to the main menu screen, select "SAVE AND EXIT" or "EXIT" and press the start button.

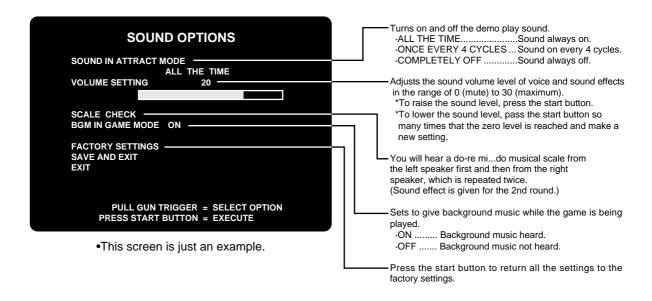


### **GAME OPTIONS**

### Setting various game options

■ Mode for setting and checking the game options.

Pull the rifle unit's trigger to select an item. Press the start button to modify the setting.

To return to the main menu screen, select "SAVE AND EXIT" or "EXIT" and press the start button.

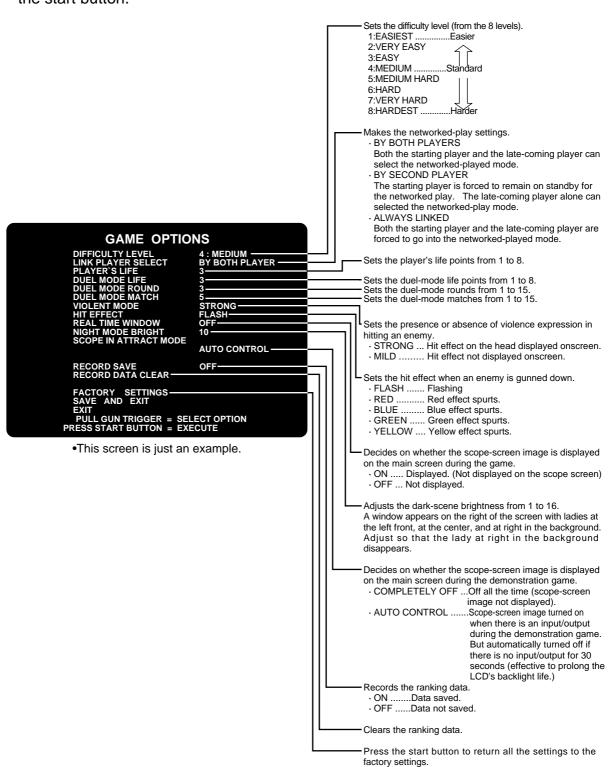

# **COIN OPTIONS**

### **Setting various coin options**


■ Mode for setting and checking the coin options.

Pull the rifle unit's trigger to select an item. Press the start button to modify the setting.

To return to the main menu screen, select "SAVE AND EXIT" or "EXIT" and press the start button.



•The coin setting options are not displayed when "FREE PLAY" is set to "ON". In such case, remember the games will be free.

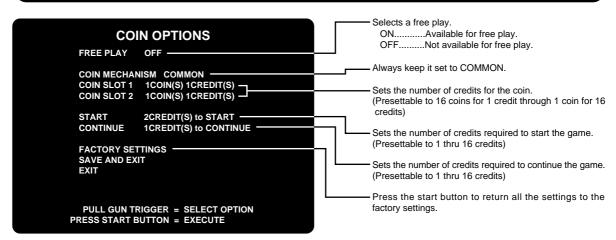

•This screen is just an example.

### **NETWORK OPTIONS**

### Setting various network options

■ This mode is used to set the network ID and to check the networking condition of each networked machine.


When the machines have been networked, be sure to check the networking condition on this screen.

Pull the rifle unit's trigger to select an item. Press the start button to modify the setting.

To return to the main menu screen, select "SAVE AND EXIT" or "EXIT" and press the start button.



- •If any of the three items responds incorrectly, it indicates possible communication malfunction. Take measures while referring to Measures to be taken when there is a network abnormality on page 34.
- •If the machine still shows the same trouble or any troubles that are not discussed in this manual, immediately turn OFF the main power switch, unplug the power cord and contact your nearest dealer.

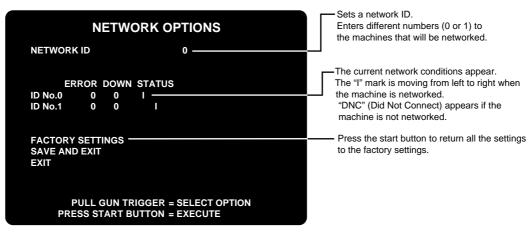


•This screen is just an example.


- Check items (Watch the screen for longer than 1 minute and make  $\,$  sure the following 3 conditions are met.)  $\cdot$ 

- Check that the "I" mark in the STATUS column is moving from the left to the right at a fixed speed.
- •Check that the value in the ERROR column is below "10" after one minute.
- ·Check that the value in the DOWN column does not change from "0".

- Screen display when game machines are networked
- When being networked Screen for player 1

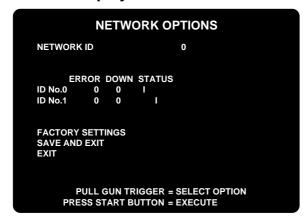

### Screen for player 2

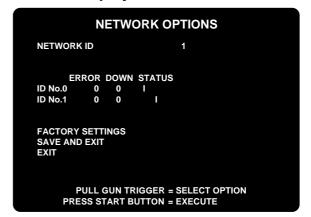

# Measures to be taken when there is a network abnormality

### Possible causes and measures to be taken ———————

Possible causes	Measures
•The "Network ID" settings are improper.	Readjust the "Network ID" settings on the "NETWORK OPTIONS" screen in the test mode. (See page 32)
•The networking cable is in trouble.	Properly reconnect the networking cable between the machines. Replace the networking cable with new one.
One of the networking cable has been disconnected from during play.	·1.Turn OFF the main power switch. 2.Connect the networking cable properly. 3.Turn ON the main power switch.
One of the networking cable has been internally broken or broken.	Replace the networking cable with new one.  You can also use commercially-sold video cable (75 \Omega 3C-FV) having a length of 2m(78.74in) or less.


### **BOOKKEEPING**

#### Displaying the bookkeeping information of coins

■ Mode for displaying the total data on the number of coins put in the machine. If the time is preset on the "CLOCK SETUP" screen, the total data on the number of coins put into the machine can be checked for each coin slot.

Pull the rifle unit's trigger to select "HOUR", "MINUTE", and "SECOND". Press the start button to adjust the current time.

Make sure the current time is correct, select "SAVE AND EXIT" and press the start button. (The current time is now set and the main menu screen shows up.)

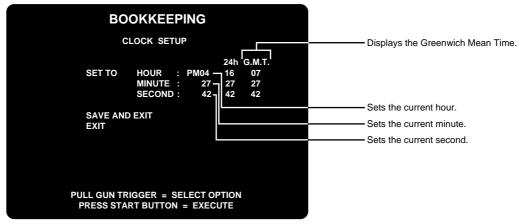


•This screen is just an example.

- •If the time setting has not been made for example, after the machine has been set up or initialized —, the "CLOCK SETUP" screen shows up.
- •When the time setting has been modified, the bookkeeping information is automatically cleared. With the current time not set, the total of received coins and other bookkeeping data are not displayed. (The data once erased can not be resumed.)

  MEMO

■When the time has been preset on the "CLOCK SETUP" screen as shown above, the following "BOOKKEEPING" information is displayed on the screen. Select "NEXT DATA SUMMARY" and press the start button, and the screen will switch in the following sequence. To return to the main menu screen, select "EXIT" and press the start button.

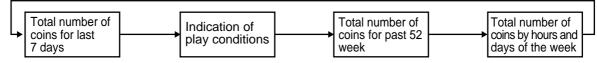


Also, when the current time has been set and "INCOME DATA CLEAR" has been selected and the start button pressed, the current time and BOOKKEEPING data can be cleared.

At this time, the question "DO YOU WANT TO CLEAR DATA? YES/NO" is indicated on the screen. Pull the rifle unit's trigger to select "YES" or "NO". If "YES" is selected, "NOW CLEARING" appears on the screen and the "BOOKKEEPING" data will be deleted. The data will be saved in the factory settings and the main menu screen will show itself up.


If "NO" is selected, "NO MODIFIED" is indicated and the main menu appears again without deletion of the data.

#### Screen of the total number of coins for last 7 days **BOOKKEEPING** INCOME DATA of LAST 7DAYS SLOT1 SLOT2 LAST 7DAYS AVERAGE TODAY Total number of coins after the time being set. Average number of coins of last 7 days. 0000 0000 Number of coins of today. YESTERDAY Number of coins of yesterday. Number of coins of 2 days ago. Number of coins of 3 days ago. -7DAY 0 0 NEXT DATA SUMMARY INCOME DATA CLEAR EXIT Number of coins of 7 days ago. Goes to the next data. Clears the current time and the income data. PULL GUN TRIGGER = SELECT OPTION PRESS START BUTTON = EXECUTE •This screen is just an example. Screen of indication of play conditions Displays the total active time since the time setting. **BOOKKEEPING** Displays the total play time. Displays the activity rate (total active time ^ total play time). PLAY DATA SUMMARY TOTAL ACTIVE TIME TOTAL PLAY TIME ACTIVITY RATE AVERAGE PLAY TIME ONE TIME ONLY COUNT CONTINUE COUNT SOLD PLAY COUNT Displays the average play time. 0h 0m 0s 0h 0m 0s Displays the number of plays (continuities not included). Displays the number of continuities. 0m 0s Displays the total number of plays. - Displays the number of story mode plays (continuities not STORY MODE SHOOTIME RANGE Displays the number of shooting range mode plays. DUEL CITY ► Number of plays in the city course in the duel mode. **FOREST** Number of plays in the forest course in the duel mode. DUEL AIR Number of plays in the air course in the duel mode. **NEXT DATA SUMMARY** INCOME DATA CLEAR EXIT PULL GUN TRIGGER = SELECT OPTION PRESS START BUTTON = EXECUTE •This screen is just an example.

#### Screen of the total number of coins for past 52 weeks

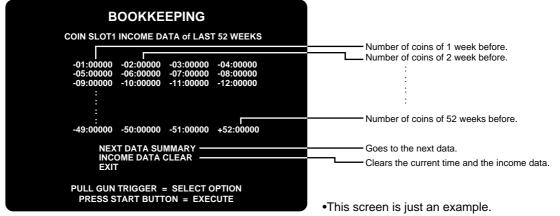

#### Screen of the total number of coins by hours and days of the week

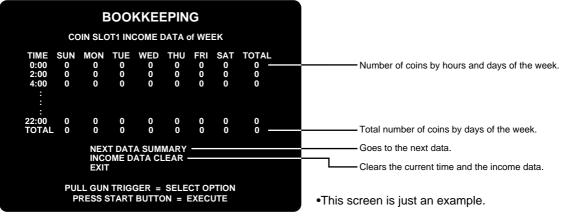

### **ALL FACTORY SETTINGS**

#### Returning all the settings to factory ones

- ■Mode for returning the test-mode settings to the factory settings.

  Pull the rifle unit's trigger to select "YES" or "NO" and press the start button for entry. If "YES" is selected, the question for re-confirmation appears on the screen. If "YES" is selected again, the "NOW SAVING" message appears on the screen and the next test-mode settings are saved as the factory settings.
  - SOUND OPTIONS
  - GAME OPTIONS
  - COIN OPTIONS
  - NETWORK OPTIONS

If "NO" is selected, "NO MODIFY SETTING" is indicated. This means the modified settings are not saved.

## 6 Installation and assembling


### 6-1 Fastening the adjusters

How to fasten the adjusters



- •Adjust the adjusters so that the casters do not touch the floor.

  Take care not to exceed the maximum adjusting height of the adjuster.
- •Make all the 6 adjusters come in contact with the floor, tighten them with hexagon nuts after making sure that all the units are placed stably in a horizontal position.

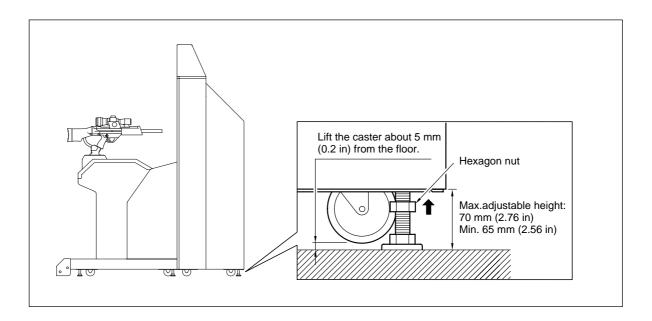


### 6-2 Installing the step cover


■ How to install the step cover — —

First make sure the machine is secured with the adjusters and then attach the step cover as shown below.

Remove the screws and detach the step cover.

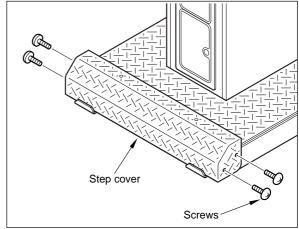

Place the step cover back in position and fix it with the above four screws. See the figure at right.

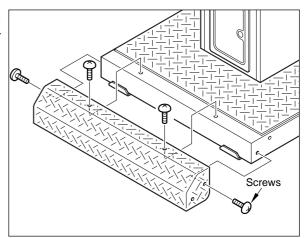


### 6-3 Installing the title unit

How to install the title unit =



- •Before installing the title unit, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •Before installing the title unit, make sure the adjusters of the machine are tight on the floor.
- •The title unit weights approx. 12kg(26.5lb). Be sure to make a team of 2 people or more and to use stepladders or the like for added safety.
- •When connecting the title unit, take care not to catch the wiring and your hand between the unit.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Connect all the specified connectors. Place the title unit on the monitor unit with care not to get the wires caught between them.
- Fix the title unit with the accompanying title unit mounting screws.

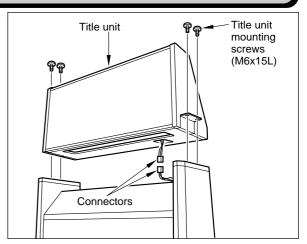


- •When placing the title unit on the monitor unit, be careful not to get your hand and the wires caught between them.
- •Fix each of the unit on the monitor unit and fix it by tighting the screws.

MEMC

### 6-4 Service panel

Service panel ---

Using the accompaying maintenance key, open and detach the maintenance door to access the service panel inside.

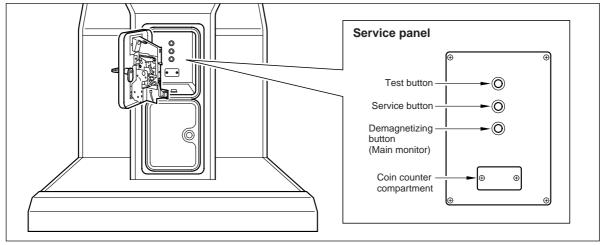


#### 6-5 Power unit

#### Power unit

The power supply unit is provided at the rear side of the machine.



- •Be sure to use the attached AC power cord.
- •Be sure to ground to the machine. Never connect the grounding wire to gas pipe, water pipe or telephone ground terminal.
- •There are high-voltaged parts inside the product. Other persons than qualified industry specialist should not open the back door and side door. When the back door and side door is opened, pay due attention not to touch the inside unnecessarily.
- •When opening the back door and side door, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •Preferably turn OFF the main power switch while the LCD screen of the scope is off (this happens if the game is not played for longer than 30 seconds) in order to prolong the product service life.

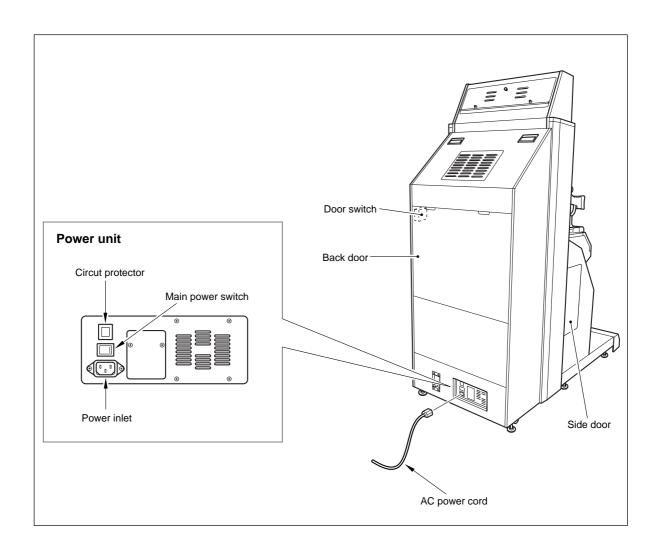

### 6-6 Separating the machine

How to separate the machine


The machine can be divided into the units.




- •Before separating the units from the machine, be sure to turn OFF the main power switch and remove the power cord plug from the receptacle.
- •Before moving the machine, be sure to turn OFF the main power switch, unplug the power cord from the receptacle and remove the power cord from the machine.
- •Before moving the machine, be sure to fully lift the six adjusters and move it on the casters.
- •When moving the monitor unit, be sure to push it along sideways (to the right or left). When moving it on a slope or getting it over a level difference, be sure to take the buddy system.
- •When connecting the separated units, take care not to catch the wiring and your hand between the units.

#### ■ How to separate the monitor unit and control unit ■ ■


- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Raise the six adjusters to let the casters come in contact with the floor.

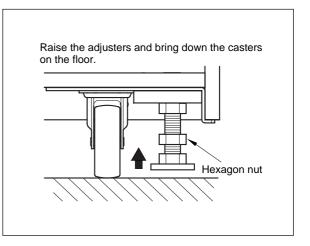

Detach the side door of the control unit (see at right).

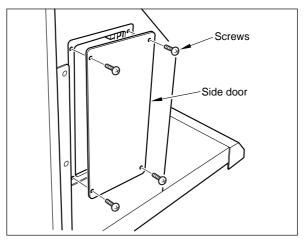


Disconnect the networking cable shown at right.

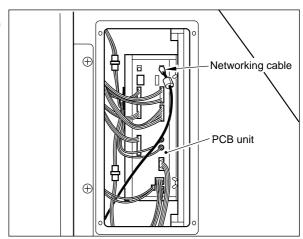


- Unscrew the fixtures off both sides. Draw the units 100 mm (3.94 in) or shorter apart from each other.
  - •Be careful not force the units too far from each other. The wires connected between the units may be damaged inside.
  - •Fix each of the unit on the monitor unit and fix it by tighting the screws

-MEMO

**6** Disconnect all the connectors.

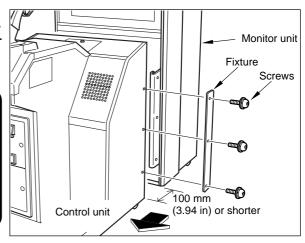


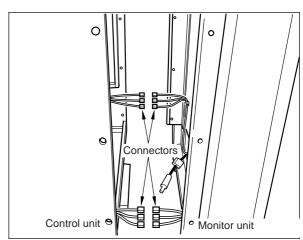

#### Separating the title unit



- •Before separating the title unit, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •Before detaching the title unit, make sure the adjusters of the machine are tight on the floor.
- •The title unit weighs approx. 12 kg (26.5 lb). Be sure to make a team of 2 people or more and to use stepladders or the like for added safety.
- •When reconnecting the title unit, take care not to catch the wiring and your hand between the units.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Remove the lock screws off the title unit. Lift the title unit slightly and disconnect the connectors.
  - •Be careful not to force the title unit up too far. The wires connected may be damaged inside.

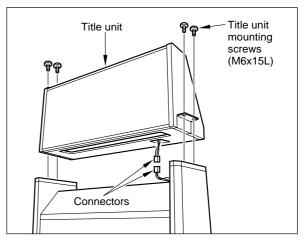

-MEMO

### 6-7 Moving the coin counter

■ How to move the coin counter

The coin counter was installed in the coin box when the machine left the factory, but it can be moved onto the service panel.




•Before moving the coin counter, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.


- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Open the coin door and take out the coin box. Remove the screws and take out the coin counter.

  In the meanwhile, disconnect the
- Remove the maintenance door and unscrew the blind cover to remove it from the service panel.


connectors.

- Draw the connector out of the opening of the service panel and connect this connector to the coin counter's connector.
- Attach the coin counter on the service panel with the screws.

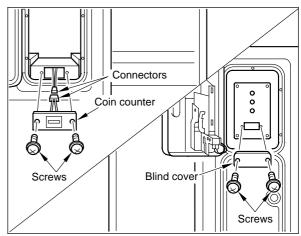

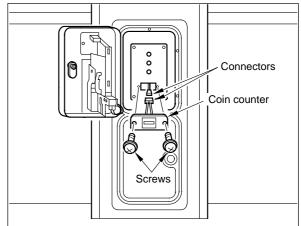

- Attach the blind cover (detached in Step 3 above) back in position on the coin counter using the screws.
- Place the coin box back into position and close the coin door.

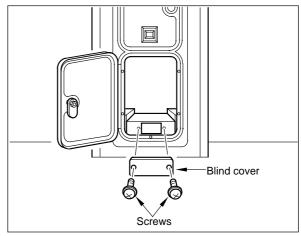


### 7 Maintenance

### 7-1 Replacing the coin selector


How to replace the coin selector



- •Before replacing the coin selector, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- 2 Open the maintenance door.
- Release the levers that fix the coin selector. See at right.

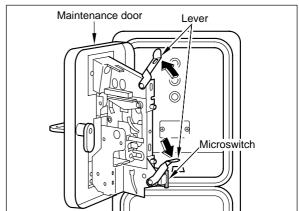


Slide the coin selector to the right, and take it out.

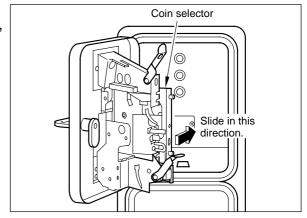

**5** To fit the coin selector again

Fit the 2 projections of the coin selector to their mating notches.

Lock the levers (in Step 3 above) again, and close the maintenance door.

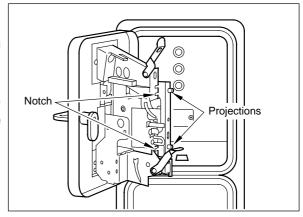



### 7-2 Replacing the fluorescent light

How to replace the fluorescent light




- •Before replacing the fluorescent light, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •Gently open the fluorescent light cover.
- •The florescent light is hot just after the power switch is turned off. Wait until it cools down and then replace it with a new one of the same type (straight tube 20W / 100V).
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Remove the screws off the back cover (see at right). Hold the knob and gently open the cover.

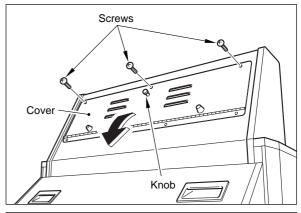

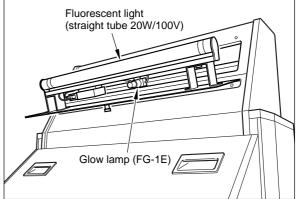

- Push one end of the fluorescent light in the direction of the socket. The other end of the fluorescent light will be detached from the opposite socket.
- Install a new fluorescent light in the reverse order.

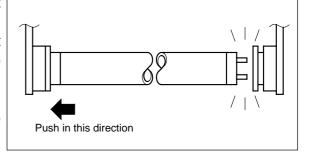

•It is recommended to replace the glow lamp at the same time.


### 7-3 Replacing the start button


How to replace the start button




- •Before replacing the start button, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Remove the screws and datach the cover.
  - •Be careful not to force the cover up too far. The wires connected may be damaged inside.


-MEMC

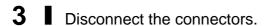

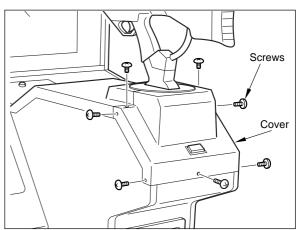

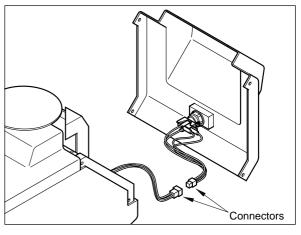


- Remove the screw off the band that secures the button and the socket.
- **5** Pull out the socket from the button.

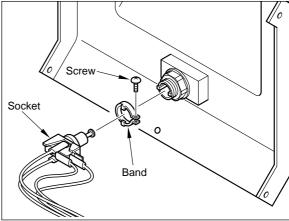


- 6 Loosen the nut and separate the button.
- **7** To fit the button again


  To install the button, take the reverse procedure.
- Pay attention to the posture of socket and assemble it in the reverse of disassembly, using care not to confuse the wires.

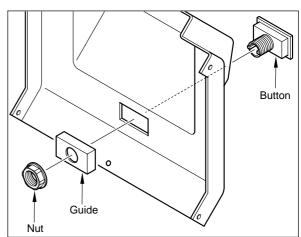

- **9** Reconnect the connectors (disconnected in Step **3** above).
- **10** Mount the cover into position.

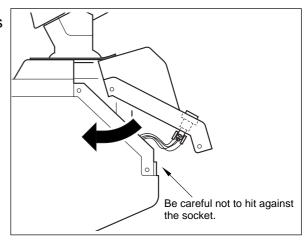

Take the steps in "5-2 Checking the game performance (self test)" on page 24 and the steps in "I/O CHECK" on page 26.

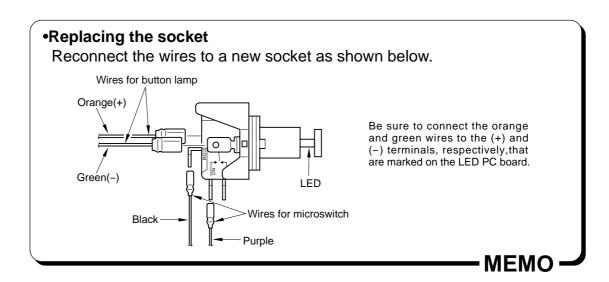


## 7-4 Replacing the rifle unit

How to replace the rifle unit




- •Before replacing the rifle unit, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •The rifle unit weighs approx. 4 kg (8.8 lb). Be careful not to drop it.
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- **2** Remove the screws (see at right).

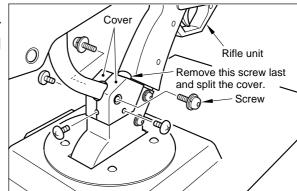

- Detach the cover and remove another set of screws (see at right).
- 4 Lift the rifle unit and disconnect the connectors.
  - Be careful not to force the rifle unit up too far. The wires connected may be damaged inside.


    MEMO

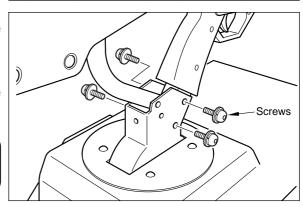

**5** To fit the rifle unit again

To install the rifle unit, take the reverse procedure.

Take the steps in "5-2 Checking the game performance (self test)" on page 24 and the steps in "I/O CHECK" on page 26.

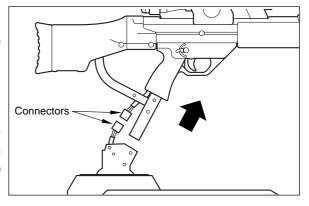


### 7-5 Replacing the rifle unit microswitch


How to replace the microswitch



- •Before replacing the microswitch of the rifle unit's trigger, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Remove the screws (see at right) and detach the cover of the trigger.

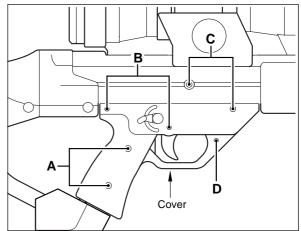

- 3 Detach the microswitch.
- Disconnect the wires from the microswitch.

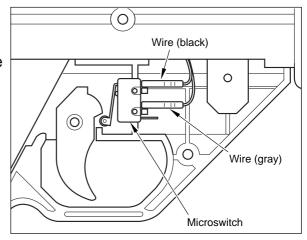

5 To fit the microswitch again

Fit a new microswitch in the reverse order. Be careful not to get the wires caught.

- 6 Place and fix the cover (detached in Step 2 above) back into position.
- **7** Take the steps in "5-2 Checking the game performance (self test)" on page 24 and the step in "I/O CHECK" on page 26.

### 7-6 Replacing the scope


How to replace the scope



- •Before replacing the scope, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- Remove the screws (see at right) and detach the scope up straight.


Α	:	M5 x 25L	2
*B	:	M4 x 30L	2
C	:	M4 x 8 L (no cap nut)	4


**D**: M4 x 10L ...... 1
\*Use the accompanying Allen

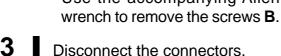

Be careful not to force the scope up too far. The wires connected may be damaged inside.

MEMO —

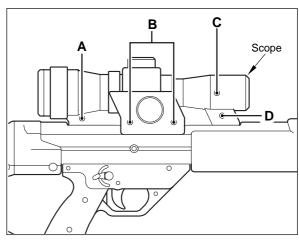

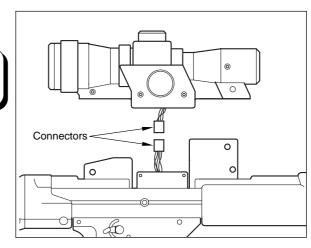


- 4 To fit the scope again
  - Fit a new scope in the reverse order. Be careful not to get the wires caught.
- Take the steps in "5-2 Checking the game performance (self test)" on page 24 and the step in "I/O CHECK" on page 26.

### 7-7 Replacing the rifle unit potentiometers


How to replace the rifle unit potentiometers




- •Before replacing the rifle unit potentiometers, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •When replacing parts, be sure to use parts of the correct specifications. Never use parts other than the specified ones.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- 2 Unscrew and detach the door off the control unit.
- Detach the cover (see at right), referring back to page 48.

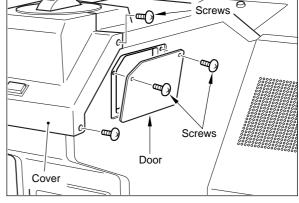

Disconnect the wires from the potentiometers.

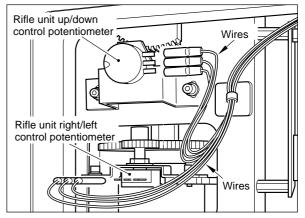


Remove the bolts off the potentiometer brackets. Detach the potentiometers and their brackets together.

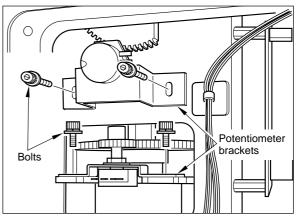


### **6** Remove the hexagon nut and separate the potentiometer.

#### Rifle unit up/down control potentiometer

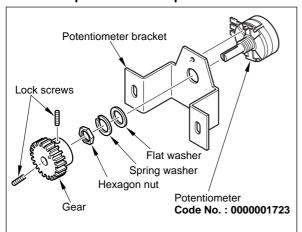

#### Rifle unit right/left control potentiometer

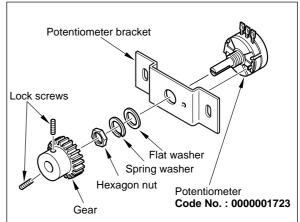


-MEMO

•When replacing the potentiometers with new ones, be sure to first make the adjustment on the next page.


### ■ How to adjust the rifle unit potetiometers ■■■■■■■■■■■■

- 1 Fit the potentiometer projection to the smallest hole of the potentiometer bracket. Tighten up the hexagon nut.
- Install the gear onto the shaft of the potentiometer. Tighten up the two lock screws.


#### Rifle unit up/down control potentiometer

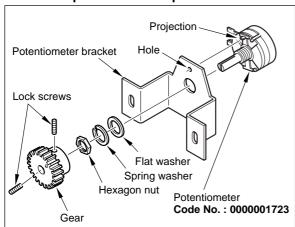

#### Rifle unit right/left control potentiometer

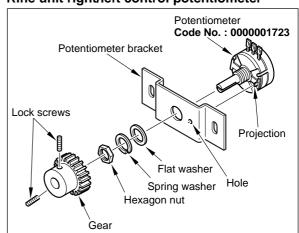


**3** Align the potentiometer tip, as shown below.

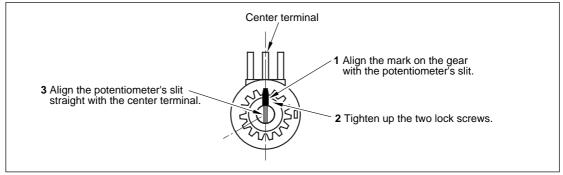


Set the potentiometer bracket so that the mark on the potentiometer gear and that on the mating gear be in alignment (see below). Also adjust the gears into good mesh.


#### Rifle unit up/down control potentiometer

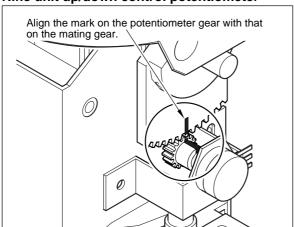


#### Rifle unit right/left control potentiometer

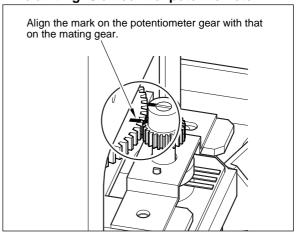


Place and fix the potentiometer brackets with the bolts.

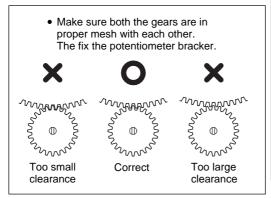


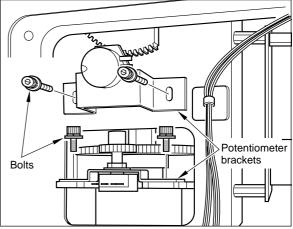

- Reconnect the wires back to their respective terminals.
- Place and fix the cover (detached in Step 3 on page 53), referring back to page 48.
- Plug in the power cord and turn ON the main power switch.

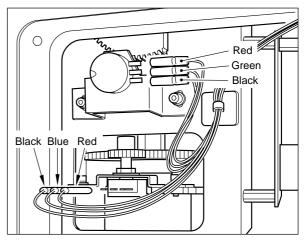

- Take the steps in "5-2 Checking the game performance" on page 24 and the steps in "I/O CHECK" on page 26. Follow the procedure below to check the rifle unit performance.
  - 1 Swing the rifle unit all the way to the left or the right. Hold it in this position.
  - 2 Make sure that the "I" bar in "Volume" of "GUN YAW" is not in the red range. If in the red range, the potentiometer may get in trouble. Reposition and readjust the potentiometer so that the "I" bar comes into the green range.
  - 3 While holding the rifle unit in that position, make sure that the "Free" reading is "0000".(If the reading is not "0000", go back to the above step 1.)
  - 4 Make sure the reading is "0000", and make one turn of the potentiometer gear gently by hand. If the "I" bar in "Free" comes in the red range again, it means the gear's clearance is too large. This fails to play the game. Readjust the potentiometer gear into good mesh. Finally make sure the "I" bar is in the green range.

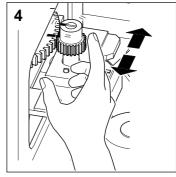


Make sure the rifle unit functions as specified. Place and fix the door and cover (detached in Step 2 and 3 on page 53) with the screws.

### 7-8 Taking out the PCB unit

How to take out the PCB unit




- •Be sure to ask a qualified industry specialist or your nearest dealer to take out the PCB unit. (You will be charged.)
- •Before removing the PCB unit, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •There are high-voltaged parts inside the product. Other persons than qualified industry specialist should not open the side door. When the side door is opened, pay due attention not to touch the inside unnecessarily.
- •Do not touch the PCB unit with wet hands.
- •Keep the PCB unit's DIP switches at the factory settings.
- •Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.
- Be sure to turn OFF the main power swith and unplug the power cord from the receptacle.
- Detach the side door of the control unit (see at right).
  - •The side door may fall down when the screws are removed. Hold the side door with one hand and remove the screws.

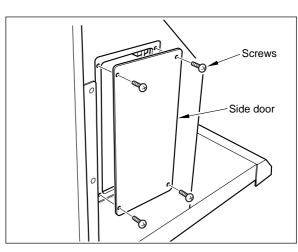


#### - MEMO

- Disconnect all the connectors and networking cable from the PCB unit as well as the connectors 1 and 2.
  - 1 Speaker cable (Red, Black, Gray, White)
  - **2** AMP Power cable (Orange, Black)

MEMO:

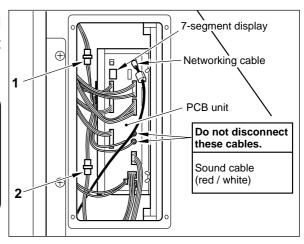

- Remove the wing bolts. Hold the grip and gently draw out the wooden board with the PCB unit attached.
  - •Be careful not to force the cover up too far. The wires connected may be damaged inside.
  - Factory-adjusted DIP switch settings:Bit Nos. 1 thru 8: Set at OFF

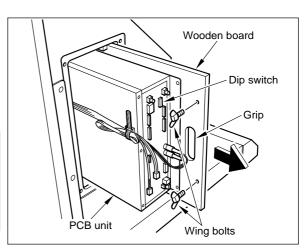

### - MEMO

- To fit the PCB unit again

  Push the unit fully into position with enough care not to get the wires caught.
- **6** Fix the wooden board with the wing bolts and reconnect the connectors.
- **7** Secure the side door tightly with the screws.

### 7-9 Resetting the circuit protector


How to reset the circuit protector

If an overcurrent or short circuit occurs, the circuit protector will be automatically actuated to protect the electric circuits of the game machine. When resetting the circuit protector, turn OFF the main power switch, unplug the power cord from the receptacle, eliminate the cause, and then press the button of the circuit protector.



- •Before resetting the circuit protector, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •If the circuit protector trips soon again, immediately turn OFF the main power switch, unplug the power cord, and contact your nearest dealer.
- •There are high-voltaged parts inside the product. Other persons than qualified industry specialist should not open the back door and side door. When the back door and side door is opened, pay due attention not to touch the inside unnecessarily.
- •When opening the back door and side door, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.
- •If the machine is in abnormal conditions and does not operate normally, immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.
- Be sure to turn OFF the main power swith and unplug the power cord from the receptacle.
- Remove the cause of the trouble.

  Press the button on the circuit protector of the power unit.

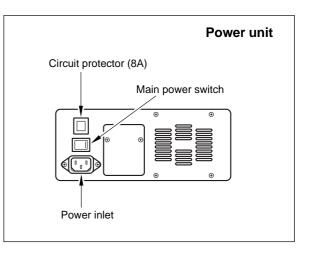


## 7-10 Adjusting the monitor

#### ■ Monitor adjustment PCB ==

The monitor has already been adjusted at the time of shipment, but it may be readjusted as desired.

The monitor adjustment PCB is located inside the machine. To access the PCB, open the monitor adjustment door (refer to page 22).

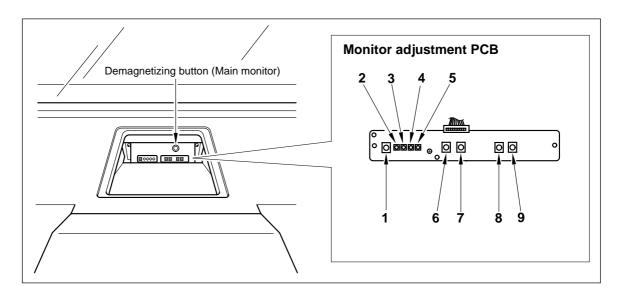

1	CONTRAST	Contrast adjustment Used to changes the contrast.
2	R.GAIN	Red input gain adjustment Changes red brightness. Turning it clockwise will make the red deeper.
3	G.GAIN	Green input gain adjustment Changes green brightness. Turning it clockwise will make the green deeper.
4	B.GAIN	Blue input gain adjustment Changes blue brightness. Turning it clockwise will make the blue deeper.
5	BRIGHT	Brightness adjustment Changes brightness. Turning it clockwise will make the image brighter.
6	H.SIZE	Horizontal screen size adjustment Changes the width of the screen.
7	H.POSI	Horizontal image position adjustment Changes the image position in the horizontal direction.
8	V.SIZE	Vertical screen size adjustment Changes the height of the screen.
9	V.POSI	Vertical image position adjustment Changes the image position in the vertical direction.


### 7-11 Adjusting the brightness on the scope LCD screen


How to adjust the LCD screen brightness -----



•Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodelling.

- 1 Turn ON the main power switch and get the game started.
- While the demonstration game is playing, press the test button on the service panel.
- 3 Select "COLOR CHECK" on the main menu screen.
- Remove the cap, shown at right, off the scope.
- Insert the tip of a thin bladed screwdriver into this hole. Adjust the contrast while looking into the scope.

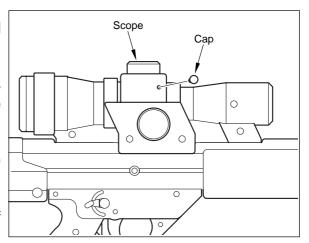

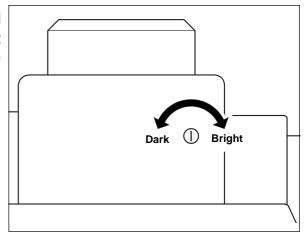

•Images on the scope LCD screen can also be displayed on the main screen during the demonstration game. For this setting, refer to "GAME OPTIONS" on page 30.

**MEMO** 

## 7-12 Troubleshooting

If the power switch is turned ON but the machine fails to start properly, take the following measures. If the machine still malfunctions or any other problem than described below occurs, immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.

Trouble	Possible cause & check point	Measures
No image on main screen, title unit fluorescent light failure to light up.	•No power supply.	∘Turn ON the main power switch. Check also store's circuit breaker. (See page 41.)
	Power cord unplugged at machine or wall outlet.	∘Reconnect power cord. (See page 41.)
	Back door open or poorly closed.	∘Close back door tightly with screws: door switch activated to cut off power. (See page 41.)
No image on main screen: title unit fluorescent light on, but	<ul> <li>Connector(s) wrongly connected when joining the separated units.</li> </ul>	∘Reconnect connector(s) properly. (See page 40.)
PCB unit 7-segments display off.	•Wires (connectors) disconnected on PCB unit.	∘Check to see if PCB unit wires (connectors) are all connected. (See page 57.)
Title unit fluorescent light failure to light up.	•Fluorescent light or glow lamp broken.	∘Replace fluorescent light and glow lamp with same-type ones. (See page 47.)
	<ul> <li>Connector(s) wrongly connected when joining the separated units.</li> </ul>	∘Reconnect connector(s) properly. (See page 44.)
Main monitor screen too dark or too bright.	•Monitor maladjusted.	∘Readjust brightness on main monitor screen using monitor adjustment PCB. (See page 60.)
Game started, but no image on scope screen.	•Connector(s) wrongly connected after replacing the rifle unit or the scope.	∘Reconnect connector(s) properly. (See pages 50 and 52.)
	•Wires (connectors) disconnected on PCB unit.	∘Check to see if PCB unit wires (connectors) are all connected. (See page 57.)

Trouble	Possible cause & check point	Measures
Start button malfunctioning.	•Switch wires disconnected from start button socket.	<ul> <li>Reconnect switch wires properly to socket. (See page 48.)</li> </ul>
	•Wires (connectors) disconnected on PCB unit.	∘Check to see if PCB unit wires (connectors) are all connected. (See page 57.)
	•Start button defective.	∘Replace start button as required. (See page 48.)
Start button functioning, but button lamp failure to light up.	•Lamp wires disconnected from start button socket, or wrongly connected.	∘Reconnect lamp wires properly to socket. (See page 48.)
	•Start button lamp (LED) defective.	∘Check performance on "I/O CHECK" screen. Replace start button as required. (See page 49.)
Rifle unit's trigger malfunctioning.	•Wires disconnected from trigger's microswitch.	∘Reconnect microswitch wires properly. (See page 51.)
	•Wires (connectors) disconnected on PCB unit.	∘Check to see if PCB unit wires (connectors) are all connected. (See page 57.)
	•Trigger's microswitch defective.	∘Check performance on "I/O CHECK" screen. Replace trigger's microswitch as required. (See page 51.)
Coin selector malfunctioning.	Coin selector defective.	∘Check performance on "I/O CHECK" screen. Replace coin selector or microswitch as required. (See page 46.)


Trouble	Possible cause & check point	Measures
Rifle unit orientation cursor failure to move or out of position.	•Reference settings greatly out of spec.	∘Check performance on "I/O CHECK" screen. Make new settings on "GUN CHECK" screen as required. (See page 27.)
	•Wires disconnected from rifle unit's potentiometer.	∘Reconnect potentiometer wires properly. (See page 56.)
	<ul> <li>Rifle unit's potentiometer wrongly installed.</li> </ul>	∘Install potentiometer properly. (See page 53.)
	•Rifle unit's potentiometer defective.	∘Replace potentiometer with new one. (See page 53.)
Image out of position on scope screen.	•Reference settings greatly out of position.	<ul> <li>Make new settings on "SCOPE SCREEN ADJUST" screen. (See page 28.)</li> </ul>
Image too dark or too bright on scope screen.	•Scope LCD screen maladjusted.	∘Readjust brightness on scope LCD screen. (See page 61.)
No sound, or sound too weak or too loud.	•Sound level maladjusted.	∘Make new settings on "SOUND OPTIONS" screen. (See page 29.)
	•Wires (connectors) disconnected on PCB unit.	∘Check to see if PCB unit wires (connectors) are all connected. (See page 57.)
No image on screen at start (power supplied and monitor well adjusted)	•Error message "Er**" in 7-segments display of PCB unit. (See page 57.)	•Write down the error code "**", immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.

Trouble	Possible cause & check point	Measures
"BAD" displayed on "MASK ROM CHECK" screen in test mode.	•Indicated Mask ROM defective.	•Write down the error code  "***", immediately turn  OFF the main power  switch, unplug the power  cord from the receptacle  and contact your nearest  dealer.
"HARDWARE ERROR (***)" displayed on screen. Game failure to start.	•Hardware getting in trouble.	•Write down the error code "***", immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.
Following display shown on screen at start. Game failure to start.  BACKUP DATA ERROR  OPTION SETTINGS RANKING DATA BOOKKEEPING INCOME DATA SCOPE SCREEN ADJUST DATA GUN VOUME DATA PRESS TEST SWITCH 10 FACTORY/DEFAULT SETTINGS AND MANUAL TEST MODE	•Error in indicated item.	∘Press test button to return "OPTION SETTINGS", "RANKING DATA" and "BOOKKEEPING INCOME DATA" settings to factory ones. For "SCOPE SCREEN ADJUST DATA" and "GUN VOLUME DATA" settings, press test button to go back to test mode. Then make new settings.
The following message appears. (The game may fail to play.)  GAME MODE LOCKED!  CONTACT YOUR NEAREST DEALER PLEASE SET the PASSWORD PRESS TEST SWITCH to MANUAL TEST MODE	•Something is wrong with the product.	∘Immediately turn OFF the main power switch, unplug the power cord from the receptacle and contact your nearest dealer.

## 8 Annex

# 8-1 Label locations and exploded view

Label ---------

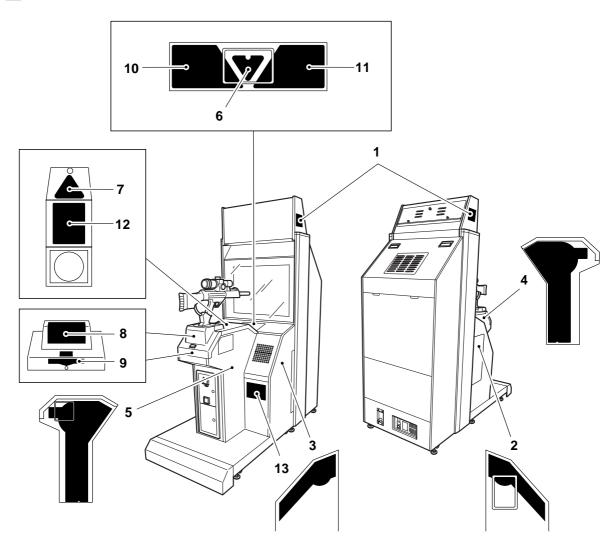


No.	CODE No.	NAME	QTY	NOTE
1	0000061691	LABEL, KONAMI	2	
2	0000061562	LABEL, SIDE A/L	1	
3	0000061563	LABEL, SIDE A/R	1	
4	0000072486	LABEL, SIDE B/L	1	
5	0000072487	LABEL, SIDE B/R	1	
6	0000061726	LABEL, TRIANGL A/HD	1	
7	0000061570	LABEL, TRIANGL B	1	
8	0000061728	LABEL, PL/START/HD	1	
9	0000061572	LABEL, INSERT COIN	1	
10	0000072499	LABEL, PLAING/HD/L	1	
11	0000072500	LABEL, PLAING/HD/R	1	
12	0000072816	LABEL, PL/INST/HD	1	
13	0000072493	LABEL, FRONT	2	
-	0000072494	LABEL, PLAYER	1	Number label
	0000072817	POP	1	Networking billboard

#### ■ FIG.1 UNIT ------

10 <u>0</u>								Md'MS	SW, PW	
-	-	-[	-[	Ω <del>-</del>	- -	+	4	9		4
MATERIAL/SPECIFICATION OILY	ı	1	1	SECC 12.3	SECC 11.2		M6X15	M8X35	M6X15	M4X6
COULE NO. NAME NO. 0000073004 UNIT.CHBINET TITLE	0000072975 UNIT, CABINET MONITOR	0000063380 UNIT, GUN	UNIT, CABINAT FRONT	0000061430 JOINT	0000060635 COVER, JOINT		SOREN, CROSS TRUSS	BOLT, BUTTON HEAD	BOLT, BUTTON HEAD	SORE), GROSS TRUSS
		0000063380	00000073003	0000061430	0000060635					
5 2	05	03	04	92	0 6		101	102	103	100
©⇒ ©		Le		(101)(01)					(20)	
									(	(104) (103)


#### FIG.2 UNIT, CABINET CONTROL

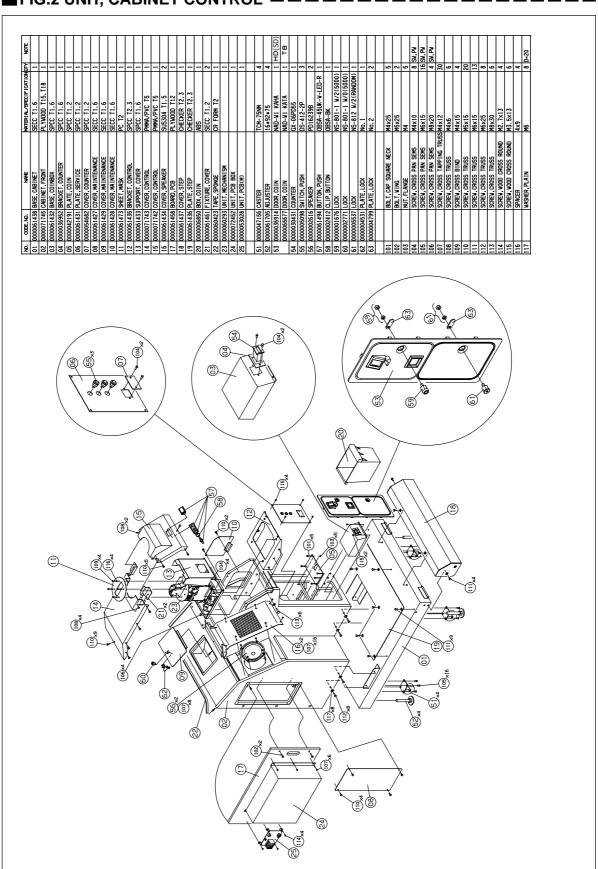


### ■ FIG.3 UNIT, CABINET MONITOR ———————


٦ NOTE			1	<u>,</u>			- 6			2		2 .					- 6					4	2					Æ.	20 PW.SW	24 PV.SV	0 9	2 0		12	12	10 D20
MATELIAL/SPECIFICATION OTY NOTE	PLYNOOD TIB, TIS 1	PLY4000 T15 1	2, 27	+	3CC 11.2	3.1. S		$\top$	+	$^{+}$	┪	$\dashv$	SPCC 71.6	SPCC T2.3	7 1 00 100	SECC 11.2	3	_		AV1225 1	DS-412-2P 1	П		D29CR55 1	MP1060	PS2608 1	-				M5X15	T		M3.5X10 1;	M3. 1X13	¥
MAN W	CABINET, MONITOR PLYNOOD T18, T15	COVER, REAR	1000	BEACKET, MONITOR	FIXIORE, GLASS	+	1	BRACKET, CASTER	BACKE, FOR	NIOC	COVER, DUCT	BRACKET, ADJUSTER	BRACKET, SWITCH	PLATE, SWITCH	ASS'T, CUNTECTUR	BOACKEI, POB	201.100	G ASS. MONITOR		SWITCH, DOOR	SWITCH, PUSH	CASTER	ADJUSTER	MONITOR	ВСВН	BOX, DC POWER	ASS'Y, TRANSFORMER	SCREW, CROSS PAN SENS	SCREM, CROSS PAN SEMS	SCREIV, CROSS PAN SEMS	SCREW, CROSS TRUSS	SOCIAL CROSS IRLESS	SOREN, CROSS TAPPING TRUSS	SCREW, CROSS TAPPING TRUBS	SCREM, CROSS NOOD ROUND	MAS-ER, P. JAK
NO. CODE NO.	01 0000071746	02 0000061460	11		12 0000061447			_			00000052370	0000052885		21 0000038230		22-1 000000/1/38		_		51 0000004953	_		$\rightarrow$	55 0000048809	56 0000038413	57 0000062386	0000072794				104					
4	4	-	-!-	-	!		٩							(s)		· 1 C	<u>v I</u>	1	•						)	-	•	'			-   -	1,	1.5			
YAIN M10	NGE MB	PAN SEMS M4X10			\	X		ķ	\	/		<del>/</del>							7						(i		(102)	#V								
WASHER, PLAIN	NUT, FRANCE	SOPEN, CROSS PAN SEMS	٩	Z	<i>y</i>						_		7	Ą		[] \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\	(50)(11)	)	\ \			•—· >	\{ /	7		22/3	1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1 (1	22-2	[10]	<b>Š</b> /	(E)	)			1 3 (10) 103) X2 X4 X4	(45) (45)
11	112	113			45	*	Z		\	(i	(a)						//	<i>y</i>				\$\ \ \\		30			as !	\ \ \ \ \		/	<u>/</u>	· 				
(	(10)(18)	)		* ×	1	\\ \ \ \	\ \ \!\!	\ \ <b>\</b>			\ \		<u>/</u>									\\						<u>).</u> (	//- 				<u>_</u>	<u> </u>		
		r ID	~	• */	 	/ //	<u>//</u>	<u> </u>	\     	<u>/</u> /	<u> </u>	/ <u> </u>	/	<i> </i> _	<u></u>			<u>/</u>	/ \ 			<u>~</u>					./					/ / /;	<b>&gt;</b> ₹	• <b>(</b> )	<u>~</u>	
		<b>6</b> 5-					W.					<u> </u>	<del>-/</del> /												<b>=</b>	<u> </u>				(1)	<u></u>	\	\		7	
		(104)	)×		//	/		/			( (-	/- /- /-	<b>/</b> ¥	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		4		<u></u>		ر ا	/	<u>/</u>	_		_	\(	/\ \ 	\ <u>\</u>	7						\	(in) Xis Xis
				<	<u></u>	7"		\			(		ę				(1)(1)(2)	: !	/	, •					/	/	/ }}				\ \ \ \	7	<u>:</u>		·	· • · ·
								11/1	)×							(	(32)	/	/		(1,	(16)	<u></u>	(101,104,15)	_	/	[ <u> •</u> ] 	\\ _ /{			<b>\</b> \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		\ \_	\	<i>?</i>	(00) (01) (1) (1) (1) (1) (1) (1) (1) (1) (1) (
																	-					. /	- >	10												

#### FIG.4 UNIT, CABINET TITLE -

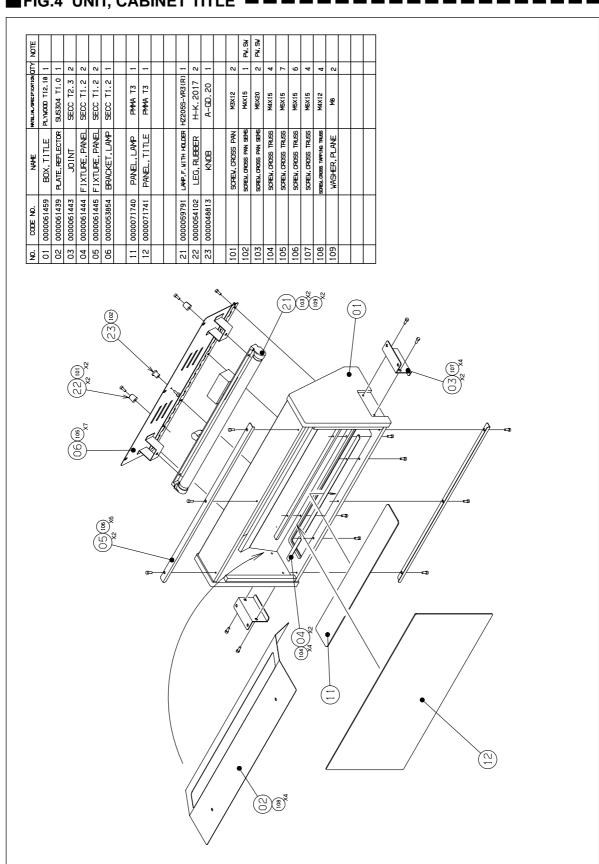

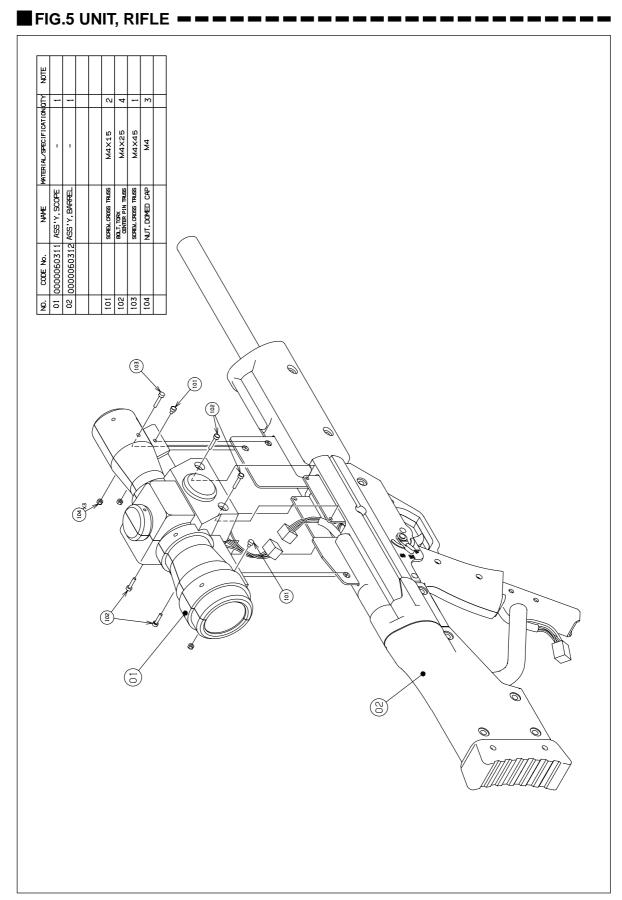

#### FIG.6 ASS'Y, SCOPE ------

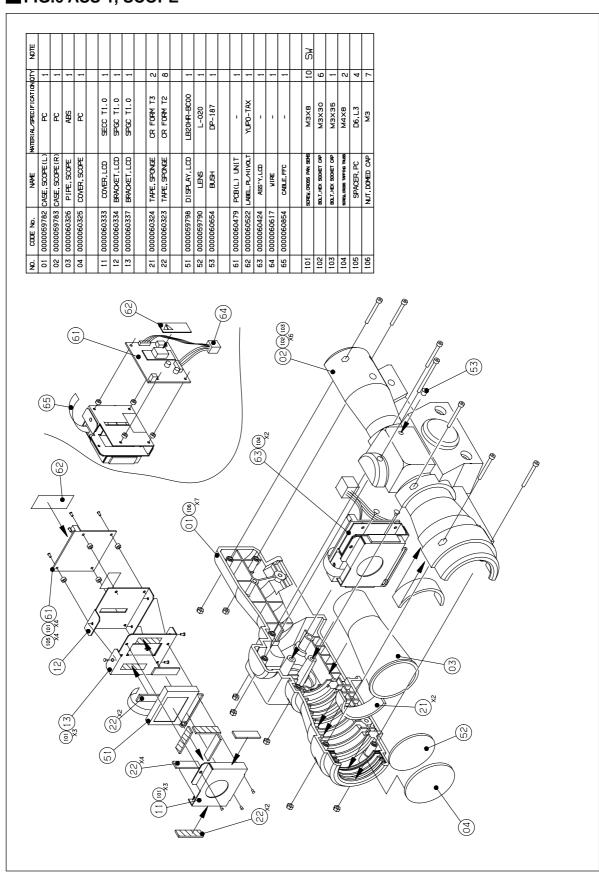


NOTE T																															
Σ	-	-		1	-		-	N	-	1	-	-	-	=	-	- -	-	1	-	-	27	9	56	4	- (	.u c	u -	4	3	2	
MATERIAL/SPECIFICATION OTY	5	5	ъ.	긢	뿐		SPCC T2.3	SPCC 72.3	SPCC T2.3	SPCC T2.3	SPCC T2.3	SPCC T1.6	SPCC 71.6	SPCC T1.6	PIPE S25, SS400	AFORZID	SWPA D1.0		SS-5GLT/OMRON	1	M4X10	M5X15	M4X8	M4X15	M4X10	M4X30	M4	M5	<b>M</b>	M5	
NAME	CASE, GRIP(L)	CASE, GRIP(R)	TRIGGER	CASE, BARREL	COVER, STOCK		FRAME, GRIP	FRAME, SCOPE	FRAME, SCOPE	FRAME, SCOPE	FRAME, SCOPE	FRAME, STOCK	FRAME, STOCK	FRAME, STOCK	FRAME, GRIP	FDAME BADDE	SPRING	1	0000050347 SWITCH, MICRO	WIRE	SCREW, CROSS PAN SEMS	SCREW, CROSS PAN SEMS	SCREW, CROSS TRUSS	SCREY, CROSS TRUSS	BOLT, HEX SOCKET CAP	BOLT, HEX SOOKET CAP	WASHER, TOOTHED LOCK	NUT, NYLON	NUT, DOMED CAP	NUT, DOMED CAP	
CODE No.	1 0000059784	2 0000059785		4 0000059781	5 0000060163										9 0000060339	1 0000060340			31 0000050347	32 0000060595	10	20	23	14	15	0 2		60	0	1	
ģ	9	05	03	04	90		=	=	13	14	15	9	1,	18	61 6	3 2	22		31	32	<u></u>	<u> </u>	103	2   3	105	5 5	108	109	110	Ξ	
(			() ()	le le rox		(13)(0)		1/8	(12)(a)	e						(31) (101)		<u>\</u> /	(03)						801						

#### FIG.8 UNIT. MECHANISM ———————————

NOT V																											VA(SV, PV)			SW, PV	14 SW, PV		4 v POINT			D=25, T=2. 3		i	, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,
NO.		N			-   0	u -		Ī	2	7						_				_	4	. 21	0	2	-	_	4 .	4 0	7	9	÷	7	4 4	4	2	2	4 ,	4 ,	-
MATERIAL/SPECIFICATION OTY	S45C/SPCC T3.2	UR HS90	SPCC T3.2	55400	55400	55400 CDCC T1 6	SPCC 12.3	SPCC T2.3	55400		S45C/SPCC T3.2	SS400	SPCC 11.8	SPCC 12.3	SECC T1.6	PVC T0.5		GU2	G_VOL	A/D IN	RI-25	7005	EWS-U0AS25E53	R-MLCF2010	DR-5-15X25	NB-35	M4×10	5x5x10	2	M3x6	M6×15	M4x6	M4×4 M5×8	BS-318	2			M8	
ξ	S.	5	늉	8	33 23	អ្នក	2 62	R	83	뜽	27	86 2	T	T		ď		ತ	ای	À		12	面	œ		T			M12			T			M12	€ :	€ 5	T	7
NAME	1SE	0000060629 RUBBER, STOPPER	0000060637 BRACKET, BEARING	EAR	ACER	0000060636 GEAR	SAME	RAME	10 0000060624 PIN, STOPPER	0000060628 RUBBER, STOPPER	HAFT.	0000060631 GEAR	0000080827 BRACKET, F. METER 0000060640 BRACKET SUSPENSION	16 0000060636 BRACKET, SUSPENSION	0000060633 PLATE, MASK	0000060580 SHEET, COVER	19 0000060481 PCB(J)UNIT	2	E .	IRE	51 0000059792 STOPPER. RUBBER	ARING	0000001723 POTENTIOMETER	JSH	0000059789 SUSPENSION, RUBBER		BOLT, HEX SOCKET CAP	BULI, HEX SUCKET CAP	NUT, NYLON	SCREV, CROSS PAN SEMS	SCREW, CROSS PAN SEMS	SCREW, CROSS TRUSS	SCREW HEX SOCKET SET	SPACER	WASHER, PLAIN	WASHER, PLAIN	VASHER, PLAIN	WASHER, SPRING	לובא, כתסטט דמו טב
ģ	0000060642 BASE	0629 RU	0637 BR	0000060630 GEAR	0625 SP	0000060632 GEAR	0638 FR	0000060639 FRAME	0624 PI	0628 RU	0641 SH	0631 GE	0027 DR	0636 BR	0633 PL	0580 SH	0481 PC	0596 WI	0000060597 WIRE	0602 WI	9792 ST	0000059794 BEARING	1723 PO	HSUB 3679300000	9789 SU	09 G G G G G	8 8	왕 교	3	SC	S	8	S S	망	W	¥ :	¥ :	W S	<u> </u>
	900000	900000	900000	900000	05 0000060625 SPACER	900000	OR 0000060638 FRAME	900000	900000	900000	12 0000060641 SHAFT	13 0000060631 GEAR	00000	900000	900000	900000	900000			22 0000060602 WIRE	000002	00000	00000	00000	000002	HCUB GRANDON GC										011	<u>.</u>		
ż	<u>0</u>	05	03	04	8 8	9 6	3 8	60	유	=	24		4 r	9	17	18	12	ଧ	2 2	8	5	52	53	24	22	치	10	102	104	105	106	107	108	1.0	Ξ	= :	113	114	
													/ / /										(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)																
			(104)	(3)(11)							(a)	(14)			G								ay/o										N	a	2			,	


### ■FIG.9 ASS'Y, TRANSFORMER ———————————

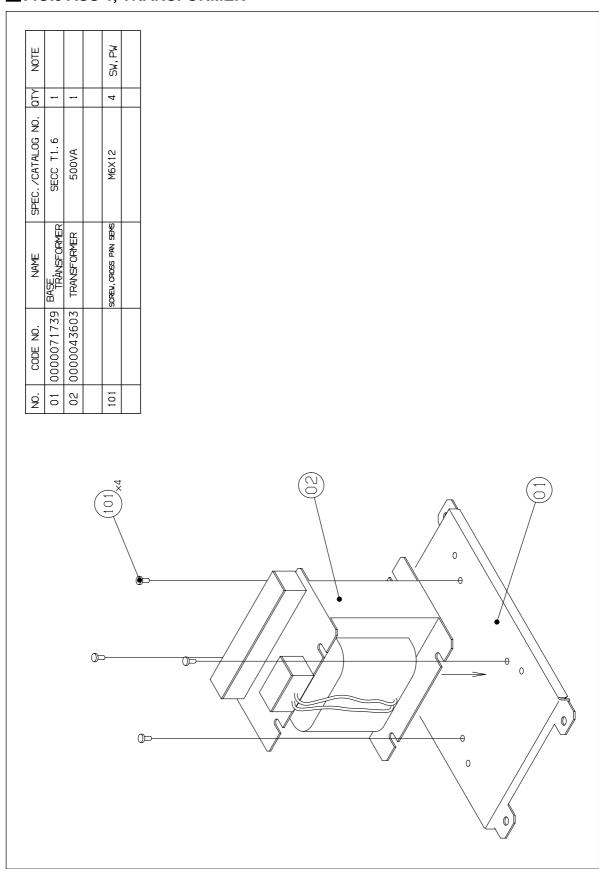


### ■FIG.10 ATTACHMENT -----


1													
;	-	_	_	-	2	2	4	-	-	-	. 2		
		2.0M		Μ			M6×15			60X85 TO 04	230X350 T0.05		
7	EQU				NS-812-W/2	NS-801-W/2							
1	CABLE, AC	CABLE, RF	BOOK, MANUAL	WRENCH, KFY TORX	KEY, LOCK	KEY, LOCK	SCREW, CROSS TRUSS	POP	LABEL, PLAYER	BAG	BAG		
	0000036692	0000006398	0000072498	0000062383	00000005537	0000001676		0000072817	0000072494 LABEL, PLAYER	000000000000000000000000000000000000000	0000004319		
2		⟨\	2	-		9	7	ω	6	Ç			$(\alpha)$
											n)	(	
												(	

## 8-2 Wiring diagram

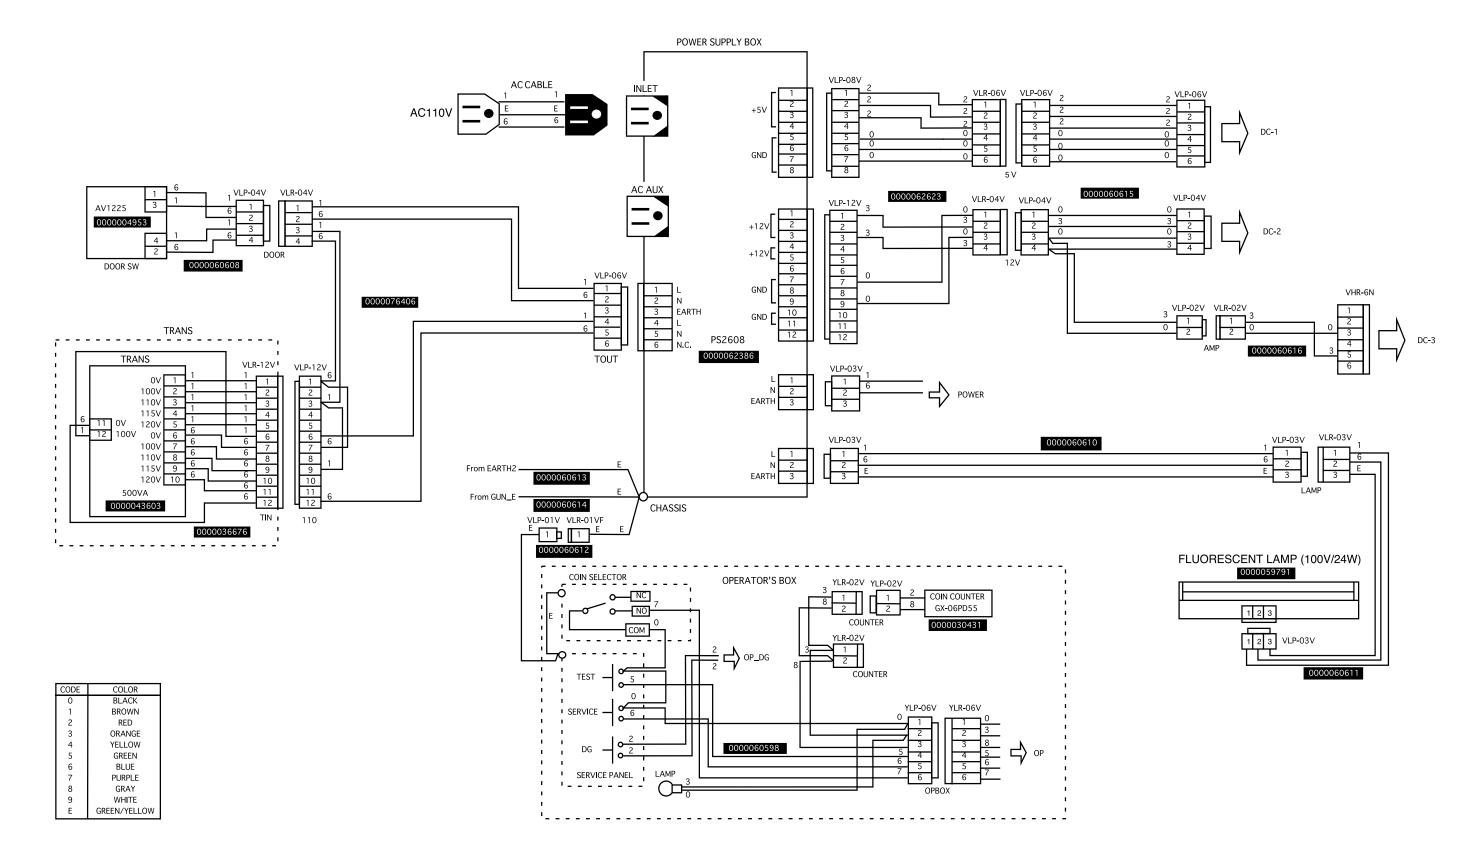

## Wiring diagram

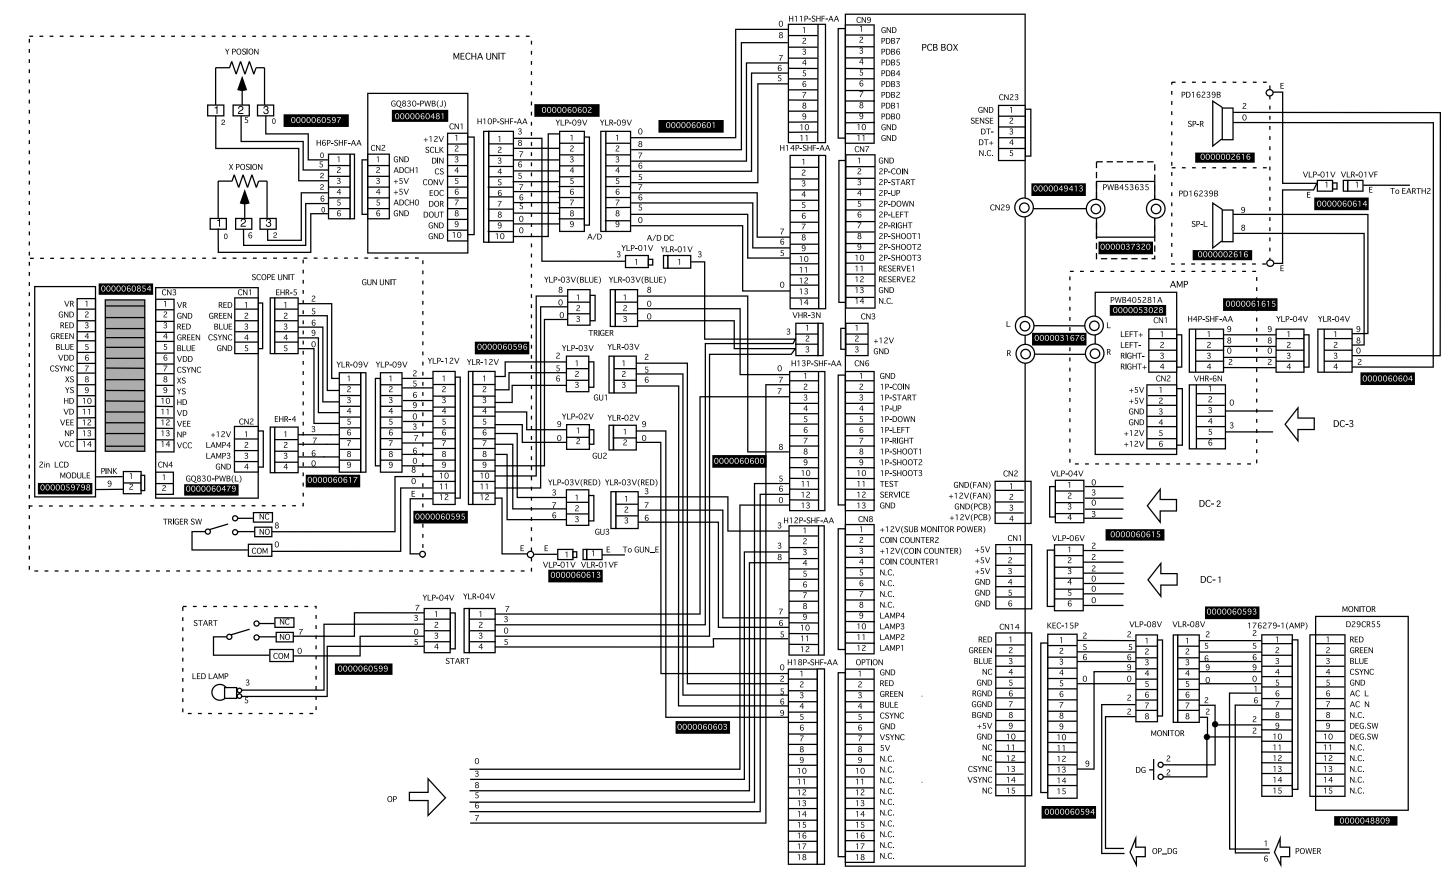

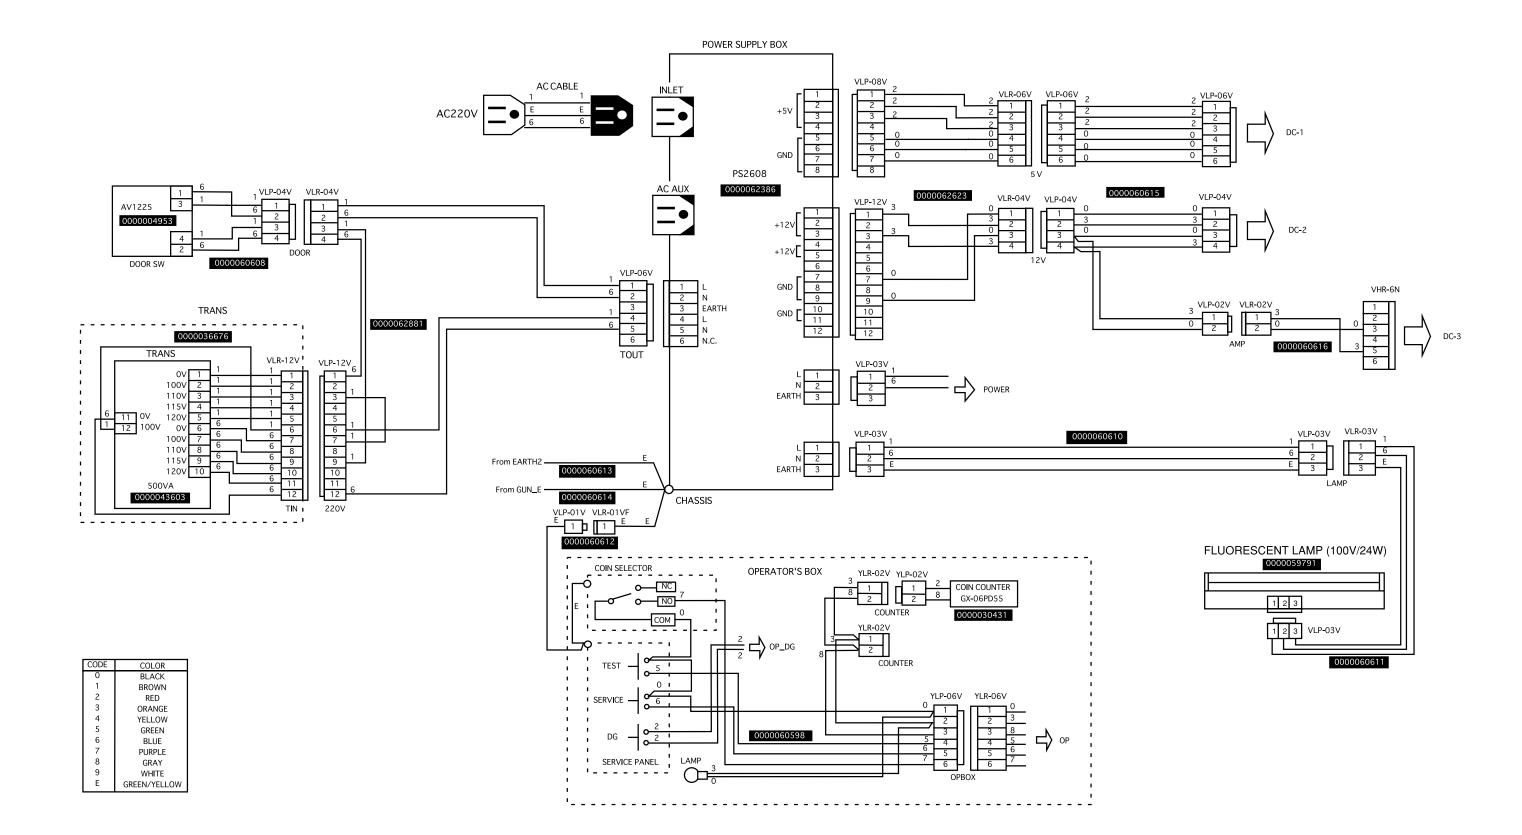

## Wiring diagram

