SERVICE MANUAL



Model 467

CATHODE RAY TUBE RESTORER/ANALYZER





DESCRIPTION

The Model 467 CRT Restorer/Analyzer has been designed to evaluate all Black and White and Color television picture tubes with a high degree of accuracy by using just one simple test.

This tester utilizes solid-state digital multiplexing circuits which will test the three guns in rapid fire sequence for emission, tracking, leakage, focus, and

life tests. The tester also provides improved rejuvenation circuits which can remove shorts, clean and balance the guns, and restore the emission capabilities of the cathode for each gun independently.

Adapters are provided to directly test all common TV picture tubes. Refer to the Set-Up Chart for the correct adapter number and test voltage to use.

SPECIFICATIONS

Tests Performed Emission **Test Voltages** Leakage Heater 0-7 @ 2.0 Amps Tracking (Color Tubes) 7-14 @ 600 Milliamps Life Neg. (-) 30 to Neg. (-) G1 Bias Focus Continuity 100 Volts DC G2 Supply Normal, 0-350 Volts Restore Functions Short Removal DC Gun Cleaning and High, 180-530 Volts Balancing Cathode Rejuvenation Power Requirements 117 Volts AC, 60 Hz, Meters Three, 2-1/2'', 40 Watts D'Arsonval Movement Fuses (Internal) Meter Indications Heater Supply 3/10 Amp, 3AG Slo-Blo Emission 0-2 ma. High Voltage Supply 3/8 Amp, 3AG Slo-Blo **Restoring Current** 0-2 Scale Heater Voltage 0-15 Volts 13-1/2" x 10" x 5-3/4" G1 Bias Voltage 30-100 Volts Power Line Voltage 100-130 Volts Weight 10 lbs

DISASSEMBLY INSTRUCTIONS

To Remove from Case

- Remove four screws holding rubber feet from bottom of case.
- Remove one screw and washer from front of case (below lid catch).
- 3. Lift chassis upward and remove from case.

To Remove Printed Circuit Board Assembly

- 1. Remove all knobs from front panel.
- 2. Remove retaining nuts and washers from the Red G2 and Blue G2 controls, and the Function switch.
- 3. Remove one screw from right front side of front panel cover.

- 4. Partially remove the front panel cover and disconnect wires from each meter.
- 5. Remove neon bulbs N1 thru N8 from lens caps.
- 6. Remove front panel cover.
- Remove two screws holding line cord and output cable assembly bracket to chassis.
- Remove four screws holding printed board to chassis.
- Partially remove printed board from chassis far enough to remove cable connectors A and B from printed board.
- 10. Remove printed board assembly from chassis.

REASSEMBLY

- 1. Place front panel cover in front of chassis in its proper position.
- Position printed board assembly against bottom
 of chassis and connect meter leads to their respective meter. Make sure positive (+) lead and
 negative (-) are connected properly to the meter.
- Refer to schematic (Fig. 3) and printed board layout (Fig. 2) to determine correct lead identification.
- Position front panel cover onto chassis and replace retaining nuts and washers on Red G2 and Blue G2 controls and tighten.

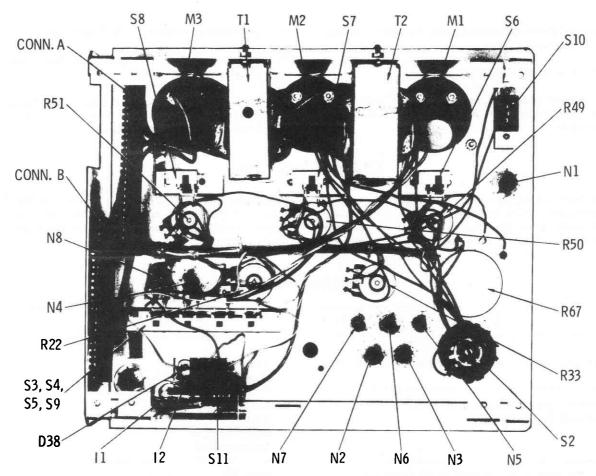


Fig. 1. Rear View of Front Panel - Parts Location.

- 4. Replace screw on front right side of chassis.
- Insert neon bulbs N1 thru N8 into their proper lens cap. Refer to the schematic (Fig. 3) and printed board layout (Fig. 2) to determine correct placement of bulbs.
- 6. Replace connectors A and B onto printed board.
- Place printed board onto chassis and replace retaining nut and washer on Function switch and tighten.
- 8. Replace two screws holding line cord and output cable to chassis.
- Replace four screws holding printed board to chassis.
- 10. Replace all knobs on front panel controls.
- Lower chassis into case and replace screw and washer on front of case and four screws and rubber feet on bottom of case.

CALIBRATION ADJUSTMENTS

Heater Voltage

- 1. Connect Adapter No. 3 to output cable.
- Connect an AC voltmeter to pins 1 and 14 of adapter.
- 3. Set voltmeter to the 10-volt range.
- Connect AC line cord of tester into 117 VAC outlet and set Function control to the SET-UP position.
- 5. Set HTR Range switch to the 4-7 volt position.

- 6. Adjust HTR control to read exactly 6.3 volts on external AC voltmeter.
- Adjust HTR Cal control (R16) on printed board (see Fig. 2 for location) so that HTR voltmeter on tester (Red/B&W) indicates exactly 6.3 volts.

Tracking Range

- 1. Connect Adapter No. 3 to output cable.
- Connect a 100K, 1/2 Watt resistor between pins 2 and 13 of adapter.

- 3. Turn all three G2 controls and Tracking control fully counterclockwise.
- 4. Set G2 switch to NORMAL position.
- Connect AC cord of tester into 117 VAC outlet and set Function switch to SET-UP position until unit warms up.
- 6. Set Function switch to TEST position.
- Adjust Red/B&W G2 control so that Red/B&W meter reads full scale.
- 8. Push tracking button and adjust Min Pulse Cal control (R23) on printed board (see Fig. 2 for location) for minimum reading.

TROUBLESHOOTING

All troubleshooting procedures such as voltage measurements, waveform analysis, and adjustments can be made from the bottom side of the printed circuit board. See Fig. 2 for location of voltage and

waveform test points and the schematic in Fig. 3 for correct voltages and waveforms. Disassembly of the printed board will only be necessary if a component needs replacing.

TROUBLESHOOTING CHART

Symptom		Check
Set inoperative. Power light does not come on.	1.	Fuse F1.
	2.	Function switch S1.
Power light comes on. Blue G2 meter does not	1.	Meter M3.
indicate line voltage.	2.	Function switch S1.
	3.	Rectifier D16.
	4.	Resistor R20.
Heater circuit inoperative on all positions.	1.	Fuse F2.
HTR Set control does not function.	2.	Function switch S1.
	3.	HTR Range switch S2.
	4.	Secondary voltages of transformer T2.
	5.	HTR Cal control R16.
	6.	Rejuvenate switches S6B, S7B, and S8B.
	7.	Cable connector A.
CRT heater lights. Meter does not indicate	1.	Meter M1.
voltage.	2.	HTR Cal control R16.
	3.	-
	4.	Resistors R17, R18, and R69.
No G1 control voltage.	1.	Meter M2.
	2.	G1 control R33.
	3.	Rectifier D18.
	4.	Transformer T1.
	5.	Capacitor C20.
	6.	Resistors R32 and R35.
One G2 control fails to adjust properly.	1.	Collectors of Q2, Q3, and Q4 with scope for typical square wave. A straight line indicates a bad transistor.
	2.	G2 controls R49, R50, and R51.
	3.	Transistors Q5, Q6, Q7.
	4.	Multiplex generator voltages and waveforms.
	5.	IC1A, IC1B, IC2C, and IC2D.
All G2 controls fail to adjust properly.	1.	12BH7A tube V1.
¥ -1	2.	Transistor Q1.
	3.	Rectifiers D1 thru D4.
	4.	Transformer T1.
	5.	Capacitors C11 and C12.
	6.	Resistors R41 and R43.
	7.	Multiplex generator waveforms.
	8.	IC1A, IC1B, IC2C, and IC2D.

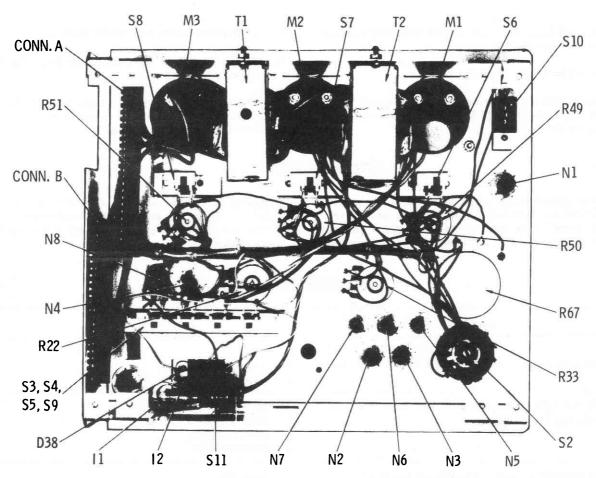


Fig. 1. Rear View of Front Panel - Parts Location.

- 4. Replace screw on front right side of chassis.
- Insert neon bulbs N1 thru N8 into their proper lens cap. Refer to the schematic (Fig. 3) and printed board layout (Fig. 2) to determine correct placement of bulbs.
- 6. Replace connectors A and B onto printed board.
- Place printed board onto chassis and replace retaining nut and washer on Function switch and tighten.
- 8. Replace two screws holding line cord and output cable to chassis.
- Replace four screws holding printed board to chassis.
- 10. Replace all knobs on front panel controls.
- Lower chassis into case and replace screw and washer on front of case and four screws and rubber feet on bottom of case.

CALIBRATION ADJUSTMENTS

Heater Voltage

- 1. Connect Adapter No. 3 to output cable.
- Connect an AC voltmeter to pins 1 and 14 of adapter.
- 3. Set voltmeter to the 10-volt range.
- Connect AC line cord of tester into 117 VAC outlet and set Function control to the SET-UP position.
- 5. Set HTR Range switch to the 4-7 volt position.

- Adjust HTR control to read exactly 6.3 volts on external AC voltmeter.
- Adjust HTR Cal control (R16) on printed board (see Fig. 2 for location) so that HTR voltmeter on tester (Red/B&W) indicates exactly 6.3 volts.

Tracking Range

- 1. Connect Adapter No. 3 to output cable.
- Connect a 100K, 1/2 Watt resistor between pins
 2 and 13 of adapter.

- 3. Turn all three G2 controls and Tracking control fully counterclockwise.
- 4. Set G2 switch to NORMAL position.
- Connect AC cord of tester into 117 VAC outlet and set Function switch to SET-UP position until unit warms up.
- 6. Set Function switch to TEST position.
- Adjust Red/B&W G2 control so that Red/B&W meter reads full scale.
- 8. Push tracking button and adjust Min Pulse Cal control (R23) on printed board (see Fig. 2 for location) for minimum reading.

TROUBLESHOOTING

All troubleshooting procedures such as voltage measurements, waveform analysis, and adjustments can be made from the bottom side of the printed circuit board. See Fig. 2 for location of voltage and

waveform test points and the schematic in Fig. 3 for correct voltages and waveforms. Disassembly of the printed board will only be necessary if a component needs replacing.

TROUBLESHOOTING CHART

Symptom		Check	
Set inoperative. Power light does not come on.	1.	Fuse F1.	
noporative. Towar right does not come on.	2.	Function switch S1.	
Power light comes on. Blue G2 meter does not	1.	Meter M3.	
indicate line voltage.	2.	Function switch S1.	
	3.	Rectifier D16.	
	4.	Resistor R20.	
Heater circuit inoperative on all positions.	1.	Fuse F2.	
HTR Set control does not function.	2.	Function switch S1.	
	3.	HTR Range switch S2.	
	4.	Secondary voltages of transformer T2.	
	5.	HTR Cal control R16.	
	6.	Rejuvenate switches S6B, S7B, and S8B.	
	7.	Cable connector A.	
CRT heater lights. Meter does not indicate	1.	Meter M1.	
voltage.	2.	HTR Cal control R16.	
	3.	Diode D30.	
	4.	Resistors R17, R18, and R69.	
No G1 control voltage.	1.	Meter M2.	
	2.	G1 control R33.	
	3.	Rectifier D18.	
	4.	Transformer T1.	
	5.	Capacitor C20.	
	6.	Resistors R32 and R35.	
One G2 control fails to adjust properly.	1.	Collectors of Q2, Q3, and Q4 with scope for	
		typical square wave. A straight line indicate	
	_	a bad transistor.	
	2.	G2 controls R49, R50, and R51.	
	3.	Transistors Q5, Q6, Q7.	
	4.	Multiplex generator voltages and waveforms.	
	5.	IC1A, IC1B, IC2C, and IC2D.	
All G2 controls fail to adjust properly.	1.	12BH7A tube V1.	
	2.	Transistor Q1.	
	3.	Rectifiers D1 thru D4.	
	4.	Transformer T1.	
¥	5.	Capacitors C11 and C12.	
	6.	Resistors R41 and R43.	
	7.	Multiplex generator waveforms.	
	8.	IC1A, IC1B, IC2C, and IC2D.	

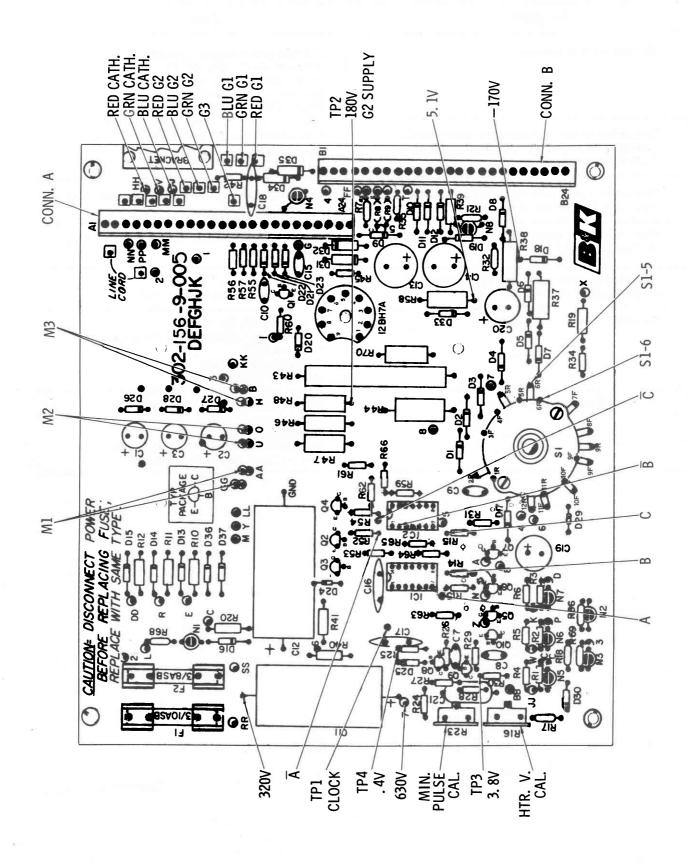


Fig. 2. Printed Circuit Board Layout - Component Side.

TROUBLESHOOTING CHART(cont'd.)

Symptom		Check
No indication of leakage.	1.	170 volt power supply voltages.
	2.	
	3.	
	4.	Multiplex generator waveforms.
	5.	IC1A, IC1B, IC2C, IC2D.
One meter moves upscale when other two G2 controls are turned up. Function switch in CUT-OFF position.	1.	Transistors Q5, Q6, or Q7 (the one switching that meter).
One meter reads noticeably higher than other two. Function switch in CUT-OFF position.	1.	Transistors Q5, Q6, or Q7 (the one switching that meter).
One meter falls noticeably lower than other two in Tracking test.	1.	Transistors Q5, Q6, or Q7 (the one switching that meter).
Tracking control works, but in reverse di-	1.	Transistor Q10.
rection and/or not with full range.	2.	Tracking Range adjustment (R23).
Tracking circuit inoperative.	1.	Transistor Q8, Q9, or Q10.
	2.	Voltages and components in clock circuit.
	3.	IC2A and IC2B.
	4.	Tracking control R22.
	5.	Min Pulse Cal control R23.
Restore Functions inoperative.	1.	270 volt power supply voltages
	2.	Ballast tubes I1 and I2.
	3.	
	4.	Rejuvenate switches S6A, S7A, and S8A.
	5.	Remove Short switch S4A and S4B.

PARTS LIST

Ref.

No.

NOTE:

Standard value resistors and capacitors are not listed. Minimum charge \$5.00 per invoice. Orders will be shipped C.O.D. unless previous open account arrangements have been made or

remittance accompanies order. Advance remittance must cover postage or express charges. Specify serial number when ordering replacement parts.

Part

No.

Ref. No.	Part No.	Description
		TRANSISTORS
Q1 thru Q7 Q8, Q9,	176-033-9-001	2N5550, NPN, Silicon
20, 43, 210	176-052-9-001	PN3643, NPN, Silicon
		IC CIRCUITS
IC1 IC2	307-010-9-001 307-015-9-001	7473, Dual J-K Flip-Flop 7400, Quad Two Input NAND Gate

R23	008-071-9-001	250K, ±30%, Trimpot, Min. Pulse Cal.
R33	008-135-9-001	50K, ±10%, 1/2 Watt, Set G1 Control
R39	006-102-9-479	4.7Ω , $\pm 10\%$, $1/2$ Watt, Wirewound
R43	003-010-6-303	30K, 10 Watt, Wirewound Glass
R49	008-135-9-001	50K, ±10%, 1/2 Watt, Red G2 Control
R50	008-135-9-001	50K, ±10%, 1/2 Watt, Green G2 Control
R51	008-135-9-001	50K, ±10%, 1/2 Watt, Blue G2 Control
R67	009-029-9-001	3Ω, ±10%, 12 Watt, Wirewound, HTR
		Adj. Control

Description


DIODES AND RECTIFIERS		
D1	1	
thru	151-018-9-001	Rectifier, 600 PIV, 1 Amp
D19		
D20		
thru	151-038-9-001	1N4148, Diode, Silicon
D29	× .	
D30	150-008-9-001	1N67A, Diode Germanium
D31	152-056-9-001	Zener, 56V, ±10%, 1 Watt
D32	152-014-9-001	Zener, 24V, ±5%, 1 Watt
D33	152-030-9-001	Zener, 5,1V, ±5%, 1 Watt
D34	152-058-9-001	Zener, 51V, ±10%, 1 Watt
D35	152-058-9-001	Zener, 91V, ±10%, 1 Watt
D36	152-056-9-001	Zener, 56V, ±10%, 1 Watt
D37	152-056-9-001	Zener, 56V, ±10%, 1 Watt

S1	083-165-9-001	5-Position Rotary, Function
S2	083-091-9-001	6-Position Rotary, Htr Range
S3,4,		
5,9	088-020-9-001	4-Station Pushbutton Ass'y., Tracking,
		Life, Focus, Remove Shorts
S6	088-021-9-001	DPDT Momentary, Red-B&W Rej.
S7	088-021-9-001	DPDT Momentary, Green Rej.
S8	088-021-9-001	DPDT Momentary, Blue Rej.
S10	084-001-9-001	SPDT Slide, G2 High-Normal
S11	084-001-9-003	DPDT Slide, Rejuvenate, Clean-Balance

MISCE LLANEOUS


	CONTR	OLS AND RESISTORS
R7	002-104-8-249	2.4Ω, ±5%, 1/4 Watt, Carbon
R8	002-104-8-249	2.4Ω, ±5%, 1/4 Watt, Carbon
R9	002-104-8-249	2.4Ω, ±5%, 1/4 Watt, Carbon
R10	002-104-8-249	2.4Ω, ±1%, 1/2 Watt, Carbon
R11	002-017-9-001	$316\Omega, \pm 1\%, 1/2$ Watt, Carbon
R12	002-017-9-001	316Ω, ±1%, 1/2 Watt, Carbon
R16	008-058-9-001	10K, ±20%, Trimpot, HTR Cal.
R19	002-032-9-001	499K, ±10%, 1/2 Watt, Carbon Film
R20	002-031-9-001	340K, ±10%, 1/2 Watt, Carbon Film
R22	008-135-9-001	50K, ±10%, 1/2 Watt, Tracking Control

_		
F1	190-004-9-001	Fuse, 3/10A, 250V, 3AG Slo-Blo
F2	190-251-3-308	Fuse, 3/8A, 250V, 3AG Slo-Blo
11	400-034-9-001	Bulb, 230V. 10 Watt
12	400-034-9-001	Bulb, 230V, 10 Watt
N1		
thru	401-016-9-001	Bulb, Neon, NE-2
N8		
T1	065-098-9-001	Transformer, Power
T2	062-004-9-001	Transformer, Filament
M1	320-059-9-001	Meter, Heater Volts
M2	320-060-9-001	Meter, G1 Volts
мз	320-058-9-001	Meter, Line Volts
V1	236-120-2-087	12BH7A, Tube
	420-001-9-009	Line Cord
	523-107-9-001	Case Assembly
1	751-005-9-008	Knob, Function
	751-112-9-001	Knob, Small (6 Used)
1	751-115-9-001	Knob, Heater Range
1	384-016-9-006	Knob, Pushbutton
1	750-003-9-001	Lens Cap, Red (2 Used)
1	750-003-9-002	Lens Cap, Clear (7 Used)
1	381-002-9-001	Rubber Foot
1	752-007-9-001	Socket, Lamp
1	758-021-9-001	Vinyl Divider Flap
	763-027-9-001	Hinge Wire, Flap
	523-103-9-001	Adapter Storage Assembly
		Output Cable Assembly

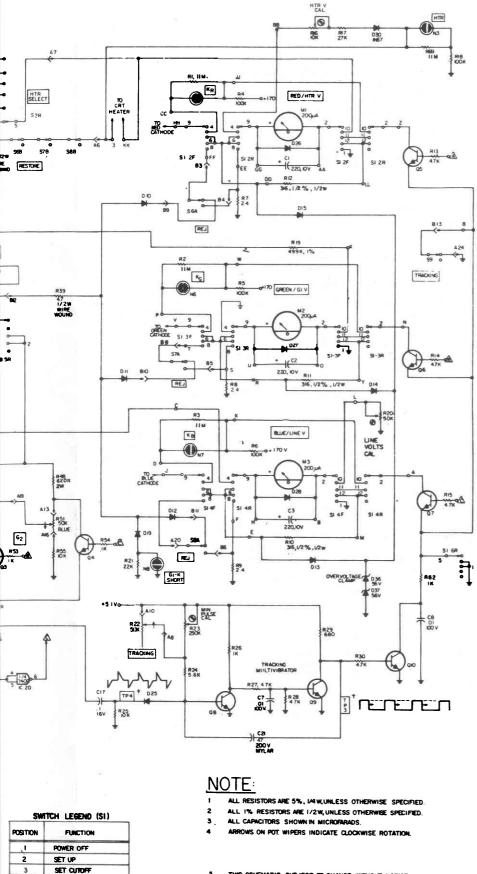

CAUTION: THIS UNIT CONTAINS HIGH VOLTAGE SUPPLIES, BE CAUTIOUS WHEN SERVICING



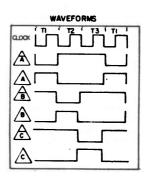

OUTPUT CABLE

FUNCTION	WIRE	PIN NO
HTR	BLK	1
HTR	BRN	2
GI RED	ĞRY	3
GI GRN	TAN	4
GI BLU	PUR	5
K RED	RED	6
K GRIN	GRN	7
K BLU	8LU	8
G2 RED	ORG	9
G2 GRN	YEL	Ю
GS BETT	PINK	11
G3 / G4	WHT	12


CIRCUIT	SYMBOL LEGEND
LAST NUMBER USED	NOT USED
C22	4
0.36	16
12	
IC2	
M3	
NB	
910	
R72	
\$11	
F2	
T2	

- THIS SCHEMATIC SUBJECT TO CHANGE WITHOUT NOTICE.
- Δ MO $\bar{\Delta}$ INDICATE LOGIC SYMBOLS
- CIRCUIT GND A CHASSIS

Fig. 3. Model 467 Schematic.

TEST

RESTORE

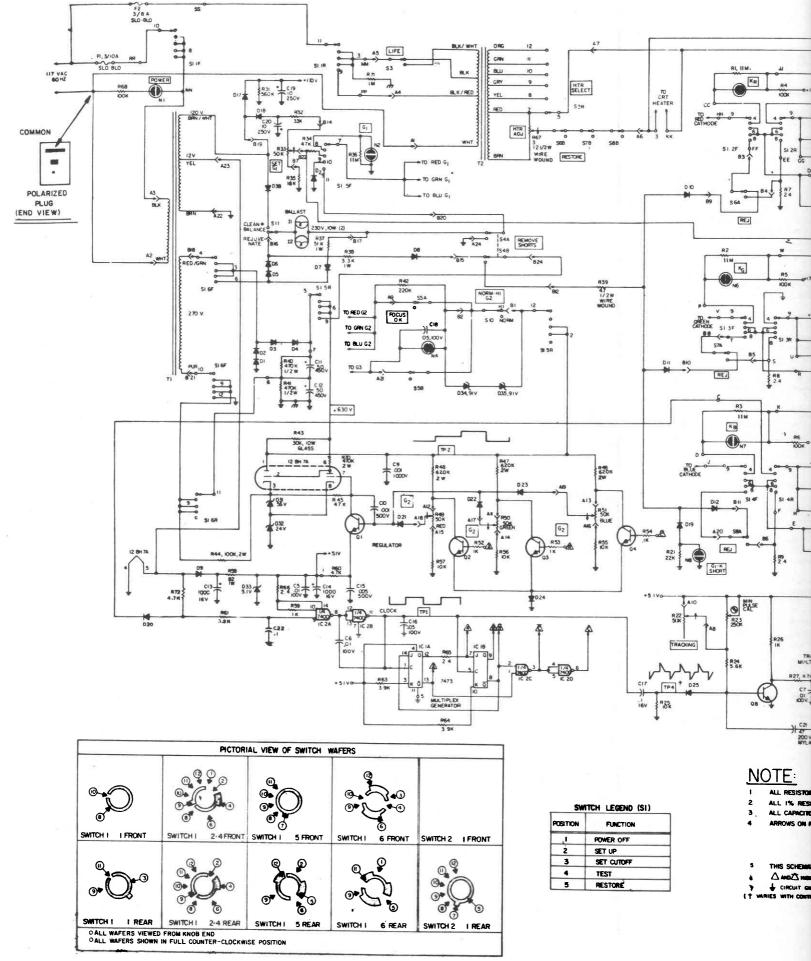

7

Fig. 3. Model 467 Schematic.