


**Bally/Midway's**

# SOLAR FOX


## Parts & Operating Manual



No. 982 UPRIGHT

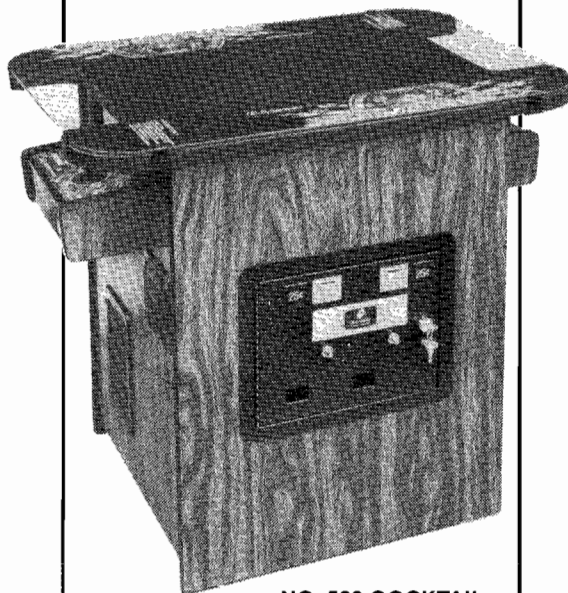

NO. 580 COCKTAIL

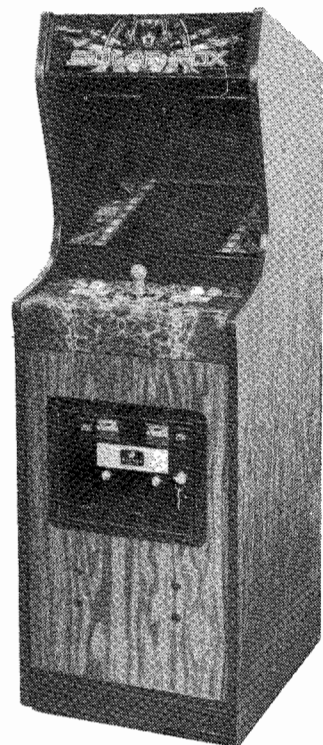

NO. 578 MINI

*Bally*

**MIDWAY MFG. CO.**

10750 W. Grand Avenue  
Franklin Park, Illinois 60131  
U.S.A.



Phone: (312) 451-1360

Cable Address: MIDCO

Telex No.: 72-1596

**WARNING**

**THIS GAME MUST BE GROUNDED. FAILURE TO DO SO MAY RESULT IN DESTRUCTION TO ELECTRONIC COMPONENTS.**

**WARNING:** This equipment Generates, Uses and can Radiate Radio Frequency Energy and if not installed and used in accordance with the Instructions Manual, may cause interference to Radio Communications. As temporarily permitted by Regulation it has not been tested for compliance to Subpart J or Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference. Operation of this equipment in a Residential Area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

ELECTRICAL BULLETIN: FOR ALL APPARATUS COVERED BY THE CANADIAN STANDARDS ASSOCIATION (CSA) STANDARD C22.2 NO. 1, WHICH EMPLOYS A SUPPLY CORD TERMINATED WITH A POLARIZED 2-PRONG ATTACHMENT PLUG.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR. UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

***Bally*/MIDWAY**  
T.M.

*Invites You To Use*

**OUR TOLL FREE NUMBERS FOR  
SERVICE INFORMATION CONCERNING THIS GAME, OR ANY  
OTHER BALLY/MIDWAY™ GAME YOU NOW HAVE ON LOCATION.**

**CALL US FOR PROMPT, COURTEOUS  
ANSWERS TO YOUR PROBLEMS.**

**Continental U.S. 800-323-7182  
Illinois Only 1-800-942-0497**

© COPYRIGHT MCMLXXXII BY BALLY/MIDWAY MFG. CO. ALL RIGHTS RESERVED.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED BY ANY MECHANICAL, PHOTOGRAPHIC, OR ELECTRONIC PROCESS, OR IN THE FORM OF A PHONOGRAPHIC RECORDING, NOR MAY IT BE TRANSMITTED, OR OTHERWISE COPIED FOR PUBLIC OR PRIVATE USE, WITHOUT PERMISSION FROM THE PUBLISHER. THIS MANUAL IS FOR SERVICE USE ONLY, AND NOT FOR GENERAL DISTRIBUTION. FOR PERMISSION REQUESTS, WRITE: MIDWAY MFG. CO., 10750 W. GRAND AVE., FRANKLIN PARK, IL 60131

Printed in U.S.A.

## TABLE OF CONTENTS

DESCRIPTION	PAGE
<b>I. Introduction</b> .....	1-1
<b>II. Location and Setup</b>	
Inspection .....	2-1
Installation .....	2-1
Self-Test .....	2-4
Game Volume Adjustment Control .....	2-4
Option Settings .....	2-4
<b>III. Game Operation</b>	
Self-Test Mode .....	3-1
Attract Mode .....	3-6
Ready to Play Mode .....	3-7
Play Mode .....	3-8
Two Player Operation .....	3-11
<b>IV. Maintenance and Repair</b>	
Cleaning .....	4-1
Fuse Replacement .....	4-1
Opening the Control Panel .....	4-2
Removal of the Main Display Glass & T.V. Bezel .....	4-4
T.V. Monitor Replacement .....	4-5
Printed Circuit Board Replacement .....	4-8
Opening the Attraction Panel .....	4-10
<b>V. Illustrated Parts Breakdown</b>	
Transformer Board Assy. — Parts List .....	5-1
Card Rack Assy. — Parts List .....	5-1
No. 982 — Solar Fox Upright — Front .....	5-2
No. 982 — Solar Fox Upright — Front — Parts List .....	5-3
No. 982 — Solar Fox Upright — Rear Access .....	5-4
No. 982 — Solar Fox Upright — Rear Access — Parts List .....	5-5
125 VA Filter Assy. — Parts List .....	5-6
125 VA Filter Assy. ....	5-7
No. 578 — Solar Fox Mini — Front .....	5-8
No. 578 — Solar Fox Mini — Front — Parts List .....	5-9
No. 578 — Solar Fox Mini — Rear Access .....	5-10
No. 578 — Solar Fox Mini — Rear Access — Parts List .....	5-11
No. 580 — Solar Fox Cocktail — Front .....	5-12
No. 580 — Solar Fox Cocktail — Front — Parts List .....	5-13
No. 580 — Solar Fox Cocktail — Interior Access .....	5-14
No. 580 — Solar Fox Cocktail — Interior Access — Parts List .....	5-15
Speaker Board Assy. — Upright — Parts List .....	5-16
Speaker Board Assy. — Upright .....	5-17
Control Assy. — Upright .....	5-18
Control Assy. — Upright — Parts List .....	5-19
Control Assy. — Mini & Cocktail .....	5-20
Control Assy. — Mini & cocktail — Parts List .....	5-21
Front Door Assy. — U.S.A. 25¢ .....	5-22
Front Door Assy. — U.S.A. 25¢ — Parts List .....	5-23
Solar Fox — All Versions — Control Switch Assy. ....	5-24
Solar Fox — All Versions — Control Switch Assy. — Parts List .....	5-25

# TABLE OF CONTENTS

(Continued)

DESCRIPTION	PAGE
<b>VI. Technical Troubleshooting</b> .....	6-1
Introduction .....	6-1
General Suggestions .....	6-1
Harness Component Troubleshooting .....	6-1
Transformer and Line Voltage Problems .....	6-2
A Glossary of Microprocessor Terms .....	6-3
Introduction to the Z80 CPU .....	6-3
General Purpose Registers .....	6-4
Arithmetic and Logic Unit (ALU) .....	6-4
Introduction Register and CPU Control .....	6-4
Z80 CPU Pin Description .....	6-4
MCR II System P.C. Board Jumper Options .....	6-7
<b>VII. Coin Door Maintenance</b> .....	7-1
Metal Coin Acceptor Mechanisms .....	7-1
Plastic Coin Acceptor Mechanisms .....	7-3
<b>VIII. T.V. Monitor Manual</b> .....	8-1
Introduction .....	8-1
Symptom Diagnosis .....	8-2
Guide to Schematic Symbols .....	8-3
Troubleshooting .....	8-5
Theory of Operation .....	8-6
Differences Between Monitors .....	8-8
Controls You May Not Touch .....	8-9
Parts Interchangeability .....	8-9
Wells Gardner Monitor Schematic — 19" .....	8-10
Wells Gardner Monitor Replacement Parts List .....	8-11
Electrohome Monitor Schematic — 19" .....	8-13
Electrohome Monitor Replacement Parts List .....	8-14
Electrohome Monitor Schematic — 13" .....	8-18
Electrohome Monitor Replacement Parts List .....	8-19
<b>IX. Schematics &amp; Wiring Diagrams</b> .....	
Wiring Diagram — Upright .....	9-1
Wiring Diagram — Mini .....	9-2
Wiring Diagram — C/T .....	9-3
125 VA Power Supply (B Version) — Component Layout .....	9-4
125 VA Power Supply (B Version) — Schematic .....	9-5
125 VA Power Supply (C Version) — Component Layout .....	9-6
125 VA Power Supply (C Version) — Schematic .....	9-7
Dual Power Amp P.C.B. — Component Layout .....	9-8
Dual Power Amp P.C.B. — Schematic .....	9-9
C.P.U. Board — Component Layout .....	9-10
C.P.U. Board — Schematic .....	9-11
Video Generator Board — Component Layout .....	9-12
Video Generator Board — Schematic .....	9-13
Sound I/O Board (For G Version) — Component Layout .....	9-14
Sound I/O Board (For G Version) — Schematic .....	9-15
Sound I/O Board (For K & L Version) — Component Layout .....	9-16
Sound I/O Board (For K & L Version) — Schematic .....	9-17

## TABLE OF FIGURES

FIGURE	PAGE
1-1 Assigned Point Values .....	1-2
2-1 Location of Serial No., Interlock Switch, On/Off Switch, & Major Sub-Assys. ....	2-2
2-2 Major Sub-Assys. (Cont. from Fig. 2-1) .....	2-3
2-3 Interlock Switch Operation .....	2-3
2-4 Location of Volume Control .....	2-4
2-5 Option Switch Locations .....	2-4
2-6 Option Switch Settings .....	2-5
3-1 Self-Test — Menue .....	3-2
3-2 Self-Test — Sounds .....	3-2
3-3 Self-Test — Player Inputs .....	3-3
3-4 Self-Test — Bookkeeping .....	3-3
3-5 Self-Test — Time Report .....	3-3
3-6 Self-Test — Score Report .....	3-3
3-7 Self-Test — Setup Options .....	3-4
3-8 Self-Test — Channel Test .....	3-4
3-9 Self-Test — Preset .....	3-4
3-10 Location of Hardware Master Reset Switches .....	3-5
3-11 High Score/Initial Mode .....	3-10
3-12 Rankings Display .....	3-10
4-1 Location of Fuses .....	4-1
4-2 Opening the Control Panel — Upright & Mini .....	4-2
4-3 Opening the Cocktail Game .....	4-3
4-4 Removing the Control Panel — Cocktail .....	4-3
4-5 Removing the Main Display Glass & T.V. Bezel — Upright .....	4-4
4-6 Removing the Main Display Glass & T.V. Bezel — Mini .....	4-4
4-7 Removing the Top Glass & T.V. Bezel — Cocktail .....	4-5
4-8 Removing the Monitor — Upright .....	4-6
4-9 Removing the Monitor — Mini .....	4-6
4-10 Opening the Cocktail Game .....	4-7
4-11 Removing the Monitor — Cocktail .....	4-7
4-12 Removing P.C.B.s .....	4-8
4-13 Removing P.C.B.s from Card Rack .....	4-9
4-14 Opening the Attraction Panel — Upright .....	4-10
4-15 Replacing Fluorescent Tube Starter .....	4-11
4-16 Replacing Black Light .....	4-11
4-17 Opening the Attraction Panel — Mini .....	4-12
7-1 Removing and Replacing the Coin Acceptor .....	7-1
7-2 Cleaning the Metal Coin Acceptor .....	7-2
7-3 Lubricating the Metal Coin Acceptor .....	7-2
7-4 Opening the Plastic Coin Acceptor .....	7-3
7-5 Changing the Plastic Coin Acceptor to Accept American or Canadian Quarters .....	7-4

# Solar Fox

## IMPORTANT NOTE

DO NOT plug in your new game yet. Before you do anything to your game, we recommend that you read SECTIONS I and II of this manual completely. It will not take more than a few minutes and it may be very helpful.

## I. Introduction

SOLAR FOX is a one or a two player game. There are three models: the "UPRIGHT", "MINI", and "COCKTAIL TABLE". The Upright and Mini models have been designed for either **RIGHT** or **LEFT** hand use. When the two player mode is selected on the Upright or Mini model, the players take turns at the controls to take the Ship through the game course. If you have purchased the Cocktail Table model of this game, the rules of play are the same. The only **difference** is that in the two player mode of the Cocktail Table game, the picture flips to face you when it's your turn.

When playing this game, the Ship is under **YOUR** control. **YOU** make it move back and forth or up and down on the screen to eliminate the Fuzors, Pulzors, and to disable the Yellow Thrustors while building up your score. To disable all 4 Thrustors at once, you must either run over or shoot the Freezor as it works its way across the screen.

These Fuzors are displayed in various patterns across the entire playing field of the screen. Each pattern is called a "rack". The first rack is made up of Fuzors arranged in the shape of a large number "0". The second and all future racks are made up of Fuzors arranged in evermore difficult patterns.

At random times during each rack, a special blinking Pulzor will appear for a short time. If you eliminate this special blinking Pulzor before it disappears, you earn **BONUS POINTS**. (The value of these bonus points is printed out on the screen as you eliminate the Pulzor.)

ALL of the above must be accomplished while avoiding being hit by one of the many small Vortices shot at you by each of the four Thrustors. One of these Thrustors patrols **EACH** edge of the monitor screen: left, right, top, and bottom. This will really test your skill because you can have a lot of Vortices coming at you from **four DIFFERENT directions** at the **SAME time**.

As your skill level increases and you work your way into the higher and higher racks: the Fuzors must be run over twice by your Ship before they are eliminated, their pattern is more varied, the number of Vortices shot at you is increased, the speed and distance the Vortices travel is increased, and the Thrustor's aim gets better.

Bonus Ships are awarded to you periodically throughout the game as you reach or pass certain preselected rack numbers. Each item in the game that can be scored on has an assigned point value as listed in Figure 1-1.

# Major Features

There are several major features in your SOLAR FOX game: 1) The UPRIGHT and MINI models have been designed for ease of play by EITHER **RIGHT HANDED** or **LEFT HANDED** players; 2) You can select the level of difficulty at which you want to play (NOVICE or EXPERT); 3) You can vary the speed at which your Ship travels through the game course by pressing **AND HOLDING DOWN** the SPEED CONTROL Button; 4) Fuzor value increases by racks. See Figure 1 for details. 5) The game has OWNER/OPERATOR selected variable levels of difficulty so game play can be tailored to player skill level in his area; 6) a bonus system which allows the player to skip a rack while receiving all the points for the "skipped" rack when the player successfully completes the current rack

**BEFORE** a time limit runs out; 7) There is a new and easy to use diagnostic package featuring: a complete ROM/RAM check with bad chip location information read out on the monitor screen; the capability to check each of the game's 15 different sounds **INDIVIDUALLY**; provision for checking each control and switch **SEPARATELY**; a full function Bookkeeping mode; an entire options list that can be set from the front console with **NO NEED** to crawl inside the back of the cabinet and look for tiny switches located on P.C. boards; a sound system test; and a "PRE-SET" category that can return **ALL** information in the Bookkeeping mode to zero and/or all operator selected options back to factory recommended settings; and 8) The game is equipped with a rechargeable battery so that it won't forget where it was the night before at closing — even if you turn it off. It will "remember" this information for up to two weeks.

# Game Objective

The object of the game is to **HAVE FUN** while constantly increasing your skill as you play, running over and/or shooting as many scoreable objects as possible each time to get the highest score.

DESCRIPTION	POINTS AWARDED	NOTES
VORTEX	300 POINTS EACH	
ENERGY FIELDS	100 POINTS EACH	<b>ONLY WHEN SHOT BY YOUR SHIP. NO POINTS ARE AWARDED IF YOU RUN INTO ONE WITH YOUR SHIP</b>
FUZOR	30 POINTS EACH	INCREASES BY 10 POINTS EVERY 3 RACKS <b>MAXIMUM VALUE 90 POINTS</b>
PULZOR	200 TO 800 POINTS EACH	CALLED OUT ON SCREEN AT TIME OF AWARD
RED THRUSTOR YELLOW THRUSTOR	100 POINTS EACH TIME 200 POINTS EACH TIME	
SKIPRACK TIMER BONUS POINTS	100 POINTS FOR EACH SQUARE LEFT ON IT AT END OF RACK	"BEGINNING TIME" VARIES DEPENDING ON DIFFICULTY OF RACK PATTERN. <b>THIS DOES NOT APPLY IN CHALLENGE RACK</b>
CHALLENGE RACK BONUS POINTS	1000 POINTS FOR CHALLENGE RACK NO. 1	INCREASES BY 600 POINTS FOR EACH ADDITIONAL CHALLENGE RACK CLEARED UNTIL YOU REACH NO. 12 @ 7,600 POINTS. THIS THEN REPEATS.

Figure 1-1 Assigned Point Values

# II. Location and Setup

## INSPECTION:

1. Remove the game from its shipping crate.
2. Inspect the entire outside of it for any signs of damage.
  - Any scratches?, dents?, cracks?
  - Any broken controls?
  - Any broken glass or plastic?
  - Just look it over closely and make a note of any signs of damage.
3. Remove the shipping cleats from the bottom of the cabinet.
4. Install the four levelers, one at each corner of the cabinet.
  - Level the cabinet.
5. Open the cabinet and inspect the inside of the game for any signs of damage. See Figure 2-1.
  - Also check to make sure all plug-in connectors on the wire harness are firmly seated.

**NOTE:** ALL connectors or plugs are keyed so they will only go together when all pins are properly lined up.

- Replug any connectors found unplugged. **DO NOT FORCE PLUGS ONTO CONNECTORS. DO NOT FORCE PLUGS TOGETHER.** If it won't go on easily, assuming the keys are lined up, it either does not belong there or is damaged.
  - Make sure all printed circuit boards (P.C.B.'s) are firmly seated in their connectors. See Figure 2-1. These connectors are also keyed. The P.C.B.'s will only go into them one way without being damaged.
  - Note the location of the game's serial number. See Figure 2-1.
  - Check all major subassemblies to be sure they are mounted securely. These are called out in Figures 2-1 & 2-2.
    - Power supply.
    - Control panel(s).
    - T.V. monitor.
    - Other P.C.B.'s and/or P.C.B. rack, etc.
    - Power supply filter assembly.
    - Transformer board assembly.
6. Make a note of any problems that can't be easily corrected.
  7. Call your distributor and/or service man about your problem list.

## INSTALLATION:

### 1. Location requirements:

- Power:**
  - Domestic 110 V @ 60 Hz
  - Foreign 200 V to 240 V @ 50 Hz
- Temperature:** 32° to 100° F (0° to 38° C)
- Humidity:** Not over 95% relative
- Space required:**
  - Upright 25" x 32" (63 x 81cm)
  - Mini 20" x 24" (50 x 60cm)
  - Cocktail 32" x 22" (81 x 55cm)
- Game height:**
  - Upright 70" (175cm)
  - Mini 61" (153cm)
  - Cocktail 29" (73cm)

### 2. Voltage Selection:

Your game is designed to work properly on the line voltage where you are located. Check your line voltage with a meter to determine what its value is. Then check the power input wires to the main power supply transformer on your game to be sure they are connected to taps which correspond to your line voltage value.

If the power input wires to the main power supply transformer are not connected to taps which correspond to your local line voltage, move them to the proper taps.

If the line voltage in your area falls outside the upper or lower limits of the range of inputs covered by the main power supply transformer, **DO NOT PLUG YOUR GAME IN** until you have talked with your distributor and/or service man and obtained a solution to this problem. Otherwise you could damage your game.

### 3. Interlock and power ON/OFF switches. See Figure 2-1.

- To help prevent the possibility of getting an electric shock while working inside the game cabinet, interlock switches have been installed at each cabinet access door (this **DOES NOT** include the coin door in the Upright and Mini models).
- When any access door is opened, the interlock switch installed there turns off all power to the game.
- Check each interlock switch for proper operation.

After checking the line voltage in your area and determining that the input wires to the main power supply transformer of your game are

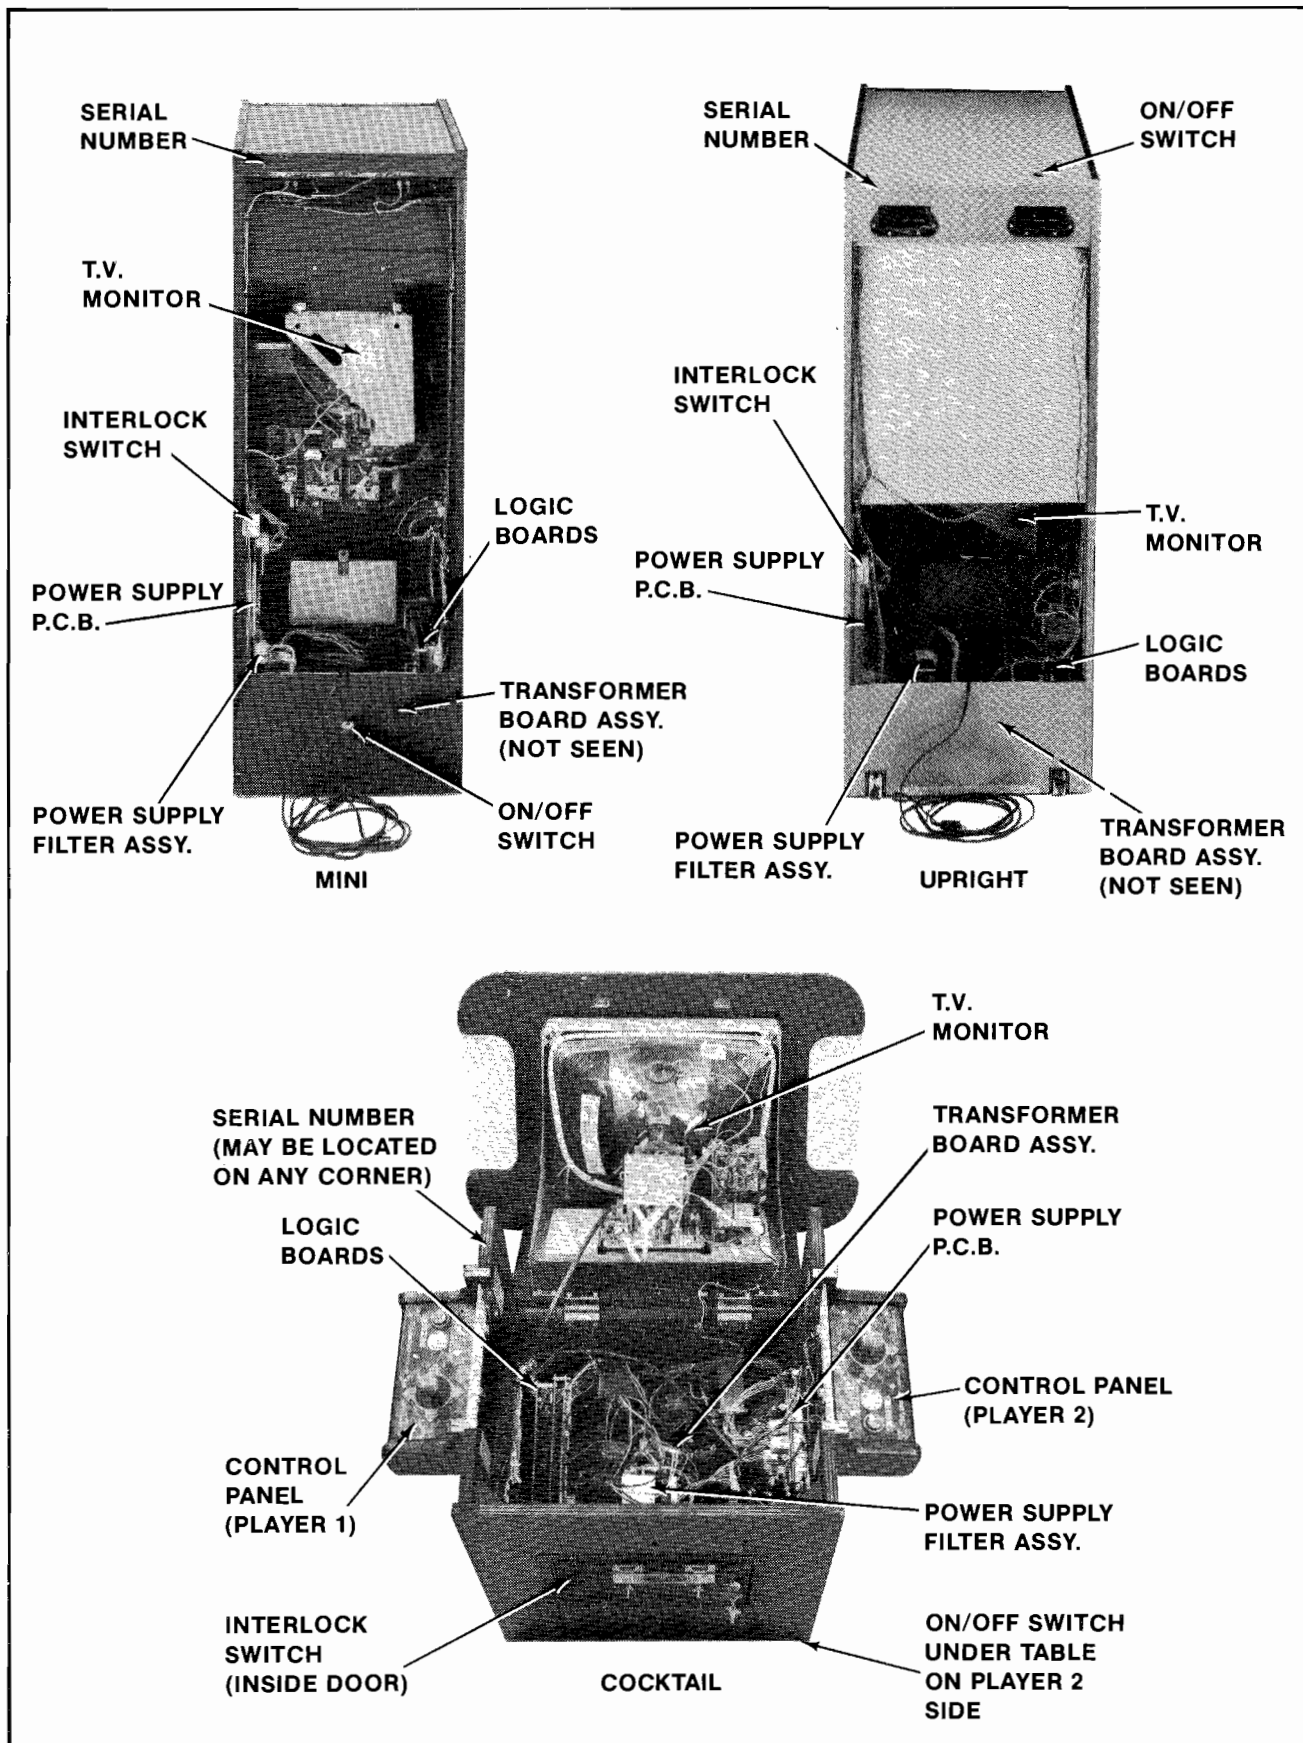


Figure 2-1 Location of Serial No., Interlock Switch, On/Off Switch, & Major Sub-Assys.

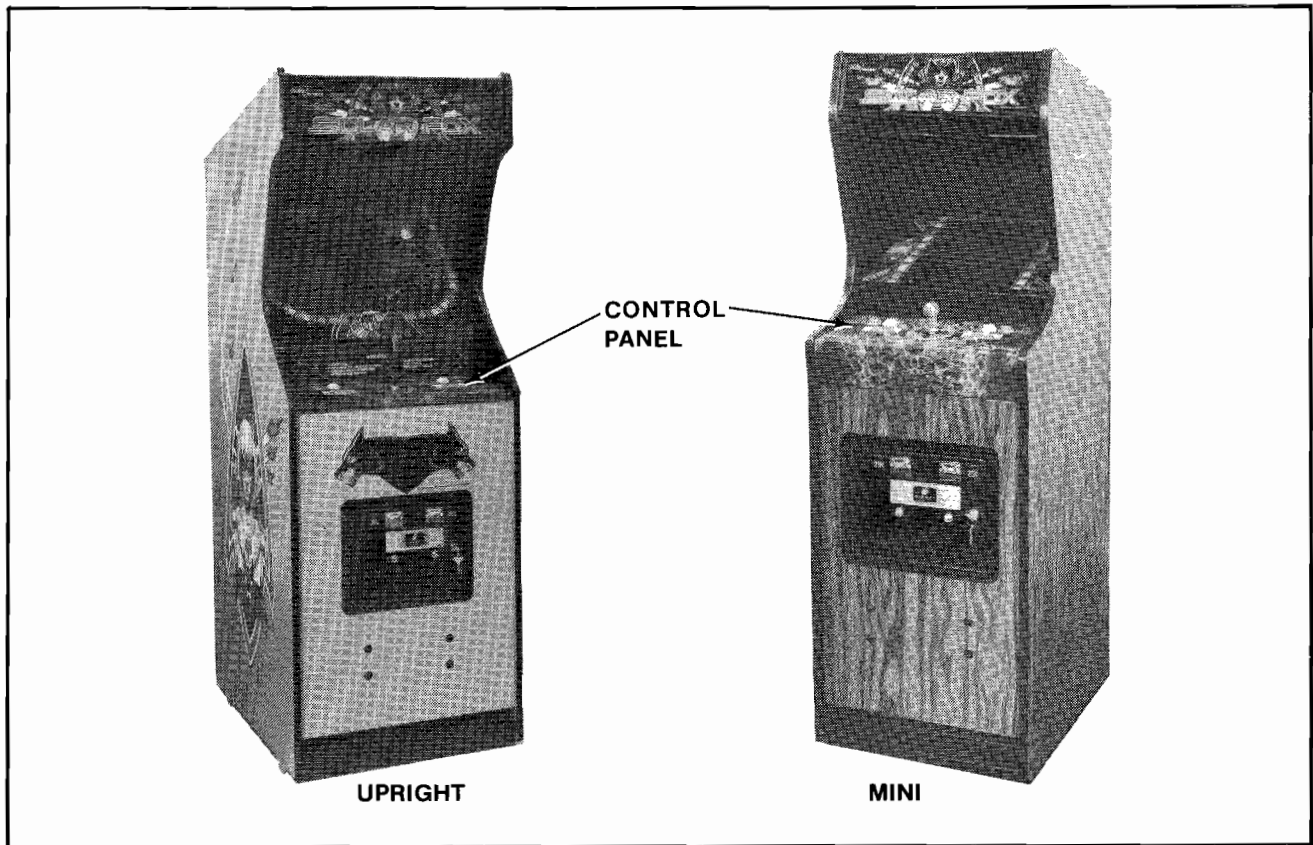


Figure 2-2 Major Sub Assys. (cont. from Fig. 2-1)

connected properly — or — after obtaining a solution to your over or under voltage problem from your distributor and/or your service man, plug the game into your A.C. wall outlet.

The game ON/OFF switches for all models are located as shown in Figure 2-1. Turn the game on and allow it to warm up a few minutes.

Slowly open each access door to the game (this does not include the coin door on the Upright and Mini models).

As the door is opened approximately 1" (2.54cm) the power to the game should go off (the T.V. monitor, all the lights, and all sounds will stop).

If this does not happen, check the interlock switch by this door to see if it has broken loose from its mounting or if it is stuck in the "ON" position.

If the switch is found to be bad, turn the game off, unplug it, and replace the interlock switch. When done, plug the game back into the wall outlet, close the access door, and turn the game back on.

After the game has warmed up, repeat the above interlock switch test.

When the interlock switch is working properly and turns the power to the game off, power may be restored to the game with the access door(s)

open. Take hold of the interlock switch plunger and **gently** pull it out to its fully extended position. **THIS IS TO BE USED ONLY FOR SERVICING THE GAME.** See Figure 2-3.

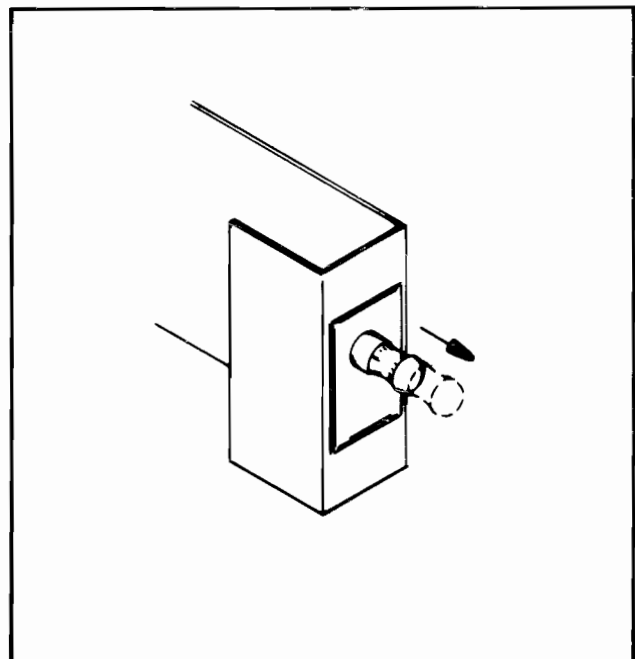


Figure 2-3 Interlock Switch Operation

## SELF-TEST:

Your new game will Self-Test itself to see if it has any bad parts. The information it receives while testing itself will be shown on the T.V. monitor. Some information can also be heard through the game's speaker system. See the GAME OPERATION section for a more detailed description of this function.

When there is a bad result according to the Self-Test, call your distributor and/or service man to have the trouble fixed unless it is something you can do yourself (such as replace a bad RAM or ROM chip).

## GAME VOLUME ADJUSTMENT CONTROL.

The game volume control pot is located just inside the cabinet on the right side of the coin door frame. There is only one pot. For adjustment, it may be reached through the coin door on **ALL** models.

To make the sound louder, turn the pot clockwise as you face it ( ↻ ).

To make the sounds **less** loud, turn the pot counter-clockwise as you face it ( ↺ ).

## OPTION SETTINGS:

To change the most common option settings, you **DO NOT** have to take the game apart or go into the cabinet and hunt for tiny switches on P.C. boards. These most common options can be changed from the main console of the game while it is in the Self-Test mode. The Self-Test switch is located just inside the cabinet on the right side of the coin door frame as you face it.

When changing any options, **ALWAYS** perform the Self-Test and play the game to be sure the ones selected are working properly. Of course, when you must change one of the switches that is located on one of the game's P.C. boards, it is also recommend-

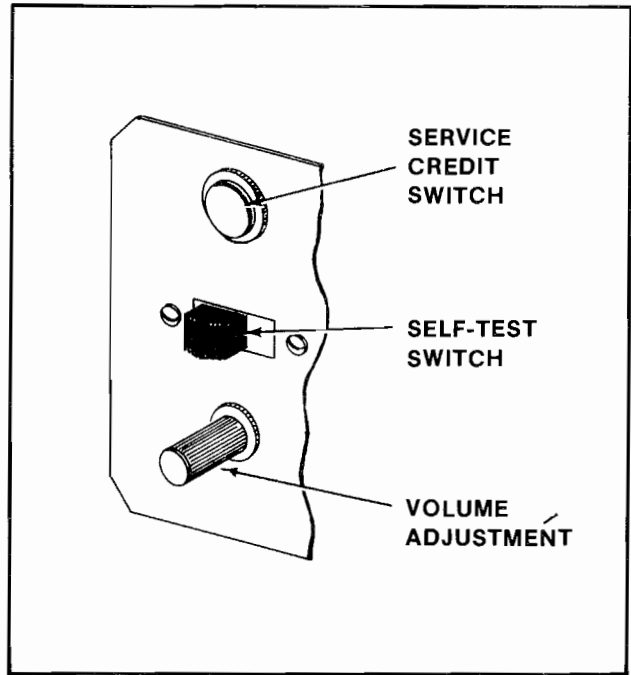


Figure 2-4 Location of Volume Control

ed that you perform the Self-Test and play the game to be sure the switches have worked properly and that no switches were accidentally moved that were not meant to be. (These switches are small and this can happen.)

The P.C. Board option switch settings and what they will make the game do are shown in Figure 2-6. These switches are **MAINLY INTENDED** for use by a technician who is checking and/or performing tests on the game. See Figure 2-5 for option switch locations.

**NOTE:** In order to set the option switches located on the game's P.C. Boards, these Boards need not be removed from their card rack.

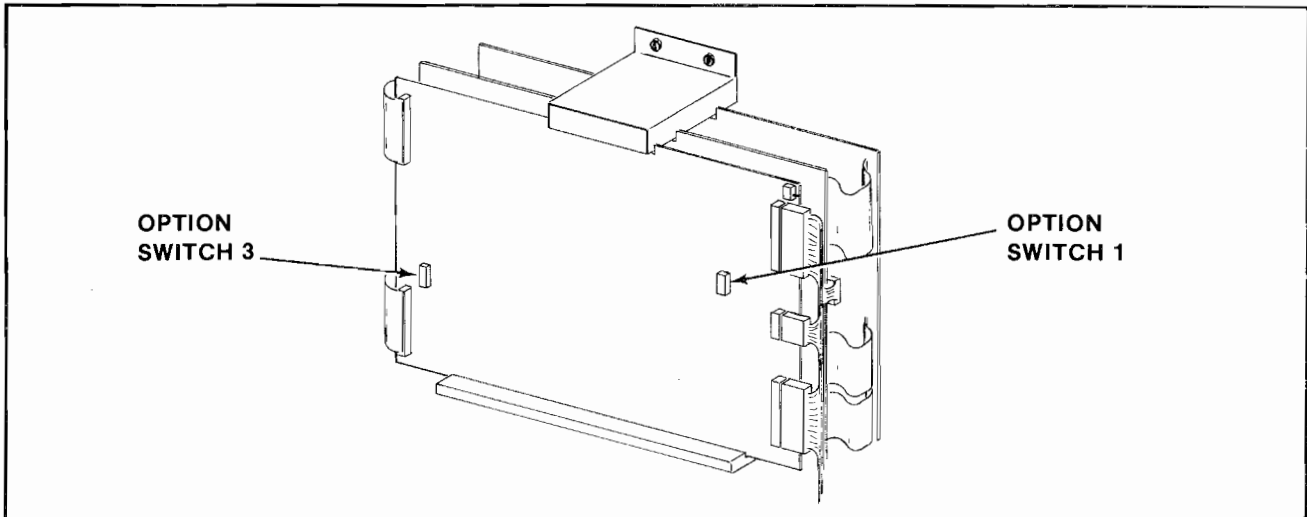


Figure 2-5 Option Switch Locations

<b>SOLAR FOX</b>										
<b>OPTION SWITCH SETTINGS</b>										
<b>SWITCH NO. 1 — AT B 3 — LOCATED ON SOUND I/O P.C. BOARD</b>										
	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7	SW#8	SW#9	SW#10
NO BONUS BASE AWARDED BONUS BASE AWARDED	ON OFF**		NOT USED USED	NOT USED USED		NOT USED USED			NOT USED USED	
BONUS BASE AWARDED AFTER <b>EVERY 20th RACK COMPLETED</b>	ON									
BONUS BASE AWARDED AFTER EVERY 10th RACK COMPLETED	OFF									
SOUND PROVIDED IN ATTRACT MODE (LASTS ABOUT 1 MINUTE)	ON									
NO SOUND PROVIDED IN ATTRACT MODE	OFF									
IGNORE HARDWARE FAILURE <b>ONLY USED FOR DEVELOPMENT</b>	ON									
HARDWARE FAILURE DETECTION	OFF**									
COCKTAIL TABLE UPRIGHT	ON OFF									
FREEZE VIDEO NORMAL OPERATION	ON OFF**									
<b>SWITCH NO. 3 — AT D 14 — LOCATED ON SOUND I/O P.C. BOARD</b>										
	SW#1	*SW#2*	SW#3	*SW#4*						
NORMAL OPERATION SOUND I/O DIAGNOSTIC MODE	OFF** ON									
NORMAL OPERATION RAM/ROM TEST INDICATES TEST RESULTS VIA YELLOW LED ON SOUND I/O BOARD: <b>FAST FLASH = BAD ROM</b> <b>SLOW FLASH = BAD RAM</b>	OFF** ON									
NORMAL OPERATION OSCILLATOR TEST	OFF** ON									
NORMAL OPERATION FILTER TEST	OFF** ON									

\*NO EFFECT IF SW#1 OF SWITCH NO. 3 IS IN THE "OFF" POSITION.


\*\*INDICATES FACTORY SETTINGS OF ABOVE SWITCHES.

Figure 2-6 Option Switch Settings

# III. Game Operation

SOLAR FOX is a one or a two player game with a color T.V. monitor. The game gives a display which has all the parts shown below.

The game has five possible modes of operation: ATTRACT, READY-TO-PLAY, PLAY, HIGH SCORE INITIAL, and SELF-TEST.

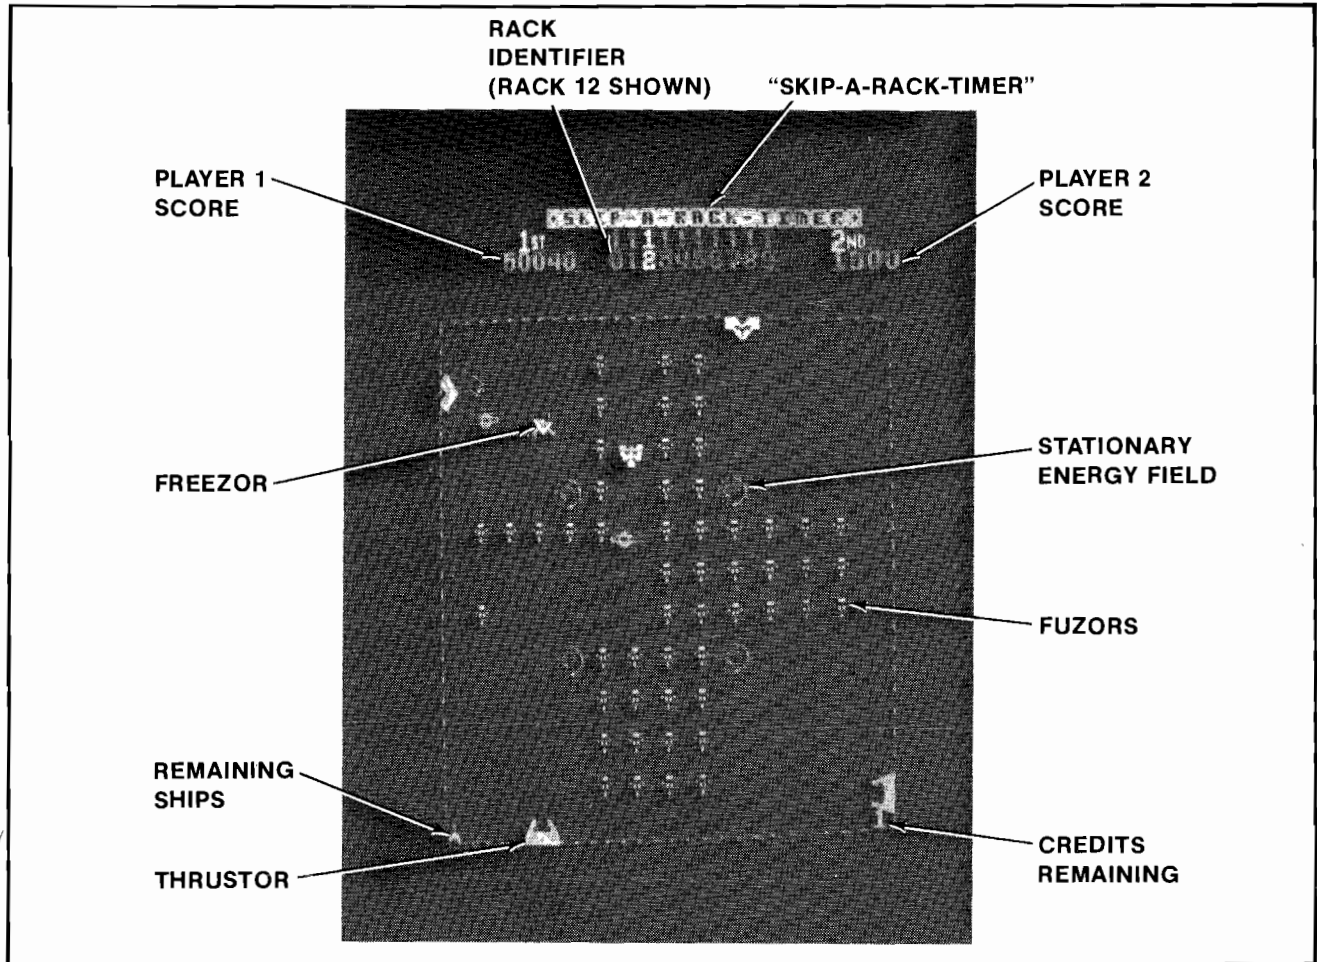

Identification of "On Screen" Graphics During Play

## SELF-TEST MODE

The Self-Test mode is a special mode for checking game play statistics as well as game switches and computer functions. It is the easiest and best way to check for proper operation of the entire game.

**NOTE:** Putting the game into Self-Test **WILL NOT** cause the game to erase any CREDITS it has in its memory when the Self-Test mode is entered.

You may begin a Self-Test at any time by sliding the Self-Test switch to the "ON" position after the power to the game is on (the Self-Test switch is located just inside the cabinet on the right side of the coin door frame as you face it). When this is done, the game will react as follows:

1. If the game is in the Attract mode when the Self-Test switch is moved to the "ON" position, it will finish the sequence and then go into the Self-Test mode. This is illustrated by the display of the Self-Test Mode Menu on the monitor screen.
2. If the game is in the Ready-To-Play mode or the Play mode when the Self-Test switch is slid to the "ON" position, it **WILL NOT** go into the Self-Test mode until **AFTER** the player's last ship has been destroyed (the game **MUST** be over). At this point, the game will go into the Self-Test mode. Again, this is illustrated by the display of the Self-Test Mode Menu on the monitor screen.

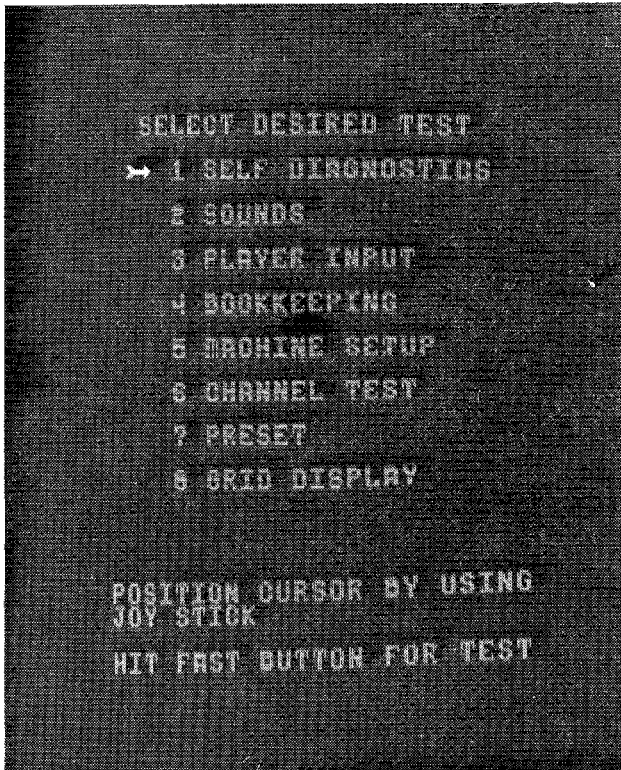


Figure 3-1 Self-Test — Menue

3. The fastest way to enter the Self-Test mode is to slide the Self-Test switch to the "ON" position and then activate the "TILT" switch located on the back side of the coin door just below the lock mechanism. The game will then **IMMEDIATELY** go into the Self-Test mode.

The Self-Test mode has eight (8) major categories as illustrated by Figure 3-1.

1. It is easy to select what category you want to enter. By pushing the control stick forward or pulling it back, the Arrow (Cursor) at the left of the screen can be moved UP and DOWN, (forward = UP) and (backward = DOWN), until it is in front of the category you want to test. Release the control stick at this time.
2. After the Arrow has been positioned, depress either "SPEED CONTROL" Button on the console and the monitor screen will display the test category you have selected.
  - Once you are **IN** one of the Self-Test mode categories, FOLLOW THE **ON-SCREEN INSTRUCTIONS TO COMPLETE THE TEST.**
3. The next group of Figures (3-2 through 3-9) show the **CORRECT** screen presentation for **EACH** category of the Self-Test mode.

During the SELF-DIAGNOSTICS section of the Self-Test mode, you will **first** see a cross hatch pattern on the screen for about 1/2 second. **Second**, you will see a lot of different colored bars shown on the monitor screen. These bars will be **UNpainted** one at a time from the top down. **Third**, you will see the screen painted Red, Blue, and Green in bars from the top down. **Fourth**, all the different colored bars you saw "**Second**" are displayed again. And **fifth**, the different colored bars are replaced by this message: "**HIT SPEED CONTROL BUTTON TO EXIT**". If the SPEED CONTROL Button is not hit, the test will repeat itself. This feature was designed into the game to enable over-night testing for an intermittent hardware problem.

If the SELF DIAGNOSTICS find one or more bad ROM or RAM chips: instead of going through what is described above, the game will give you a written message as to which parts are bad. This message includes their I.D.'s and their P.C. Board locations.

During the SOUNDS section of the Self-Test mode, the game will give a display which looks like that shown in Figure 3-2.

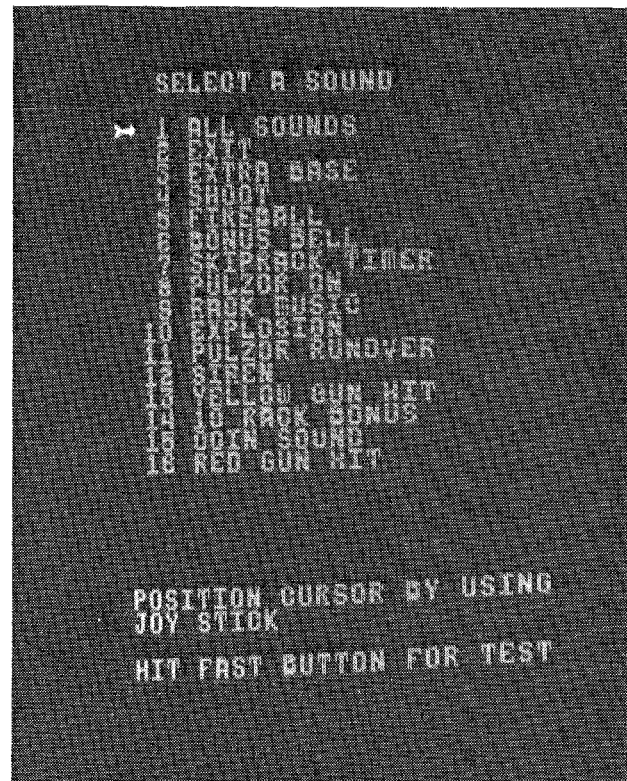


Figure 3-2 Self-Test — Sounds

- In this category, each of the game's 13 separate sounds can be checked individually in any order — or — you can tell the game to check them all in order — 3 through 17.

During the PLAYER INPUT section of the Self-Test mode, the game will give a display which looks like that shown in Figure 3-3.

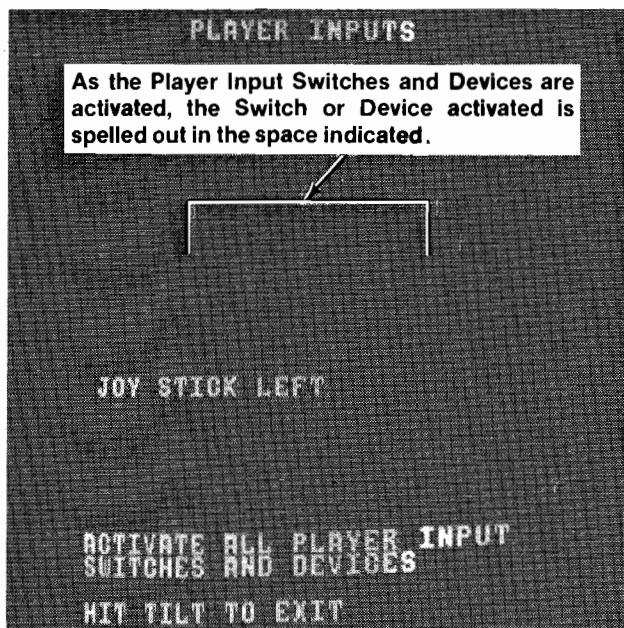


Figure 3-3 Self-Test — Player Inputs

- In this category, each of the game's player operated controls — including the coin switches on the back side of the coin door — may be checked individually. A game sound will be heard as each switch/control is actuated. If no game sound is heard, that switch/control is either not working, miswired, or disconnected. Check it out thoroughly.

During the BOOKKEEPING section of the Self-Test mode, the game will give a display which looks like that shown in Figure 3-4.

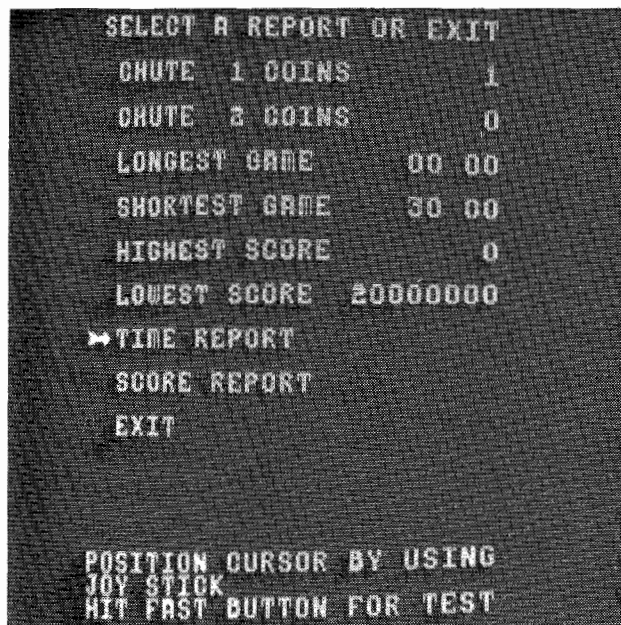


Figure 3-4 Self-Test — Bookkeeping

- In this category a basic bookkeeping function is performed. And with the selection of the "TIME REPORT" and the "SCORE REPORT", detailed breakdowns of game times and scores may be obtained.

In the TIME REPORT and SCORE REPORT sections of the BOOKKEEPING mode, the game will give displays which look like those shown in Figure 3-5 and 3-6 respectively.

**NOTE:** In the SCORE REPORT section, the "LT" means "LESS THAN" and the "GT" means "GREATER THAN".

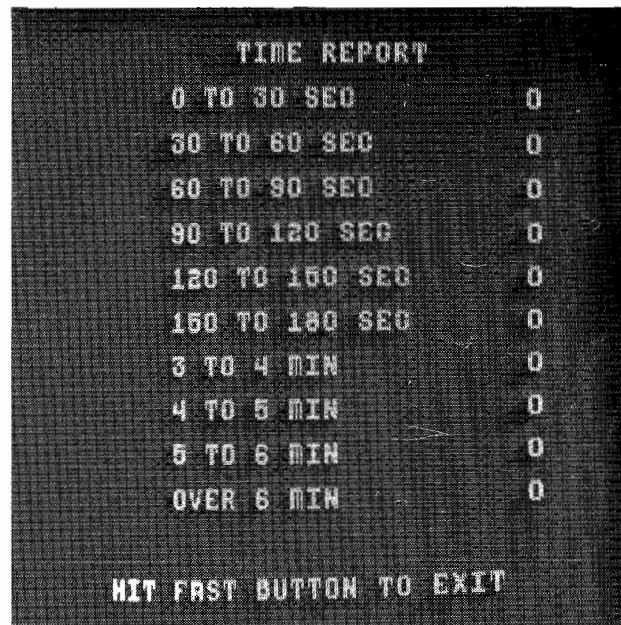


Figure 3-5 Self-Test — Time Report


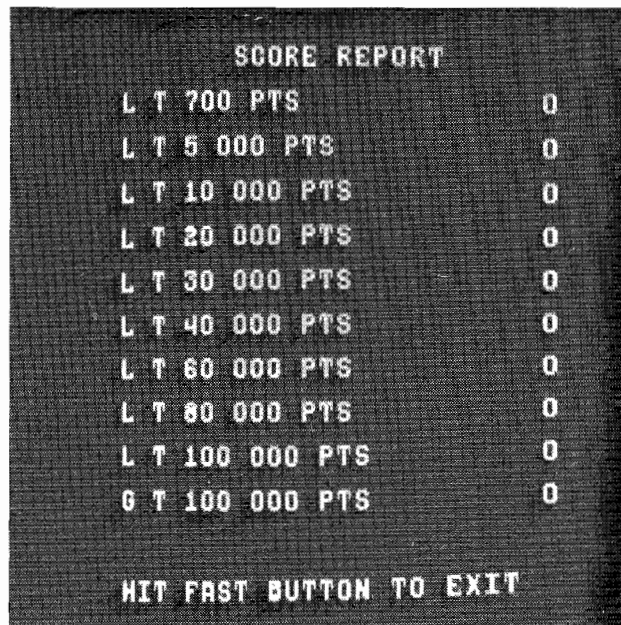


Figure 3-6 Self-Test — Score Report

During the SETUP OPTIONS section of the Self-Test mode, the game will give a display which looks like that shown in Figure 3-7.

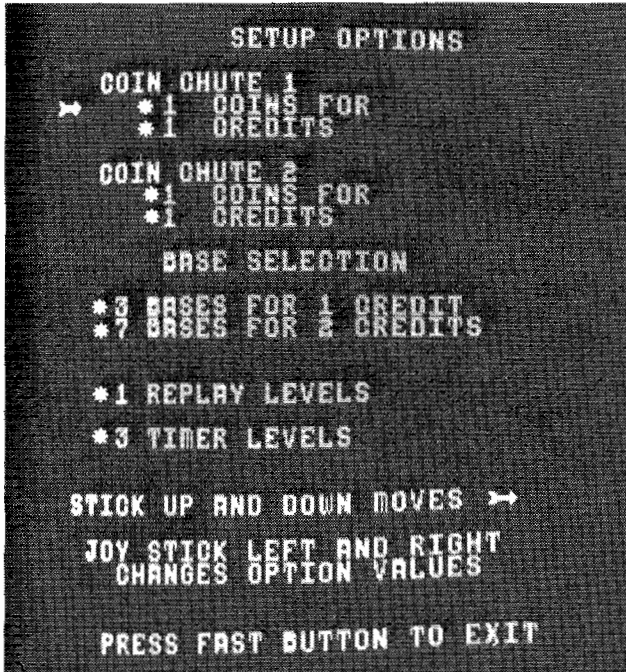

\* = Factory recommended settings.

Figure 3-7 Self-Test — Set Up Options

- In this category, all common game options may be changed from the control console: coins per credit, credits per base, bonus base(s) awarded at, difficulty level —, and so on.

#### DIFFICULTY LEVEL EXPLANATION:

The difficulty level of the game is controlled by the "TIMER LEVELS" setting in the SETUP OPTIONS section of the game. The easiest level of play is represented by "1" and the most difficult level of play is represented by "9". An average setting of "3" is recommended.

#### AWARD OF BONUS BASES EXPLANATION:

Bonus Bases are awarded in two ways: 1) After having survived a certain number of racks (see OPTION SWITCH SETTINGS TABLE), and 2) By reaching or surpassing certain point values during game play.

The point values that a player must attain during a game to receive additional ships is controlled by the "REPLAY LEVELS" setting in the above table. Following is a chart which spells out exactly at what point values additional Ships will be awarded for each graduation in the "REPLAY LEVELS" setting.

During the CHANNEL TEST section of the Self-Test mode, the game will give a display which looks like that shown in Figure 3-8.

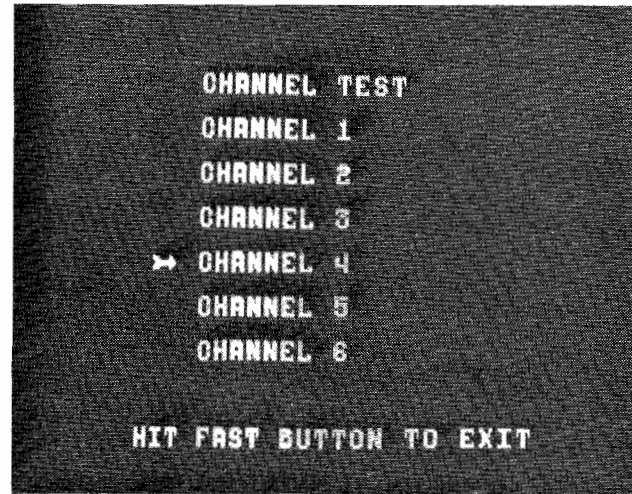


Figure 3-8 Self-Test — Channel Test

- In this category, the game conducts a test of its SOUND SYSTEM.

Once you enter the CHANNEL TEST section of the Self-Test mode, the game automatically tests Channels 1 through 6 giving a tone for each one as it checks it. After the 6th Channel is tested, the game automatically repeats the test until the SPEED CONTROL Button is hit. It then goes back to the Self-Test Mode Menu.

During the PRESET section of the Self-Test mode, the game will give a display which looks like the following:

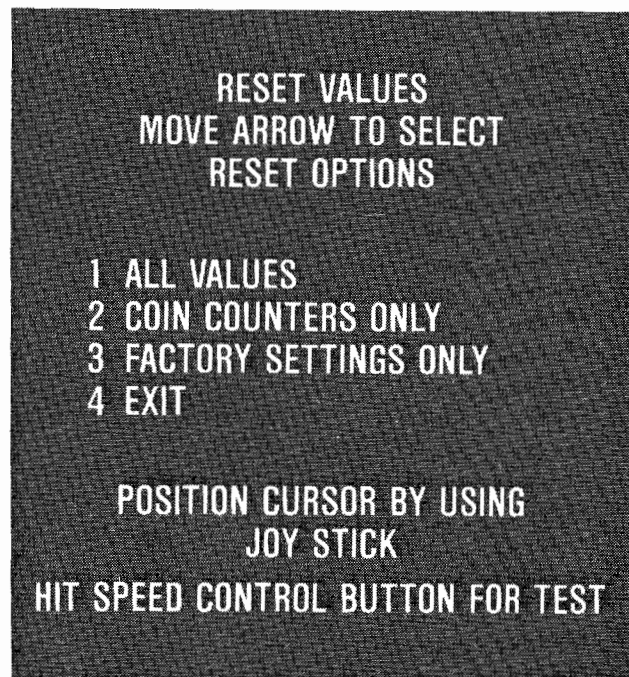


Figure 3-9 Location of Hardware Master Reset Switches

During the GRID DISPLAY section of the Self-Test mode, the game shows a white cross hatch pattern on the monitor screen. This is for alignment and/or test purposes. This pattern will remain on the monitor screen until the SPEED CONTROL Button is hit. The game will then go back to the Self-Test Mode Menu.

To leave the Self-Test mode, simply slide the Self-Test switch to the "OFF" position at **ANY** time. The game will then run through the ROM/RAM test display after which normal game functions will return to the monitor screen.

#### CROSS HATCH PATTERN:

A cross hatch pattern is shown on the screen when power is first turned on to the game, when the TILT Switch is actuated, during the "SELF-DIAGNOSTIC" portion of the Self-Test mode, and during the "GRID DISPLAY" portion of the Self-Test mode.

This pattern may be kept on the screen for adjustment purposes as described earlier.

When you are finished using the cross hatch pattern, simply hit the SPEED CONTROL Button to return to the Self-Test Mode Menu.

#### HARDWARE MASTER RESET SWITCH:

There are two of these little red switches, one on the Sound I/O Board and one on the CPU Board, located as shown in Figure 3-10.

The function of each of these switches — when pressed — is to make the game **THINK** it has **JUST** been turned on. They set up an "initial power-up" condition.

We **DO NOT** recommend that you indiscriminately press **EITHER** of these switches. They should **ONLY** be used if there is a major problem encountered while testing the P.C. Boards.

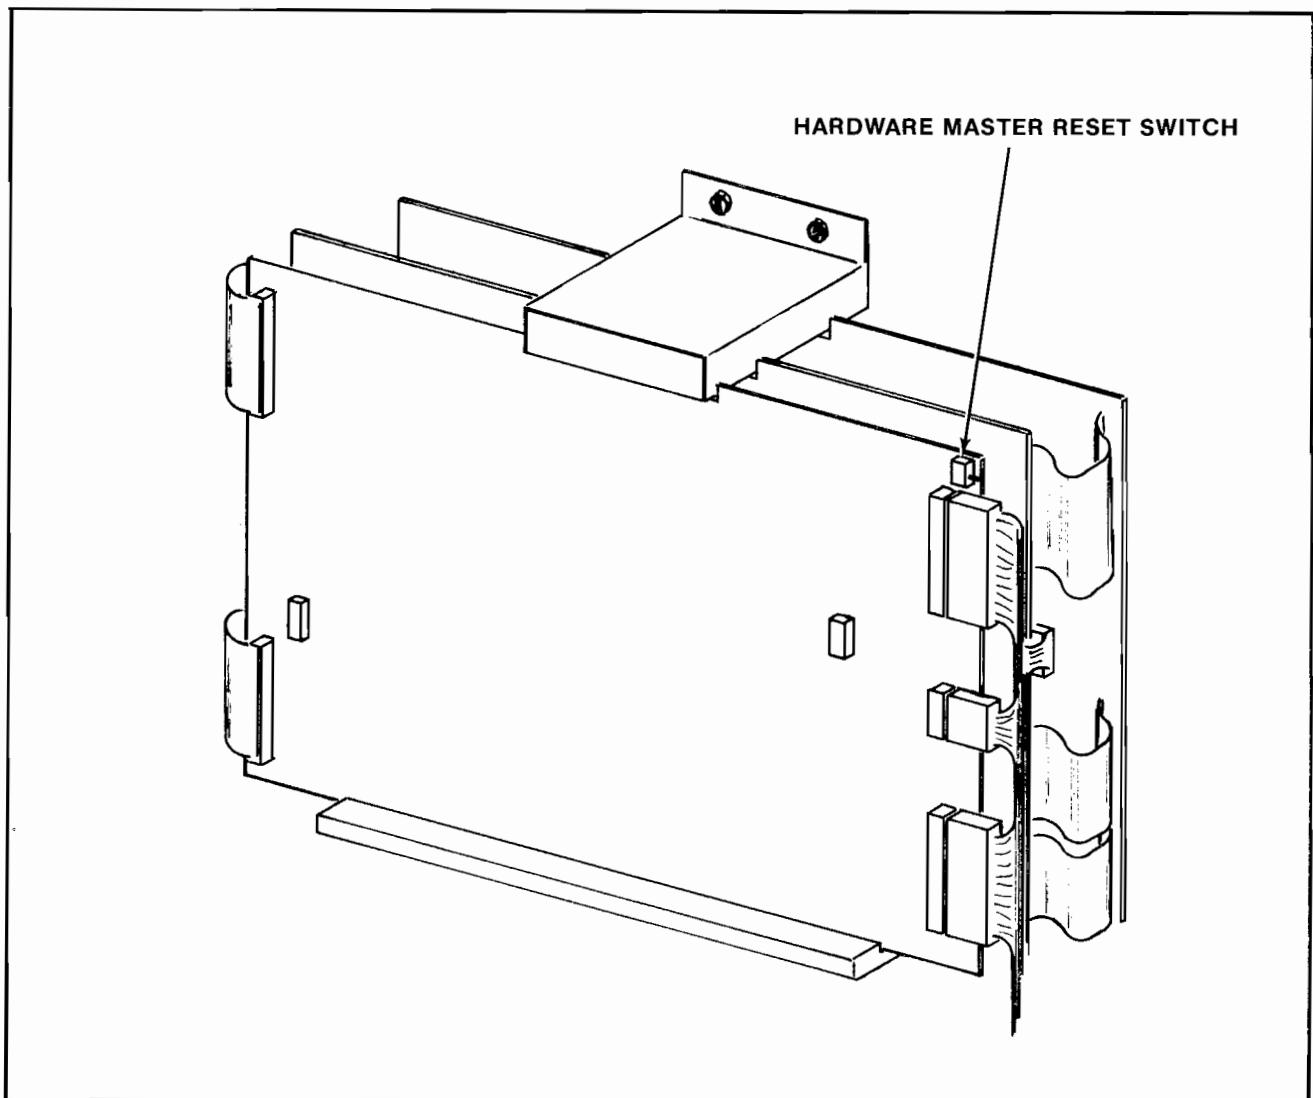


Figure 3-10 Location of Hardware Master Reset Switches


# ATTRACT MODE

1. The Attract mode starts:


- Just after power has been turned on to the game. (Self-Test switch is in the "OFF" position.)
- After a Self-Test has been completed and there are no more credits left in the game's memory.
- After a play has been finished, the score was not high enough to put the game into the High

Score/Initial mode, and there are no more credits left in the game's memory.


- After the High Score/Initial mode when there are no more credits left in its memory.
- In the Attract mode, the game will give the following displays **centered** on the monitor screen:

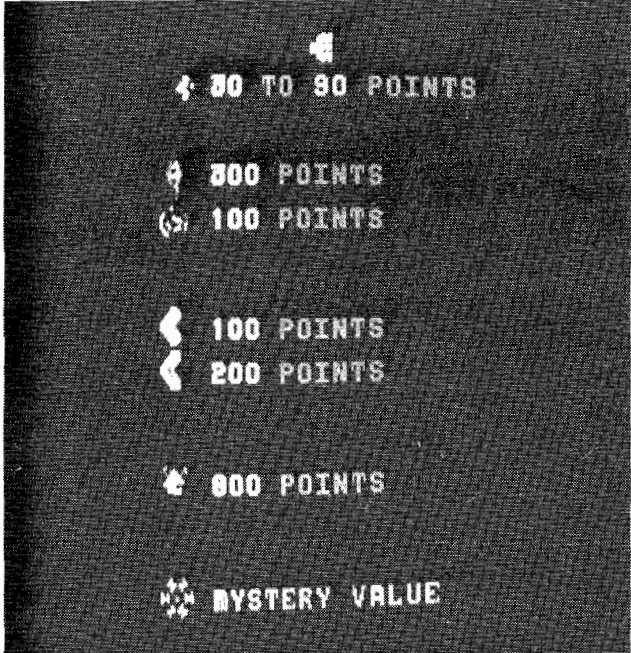


Attract Mode Display 1

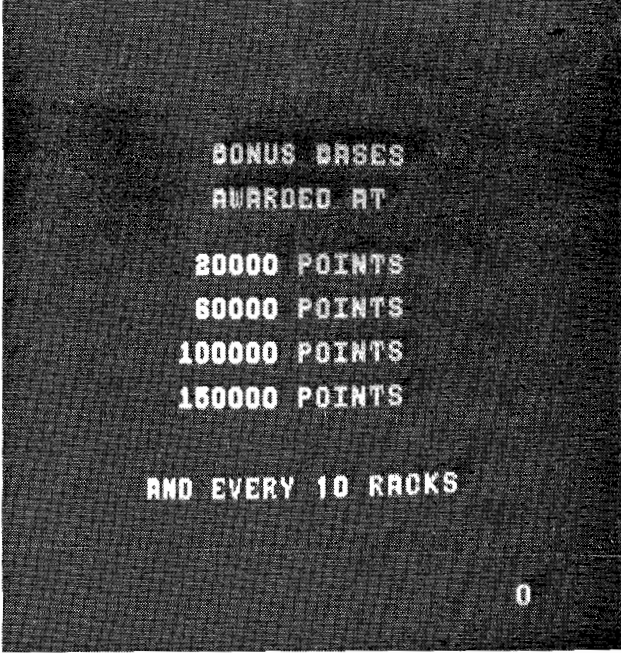


Attract Mode Display 2

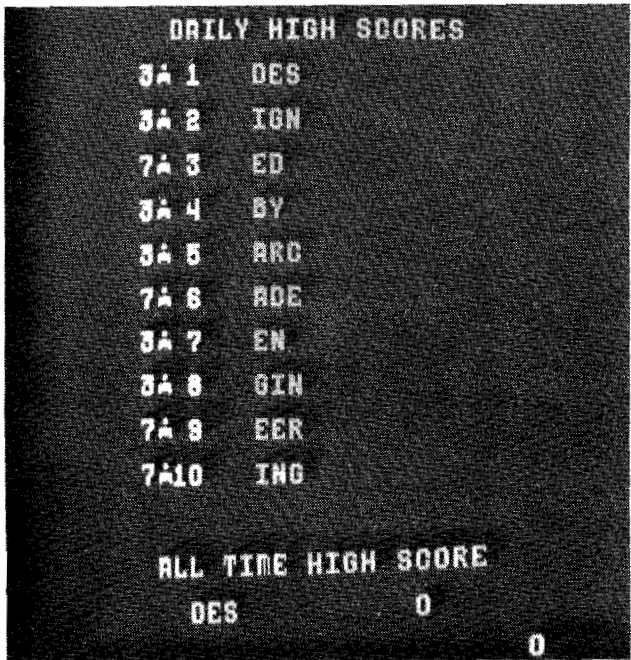


Attract Mode Display 3

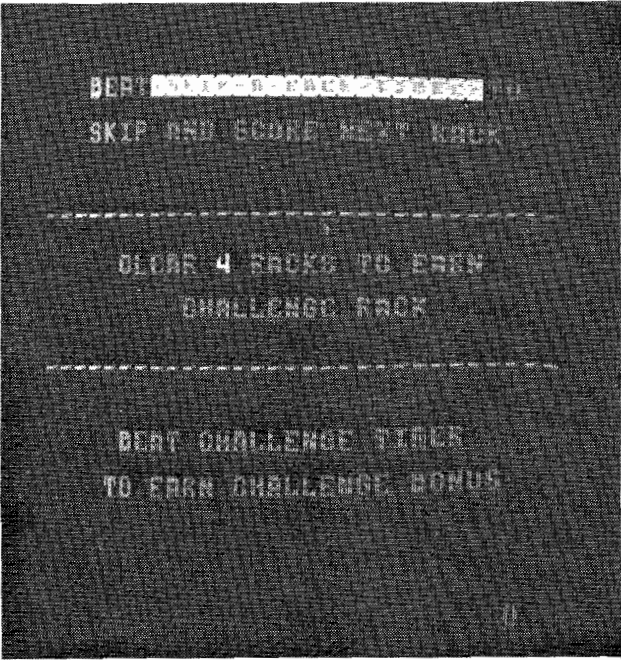

Attract Mode Display 4

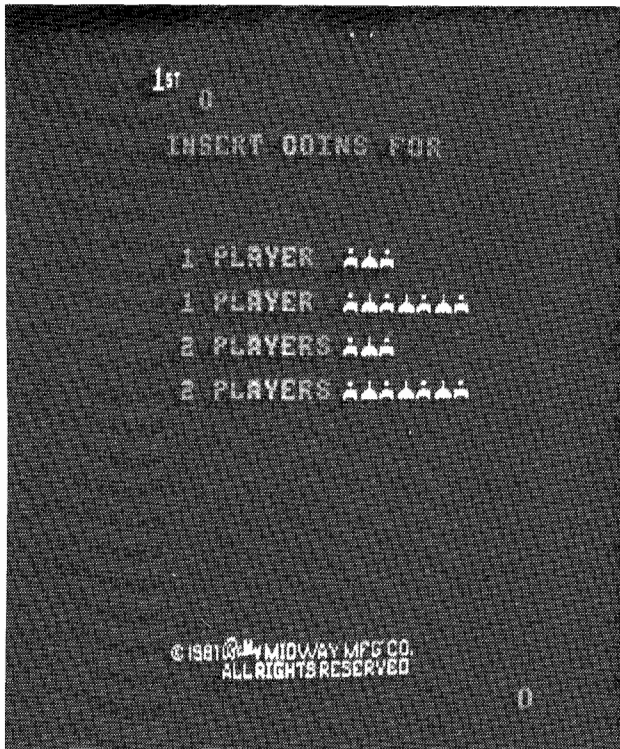


Attract Mode Display 5

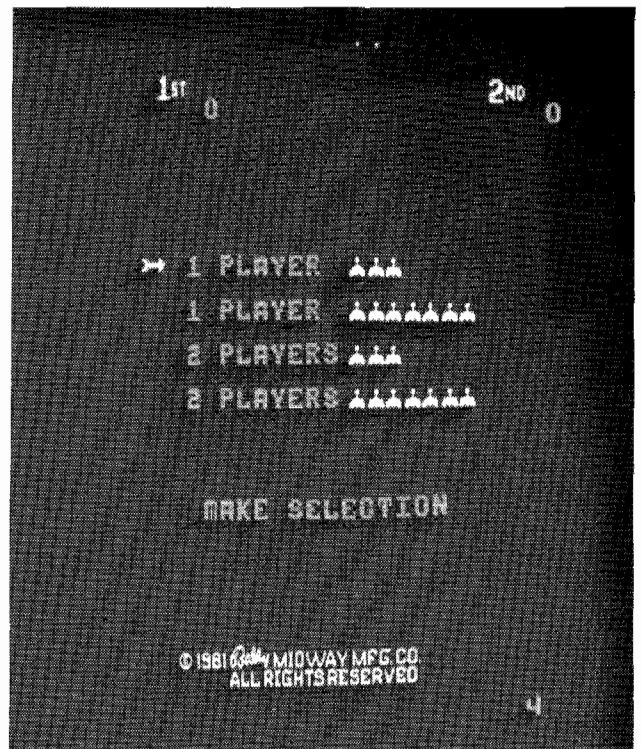

Ready to Play Mode Display 2

- No matter where the game is in the Attract mode sequence, it will immediately go to the following display as soon as a game has been paid for.

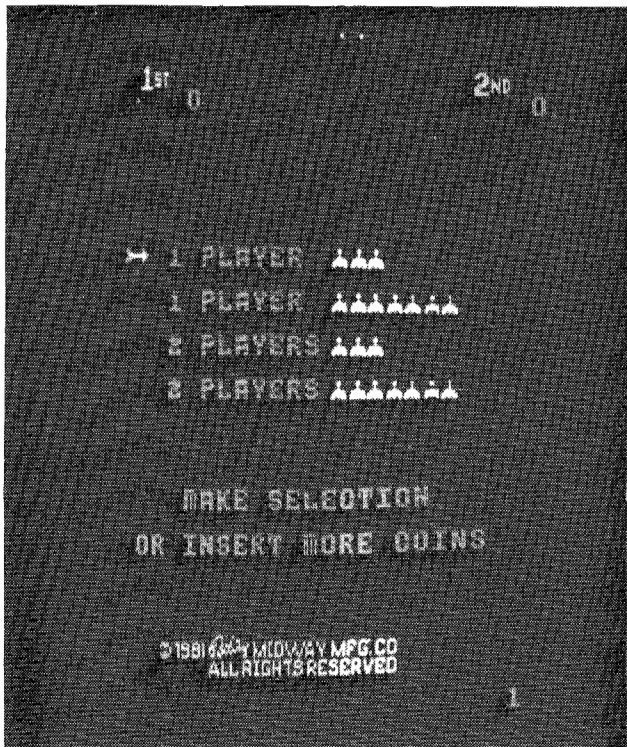


Ready to Play Mode Display 1

## READY-TO-PLAY MODE

1. The Ready-To-Play mode starts when enough coins have been accepted for a 1 or a 2 player game. It will hold this display on the monitor screen until a "1 PLAYER" or a "2 PLAYER" game has been selected **BY MOVING THE CONTROL STICK FORWARD OR BACKWARD** and the SPEED CONTROL Button pushed to begin the game — or — for about 60 seconds, whichever comes first. If no game selection is made before the 60 second time limit is up, a game will begin for the number of players the cursor was pointing at when the time limit expired.
2. The Ready-To-Play mode ends when either a "1 PLAYER" or a "2 PLAYER" game has been selected and the SPEED CONTROL Button pushed to begin play.
3. In the Ready-To-Play mode, the game will give the above display **centered** on the monitor screen.
4. If the SPEED CONTROL Button is not pressed, a game will automatically begin as stated above when the 60 second time limit runs out.

## PLAY MODE

1. The Play mode begins when the SPEED CONTROL Button is pressed. When this happens, the following is displayed **centered** on the monitor screen (NOVICE or EXPERT).

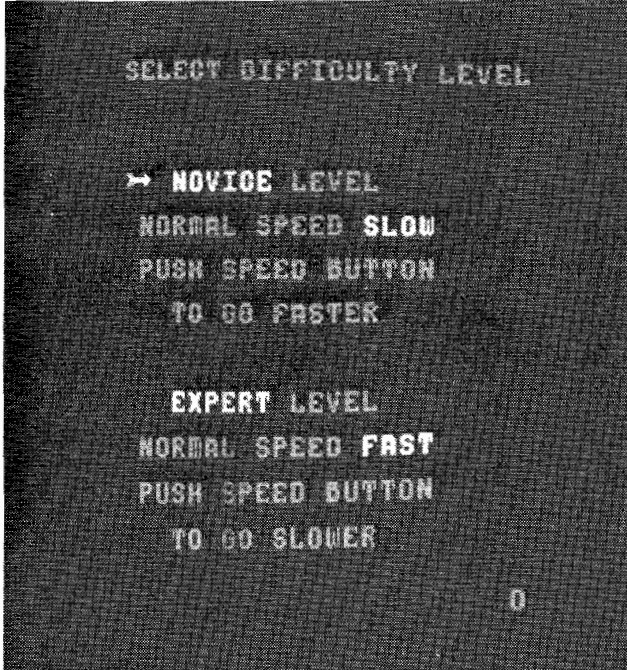

Play Mode Display

2. The Play mode ends when your last Ship has been destroyed. When this happens, "GAME OVER" "PLAYER 1" is displayed **centered** on the monitor screen.
3. **ON THE SCREEN:** The game is made up of 20 racks of 20 different patterns and 12 Challenging racks of 12 different patterns.

In the regular racks, the items on the screen are as follows: 4 Thrustors — one patrolling each edge — top, bottom, left, and right; your Space Ship; the pattern which is made up of Fuzors; and some stationary Energy Fields. (These vary in number according to the difficulty of the Fuzor pattern. The more difficult the pattern, the more stationary Energy Fields that will be mixed in with it. Some patterns have NO stationary Energy Fields at all.)

At the beginning of each rack, the game tells which player is up and what each Fuzor's point value is. When play starts, the Fuzor point value message disappears.

The Skiprack Timer is also set at the beginning of each rack.

Also indicated in each rack is the rack number you're playing, the number of credits on the game, the number of players (1 or 2), and a running total of the player's score(s).

4. **PLAY BEGINS:** Your ship begins to move across the screen when play begins. At the same time: the Skiprack Timer begins counting and the four Thrustors begin patrolling their edges of the screen and shooting Vortices at you. Each thruster has the capability of shooting two successive Vortices at you. So you could have a total of 8 moving Vortices to dodge at one time, coming at you from all different directions. The longer you are in any particular rack, the faster the Thrustors will fire at you.
5. **PULZORS:** At some time during each rack, a Pulzor will appear at a random location on the screen for a **short** period of time. If you run it over with your Ship, you will be awarded the bonus points for this Pulzor. If it should disappear **BEFORE** you have the opportunity to run it over and/or shoot it, it **WILL** reappear again **DURING** this particular rack.

The Pulzor's bonus point value will vary between 200 and 800 points. Their bonus point value is displayed on the screen at the time they are run over or shot.

6. **FREEZOR:** At some point near the beginning of each rack, a Freezor will appear at one edge of the screen and begin to **ERRATICALLY** work its way to one of the other edges. If you can run over or shoot the Freezor **BEFORE** it reaches the other edge of the screen, it will cause **ALL FOUR (4)** of the Thrustors to freeze in their tracks the instant you hit or run over the Freezor. The Thrustors will remain frozen in place for about 6 seconds. While in this condition; they cannot shoot Vortices at you or move in any other way at all.
7. **SKIPRACK TIMER:** The Skiprack Timer is set at the beginning of each rack. The more difficult the pattern of Fuzors that you have to eliminate, the longer the amount of time it will take the Skiprack Timer to count out.

The object of the game is to completely eliminate the pattern of Fuzors from the screen before the Skiprack Timer reaches zero — "0". Try to do this without losing a Ship. However, if you should lose a Ship, this **WILL NOT** cancel the Skiprack Timer feature. When your new Ship appears, just pick up where you left off and try to eliminate the rest of the pattern of Fuzors **BEFORE** the Skiprack Timer counts out.

If the Skiprack Timer counts out **BEFORE** you are able to eliminate the entire pattern of Fuzors, just continue playing and go on to the **NEXT** rack after you've eliminated the last fuzor in this one. You can then try to beat the Skiprack Timer in that next rack.

When you do beat the Skiprack Timer (eliminate all the Fuzors **BEFORE** it counts out), you are awarded 100 bonus points for every unused division still remaining on the Skiprack Timer, i.e. 5

unused divisions left on the Skiprack Timer, 500 bonus points are added to your score. Plus, you get all the points for each Fuzor and the Pulzor that are in the next rack. The game then skips that rack and goes to the one after it for your next rack of play.

If you beat the Skiprack Timer in that rack, the above events repeat themselves. If you do not beat the Skiprack Timer in that rack, just continue playing and you will advance to the next rack in line when your last Fuzor is eliminated in your present rack.

8. **SPEED CONTROL BUTTON:** The SPEED CONTROL Button is used to **DOUBLE** the speed at which your Ship travels on the screen when you are in the **NOVICE** mode of game play and to halve the speed at which your ship travels on the screen when you are in the **EXPERT** mode of game play. You **WILL NOT** be able to beat the Skiprack Timer unless you learn to control your Ship at the higher speeds.

9. **THRUSTORS:** These are interesting little fellows with a few surprises up their sleeves. They patrol the top, bottom, left, and right sides of the monitor screen shooting Vortices at you all the while. They can, however, be disabled for about 6 seconds at a time if you know how.

Here's how. (You also get bonus points each time you disable a Thrustor.) For short periods of time during each rack, each Thrustor will turn yellow in color. When a Thrustor is yellow, it can be run over or shot by your Ship. When you do this, that Thrustor will remain stationary at the point where you hit or ran over it for approximately 6 seconds. During this time it will also stop shooting Vortices at you. If your ship touches a Thrustor when it is any color but yellow, your Ship will be destroyed.

All four Thrustors may be disabled at the **SAME TIME** if you shoot or run over the Freezor as it works its way across the screen. All four Thrustors are also disabled for a short period of time if you shoot **ANY** single red Thrustor. However, they can still shoot Vortices at you, so **BE CAREFUL!**

It is recommended that you **ONLY** approach a yellow Thrustor from the side to run it over. This is because they can still shoot Vortices while they are yellow — until you run them over. So, if you approach a yellow Thrustor from the front to run it over, the chances are very good to excellent that it will pop a Vortex right down your throat (very undesirable). Therefore, approach from the side. A Thrustor **CANNOT** shoot Vortices to the side — **ONLY** from its front.

Thrustors can only shoot two Vortices each and cannot shoot again until one of the previously shot Vortices either disappears from the screen or goes off it at one edge. As you spend more time in any

particular rack, or, as you advance into the more difficult racks, the Thrustors will pick up the pace at which they shoot at you.

10. **VORTICES:** There is only one type of Vortex in the game: that which is shot at you by the Thrustors. The moving Vortices are shot out by the Thrustors. As a general rule here, the easier the Fuzor pattern, the shorter the distance these moving Vortices will travel before they fade away and the slower will be the speed at which they travel this distance.

In the higher racks, the moving Vortices travel at high speed and go all the way across the screen no matter which direction they were shot from.

If your Ship runs into any Vortex, it will be destroyed.

11. **STATIONARY ENERGY FIELDS:** There is only one type of Energy Field in the game: that which is stationary. If your Ship should run into an Energy Field, it will be held and spun around several times before it is set free. This gives the Thrustors a chance to line up on you.

The stationary Energy Fields are not present in all Fuzor patterns. As a general rule, the more difficult the pattern of Fuzors is, the higher the number of stationary Energy Fields that will be mixed in with it.

12. **BONUS SHIPS:** Bonus Ships are awarded in two different ways in the game: 1) When the player reaches or passes certain operator selected point values (see the "MACHINE SETUP" section of this manual for the individual point values at which each bonus Ship can be awarded), and 2) When the player reaches or passes a certain operator selected number of racks (see the "OPTION SWITCH SETTINGS TABLE").

13. **FUZORS:** Their point value increases as the rack numbers advance. The point value of the Fuzors is displayed at the top of the monitor screen **BEFORE** each rack begins. Example: for racks 1, 2 and 3, the Fuzors are worth 30 points each; for racks 4 and 5 the Fuzors are worth 40 points each; and so on.

As you get into the higher racks, the Fuzors have to be run over twice before they are eliminated. You are awarded their **FULL** value for **EACH** time you run them over. The way you can tell when you are in a rack where the Fuzors have to be run over twice before they are eliminated is that when you run over them once, their pattern changes drastically from those that have not been run over at all.

If you decide to shoot some of the Fuzors (instead of running over them twice) they will be completely eliminated with **ONLY ONE SHOT** and you are awarded their entire point value times two.

14. **CHALLENGING RACKS:** Every 4th rack is a Challenge Rack. There are **ONLY** Fuzors in a Challenge Rack. The Skiprack Timer is active in each Challenge Rack. It is used here as a countdown timer. You have a very short period of time to eliminate the pattern of Fuzors that makes up each Challenge Rack. You collect points for each Fuzor eliminated. If you eliminate the entire pattern of Fuzors **BEFORE** the timer runs out, you are awarded bonus points. You get 1,000 bonus points for completing the 1st Challenge Rack. This total increases by 600 points for each succeeding Challenge Rack until you get to the 12th one at 7,600 bonus points. The 12th Challenge Rack then repeats after every 3rd regular rack.

It should be noted that **ONLY** Challenge Rack number 1 will come up after every 3rd rack until you beat the timer. Then, **ONLY** Challenge Rack number 2 will come up after every 3rd rack until you beat the timer for this pattern, and so on.

When in any Challenge Rack, if you don't beat the timer, all Challenge Rack action stops when the timer counts out and the next regular game rack is displayed on the screen. You retain all points for any Fuzors you eliminated up to the moment the timer counted out.

15. **PLAY ENDS:** When your last Ship is destroyed, "GAME OVER" "PLAYER 1" is displayed centered on the monitor screen.
16. **HIGH SCORE/INITIAL MODE:** If your score was high enough to become one of the ten best scores, the game will go into the High Score/Initial mode immediately after the above display. If your score was not high enough to cause the game to go into the High Score/Initial mode, it will either go to the Attract mode (if there are no more credits left in its memory) or into the Ready-To-Play mode (if there are still credits left in its memory). In the High Score/Initial mode the game gives a display which looks like that shown in Figure 3-11.

By pulling the control stick toward you, you can make the cursor move down the alphabet: "A", "B", "C", "D", etc. By pushing the control stick away from you, you can make the cursor move up the alphabet: "Z", "Y", "X", "W", etc.

When you reach your initial, release the control stick and push the SPEED CONTROL Button. Your initial is printed out below the on-screen instructions. If you do not wish to put your initials opposite your score, just press the SPEED CONTROL Button three times. Three "A"'s will appear below the on-screen instructions.

**NOTE:** If you make a mistake, you can erase the wrong letter by positioning the cursor opposite the "ERASE" word at the bottom of the line of

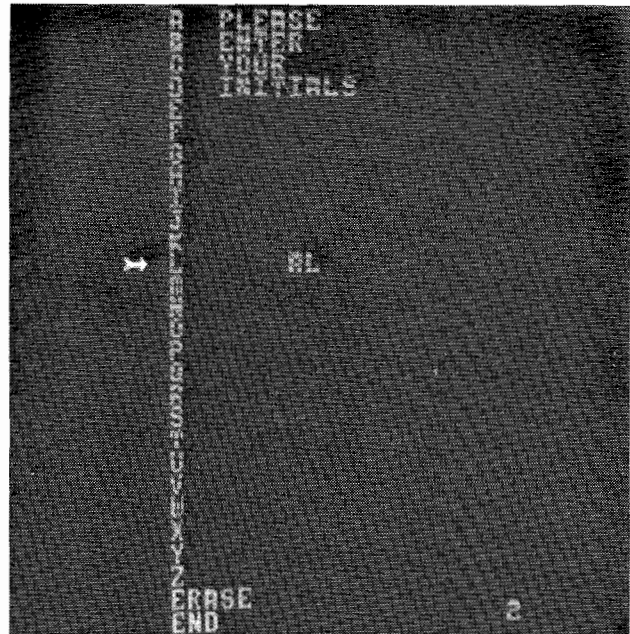


Figure 3-11 High Score/Initial Mode

alphabet characters and pressing the SPEED CONTROL Button. Then simply go back and print out the correct letter.

When you've printed out your last initial, move the cursor opposite the "END" word and press the SPEED CONTROL Button to tell the game you are through printing out your initials. The game will then give the following RANKINGS display showing your score opposite your ranking and your initials. See Figure 3-12.

Number of Space Ships used to achieve your score is indicated in this column.

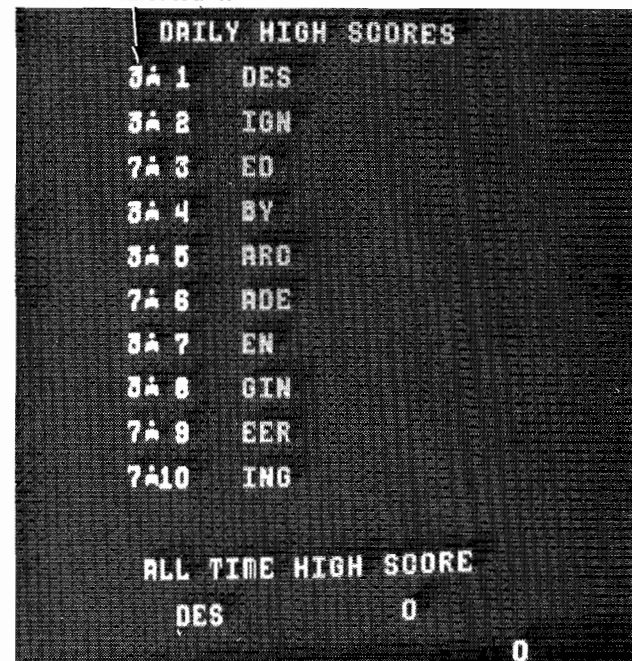


Figure 3-12 Rankings Display

**NOTE:** If you don't tell the game you are through printing out your initials as instructed above, the game will automatically go into the RANKINGS display after a short wait.

After the High Score/Initial mode, the game will either go to the Attract mode (if there are no more credits left in its memory) or into the Ready-To-Play mode (if there are still credits left in its memory).

17. Most of the above holds true in the "2 PLAYER" mode also. But there are a few minor differences.

## **TWO PLAYER OPERATION**

The Upright, Mini, and Cocktail Table models all have two player operation.

In the two player mode, the rules of play are the same as in the single player mode. There are some additional rules, however.

1. In the Upright and Mini models, the players must take turns at the controls.
2. In the Cocktail Table model, each player has his own set of individual controls. The picture will flip to face you when it is your turn. (When it is not your turn, your set of controls will have **NO** effect on the game.)
3. Your turn lasts until your Ship is destroyed. At this point, the game will do one of several things depending on whether or not the destroyed Ship was your last or if you still have others remaining in reserve.

### **DESTROYED SHIP — OTHERS REMAINING IN RESERVE**

- The game stops and "PLAYER \_\_\_\_ UP" is displayed on the screen.
- Next, the other player's Ship and Fuzor pattern appear on the monitor screen and game play begins for the other player.

### **DESTROYED SHIP — NO OTHERS REMAINING IN RESERVE**

- Game displays: "GAME OVER" "PLAYER \_\_\_\_" on the monitor screen.
- After the above display, if your score was high enough, it goes to the "HIGH SCORE/INITIAL" mode.

After this mode, "PLAYER \_\_\_\_ UP", the other player's Ship, and Fuzor pattern appear on the monitor screen. Play then begins for the other player.

If your score was **NOT** high enough to cause the game to go into the "HIGH SCORE/INITIAL" mode, the game will just display "PLAYER \_\_\_\_ UP", the other player's Ship, and Fuzor pattern on the monitor screen. Play then begins for the other player.

# IV. Maintenance and Repair

Your **NEW** game needs certain types of maintenance to keep it in good working order. **CLEAN**, well **MAINTAINED** games **attract players** and **EARN MORE PROFITS**.

The most important thing for you to remember is to run the Self-Test **EVERY TIME** you collect money from the coin box. **JUST LOOKING** at your game **WILL NOT** tell you if all its controls and inside parts are working correctly. The Self-Test will inform you whether or not your game is working the way it should.

The second most important thing you should remember is to clean the outside of the game and coin acceptor mechanisms on a regular basis.

## CLEANING

The outside of the game cabinet plus the metal can be cleaned with any non-abrasive household cleaner. However, the front of the T.V. monitor tube and **both sides** of all other glass and plastic on or in the game **MUST** be cleaned with anti-static cleaner **ONLY**. For cleaning the coin acceptors: hot soapy water may be used on the plastic ones and any household cleanser may be used on the metal ones. If you wish, special coin machine cleaners that leave no residue may be purchased from your distributor.

**DO NOT** dry-wipe any of the plastic panels. This is because any dust that was on them can scratch their surfaces. If this has happened, anyone looking through this type of damaged plastic would feel he was looking at the game through a fog. This fogging

damage **CANNOT** be repaired or reversed. The **ONLY** solution is to **replace** the damaged piece of plastic.

## FUSE REPLACEMENT

This game contains several fuses located as shown in Figure 4-1.

### 1. UPRIGHT MODEL:

As viewed from the back, facing the cabinet, with the rear access door removed; the fuses are located on the Mech. Panel and the Power Supply Board.

### 2. MINI MODEL:

As viewed from the back, facing the cabinet, with the rear access door removed; the fuses are located on the Mech. Panel and the Power Supply Board.

### 3. COCKTAIL TABLE MODEL:

As viewed from the coin door side of the cabinet, with the monitor tilted open to one side; the fuses are located on the Mech. Panel and the Power Supply Board.

Replace fuses **ONLY** with the type and size listed in the Illustrated Parts Breakdown Section of this manual.

See the T.V. Monitor Manual (available on request from your distributor or the monitor manufacturer) and/or the T.V. Troubleshooting Section of this manual for information on these fuses.

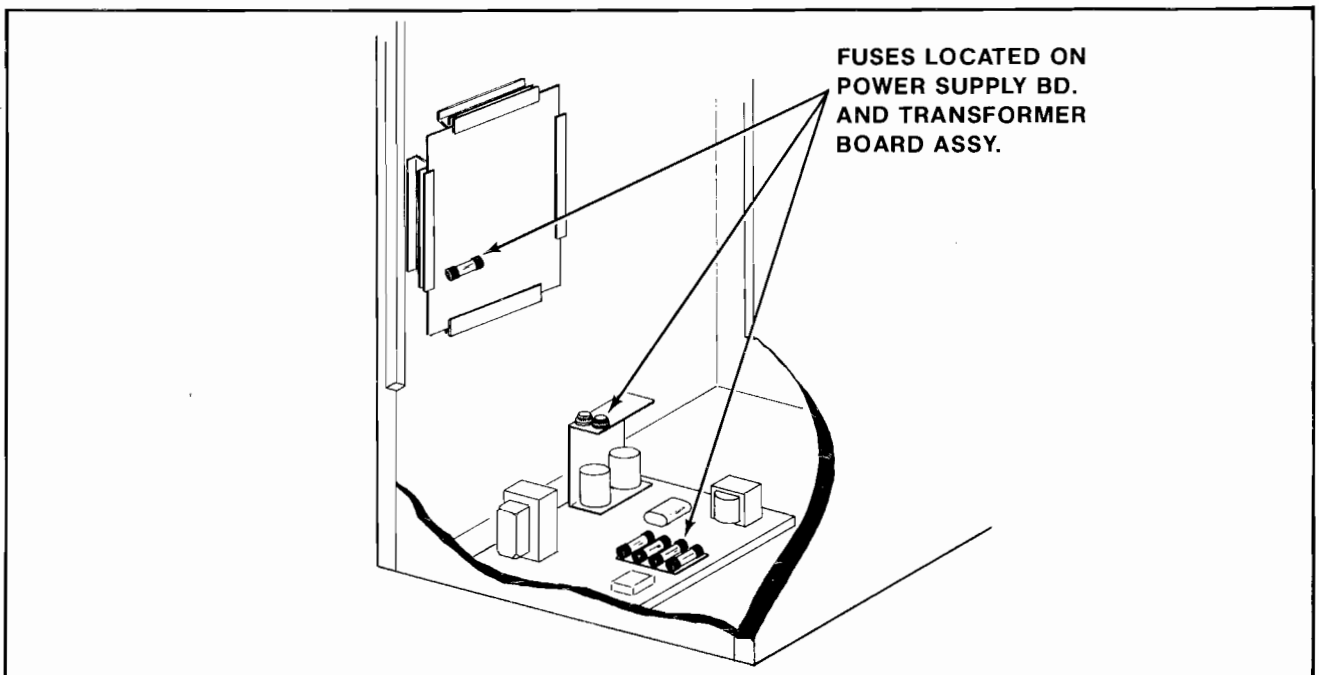


Figure 4-1 Location of Fuses

## OPENING THE CONTROL PANEL

### 1. UPRIGHT MODEL: See Figure 4-2.

- The control panel is held in place by two latches, one on the left side and one on the right side of the cabinet.

They are spring loaded to provide constant positive pressure on their latch plates.

They can be reached through the coin door **AFTER turning power to the game off.**

To release the latches, lift up and toward the front center of the control panel.

Once they are released, unhook them from their latch plates.

- To remove the control panel:  
Raise it up and tilt it toward you until you can see the cable behind it.  
Cradling the control panel between yourself and the cabinet, disconnect it from its cabling.  
The control panel is now free and can be removed.
- To reinstall the control panel, reverse this procedure.

### 2. MINI MODEL: See Figure 4-2.

- The control panel is held in place by two latches, one on the right side, and one on the left side of the cabinet.

They are spring loaded to provide constant positive pressure on their latch plates.

They can be reached through the coin door **AFTER turning power to the game off.**

To release the latches, lift up and toward the center of the control panel.

Once they are released, unhook them from their latch plates.

- To remove the control panel:  
Raise it up and tilt it toward you until you can see the cable behind it.  
Cradling the control panel between yourself and the cabinet, disconnect it from its cabling.  
The control panel is now free and can be removed.
- To reinstall the control panel, reverse this procedure.

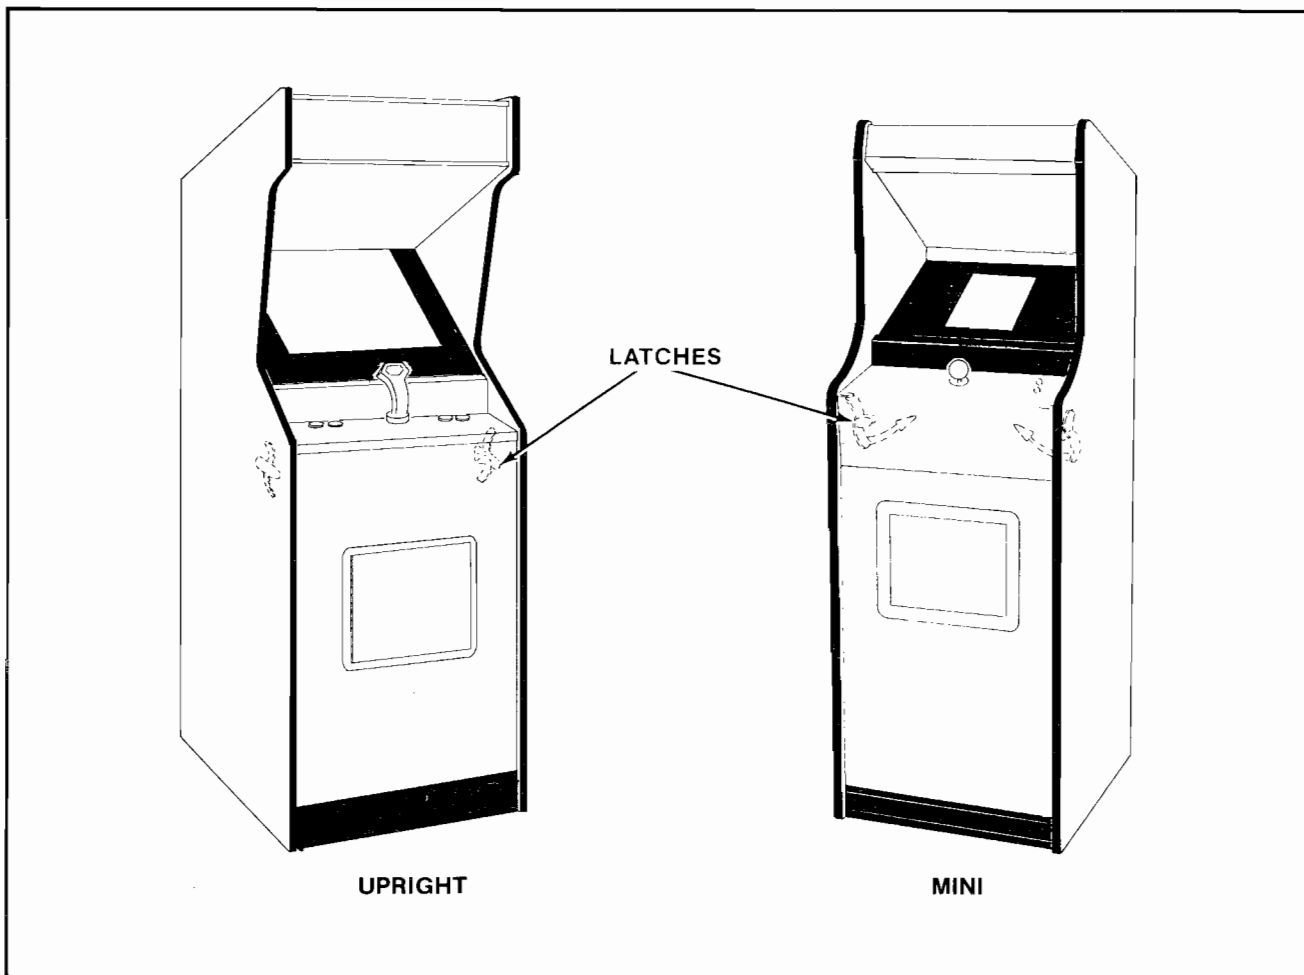


Figure 4-2 Opening the Control Panel — Upright & Mini

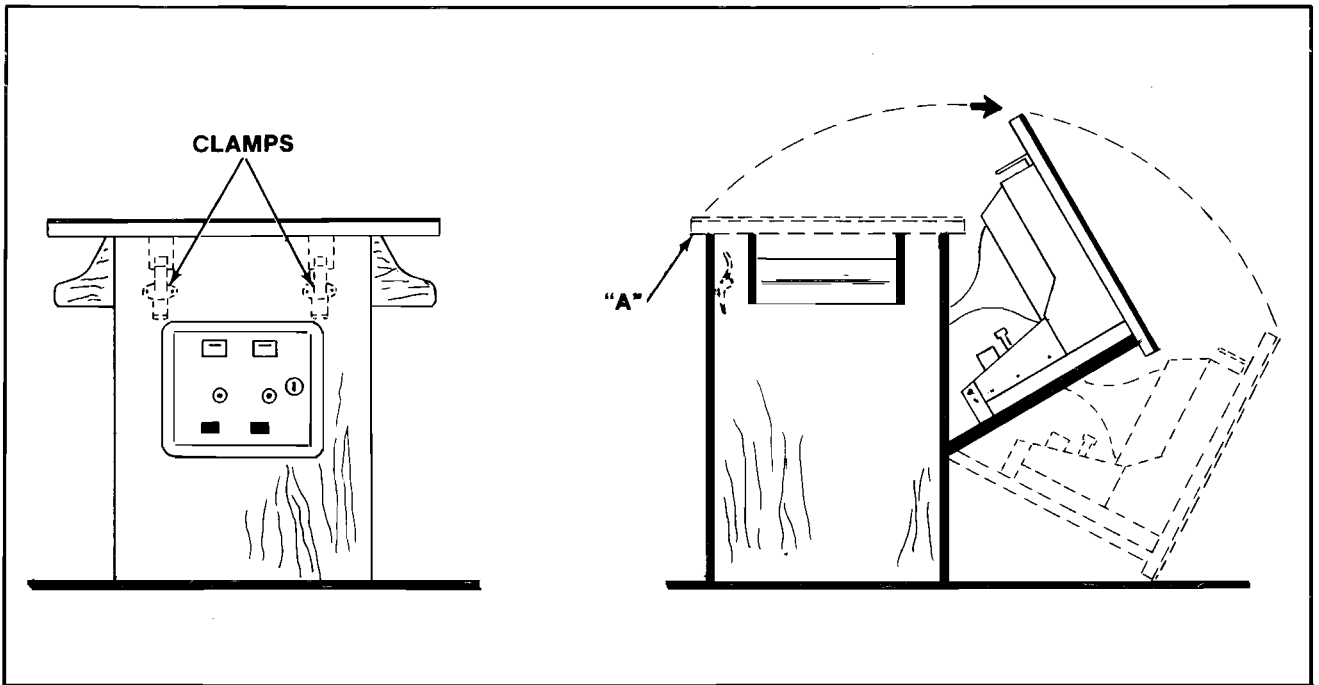


Figure 4-3 Opening the Cocktail Game

### 3. COCKTAIL TABLE MODEL:

- Each control panel is held in place by several screws, two on the inside of the cabinet and three along the outside bottom edge of the control panel.

**Turn power to the game off.**

Open the coin box door and release the two latches indicated in Figure 4-3.

**CAUTION: The right hand latch is very close to the HIGH VOLTAGE on the monitor. BE CAREFUL!!**

Once they're released, unhook them from their latch plates.

Grasp the table top at "A" and open it as indicated in Figure 4-3.

**CAUTION: Due to the weight of the monitor, EXTREME CARE MUST be taken when opening the cabinet.**

Remove the screws which secure the control panel in place. See Figure 4-4.

- To remove the control panel(s):  
Disconnect it from its cabling.  
The control panel is now free and can be removed.
- To reinstall the control panel, reverse this procedure.

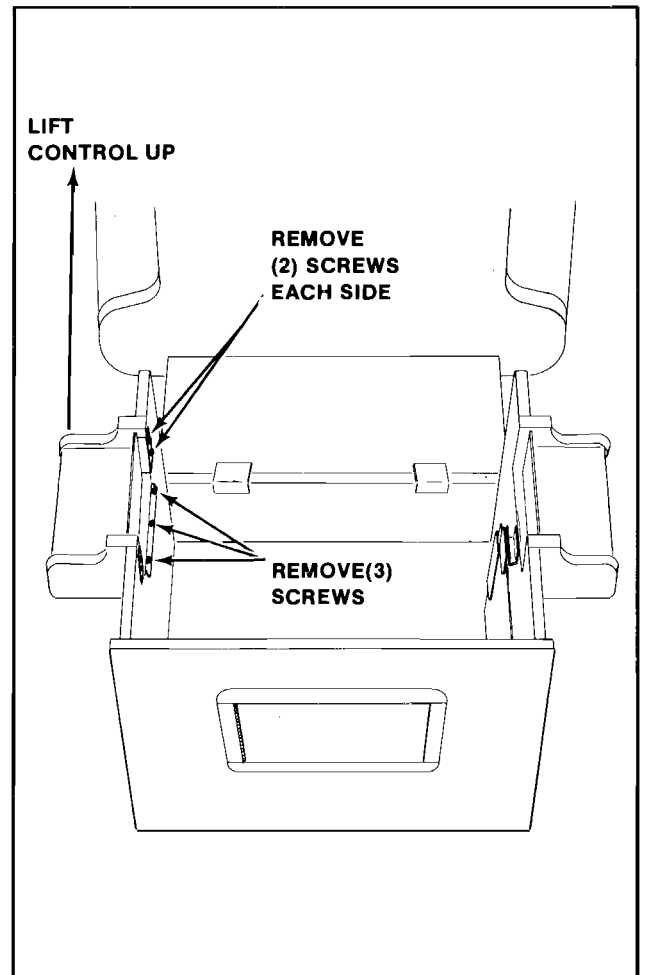


Figure 4-4 Removing the Control Panel — Cocktail

## REMOVAL OF THE MAIN-DISPLAY-GLASS AND/OR THE T.V. BEZEL ASSEMBLY

### 1. UPRIGHT MODEL:

**NOTE:** In order to do this, the control panel **MUST** be removed first. See the "Upright Model" procedure.

- Turn the power to the game off and remove the control panel.
- Remove the screws which secure the glass clamping plate. See Figure 4-5.
- Lift out the glass clamping plate. This frees the main-display-glass so it can be lifted up.
- By putting your finger in the hole in the middle of the main-display-glass support, you can lift it up and out. See Figure 4-5.
- Loosen the screws which secure the T.V. bezel-glass-clamps in place. Move the clamps to the side and the bezel glass may be removed. Remove the above mentioned screws and the bezel with four bezel-glass-clamps may be removed.

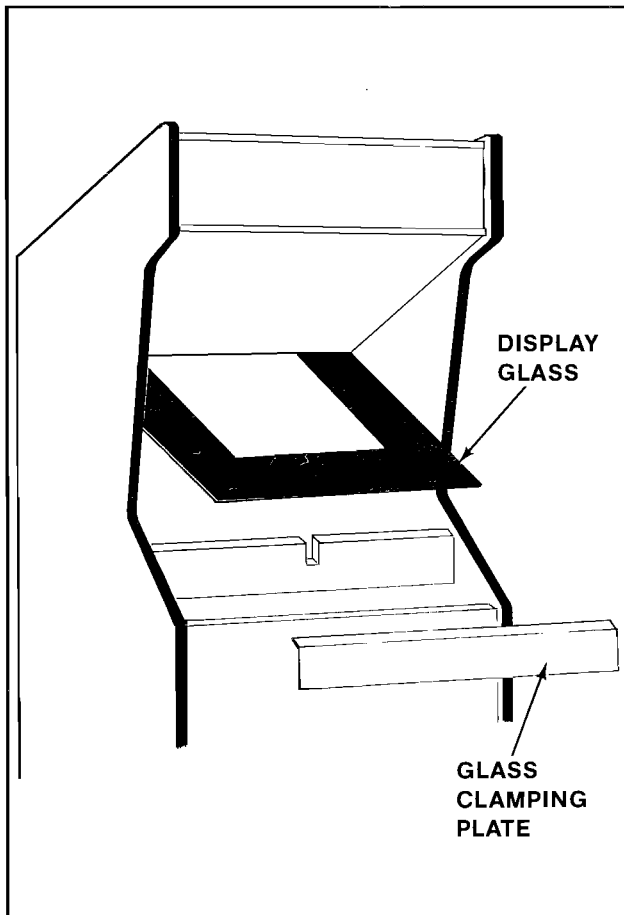


Figure 4-5 Removing the Main Display Glass & T.V. Bezel — Upright

- To reinstall the T.V. bezel assembly and the main-display-glass, reverse this procedure.

### 2. MINI MODEL:

**NOTE:** In order to do this, the control panel **MUST** be removed first. See above "Mini Model" procedure.

- Turn the power off to the game and remove the control panel.
  - Remove the screws which secure the glass clamping plate. See Figure 4-6.
  - Lift out the glass clamping plate. This frees the main-display-glass so it can be lifted up.
  - By putting your finger in the hole in the middle of the main-display-glass support, you can lift it up and out. See Figure 4-6.
  - Remove the screws which secure the T.V. bezel assembly and lift it out. See Figure
- NOTE:** Use the hole in the center of the main-display-glass support to grasp it.
- Reverse this procedure to reinstall the T.V. bezel assembly and the main-display-glass.

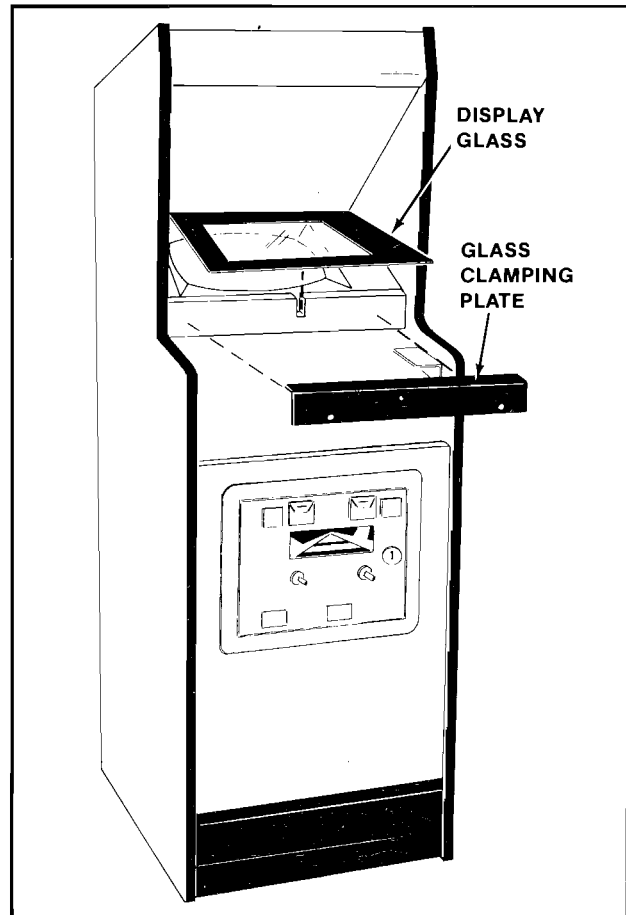


Figure 4-6 Removing the Main Display Glass & T.V. Bezel — Mini

### 3. COCKTAIL TABLE MODEL: See Figure 4-7.

**NOTE:** This may be done with the table top in the closed or the open position. If you decide to open the table top, **TURN THE POWER TO THE GAME OFF FIRST.**

- Remove the screws which secure the table top glass clamps in place.
- Remove the table top glass.
- Lift out the T.V. bezel assembly.
- To reinstall the T.V. bezel assembly and the table top glass, simply reverse this procedure.

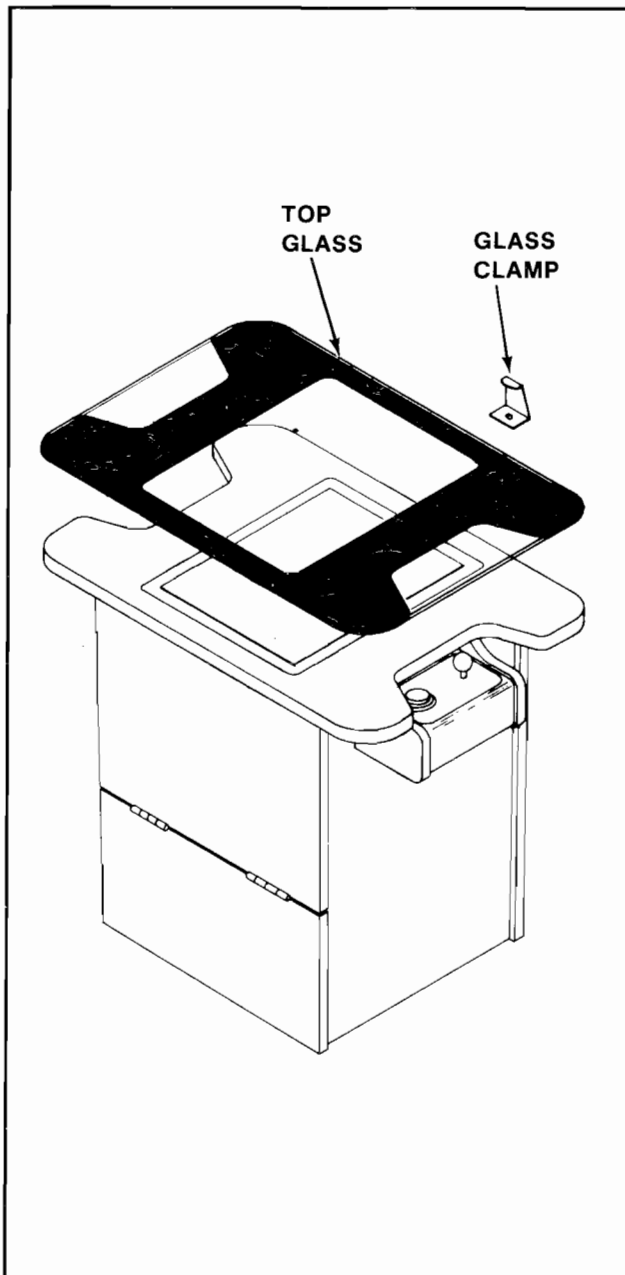


Figure 4-7 Removing the Top Glass & T.V. Bezel — Cocktail

## T.V. MONITOR REPLACEMENT

**CAUTION:** High voltages may exist in any television unit, even with the power disconnected. Use **EXTREME CAUTION** and do not touch electrical parts or the T.V. yoke area with your hands or with metal objects held in your hands!

In addition, **BE SURE TO USE HEAVY GLOVES** when handling the monitor. You could cut your hands on the metal T.V. chassis without such protection.

**DANGER:** The T.V. monitor **DOES NOT** contain an isolation transformer on its chassis (it is mounted instead on the floor of the cabinet). When servicing the monitor on a test bench, **YOU MUST ISOLATE THE MONITOR FROM AC VOLTAGE WITH AN ISOLATION TRANSFORMER.**

### 1. UPRIGHT MODEL: See Figure 4-8.

- Turn power off to the game.
- Open the rear access door.
- Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**
- Before removing the T.V. monitor, the main-display-glass must be removed. See above "Upright Model" procedure.
- With the removal of only four bolts, the T.V. monitor will be loose.

**CAUTION:** **BE SURE** to support the T.V. monitor from the rear while removing the four bolts so it will not fall out of the cabinet.

- The monitor mounting bars slide on top of and against two metal guides mounted to the cabinet's right and left sides. The monitor is removed by sliding it out the back of the cabinet. See Figure 4-8.
- To reinstall the T.V. monitor, reverse this procedure.
- After replacing the T.V. monitor, be sure to run the game Self-Test.

### 2. MINI MODEL:

- Turn the power off to the game.
- Open the rear access door.
- Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**
- Before removing the T.V. monitor, the main-display-glass and bezel must be removed. See above "Mini Model" procedure.

- With the removal of only four bolts, the T.V. monitor will be loose.

**CAUTION: BE SURE to support the T.V. monitor from the rear while removing the four bolts so it will not fall out of the cabinet.**

- The monitor is removed by supporting it and pulling straight back as shown in Figure 4-9. (BE CAREFUL not to hit monitor on its rear support bracket.)
- To reinstall the T.V. monitor, reverse this procedure.
- After replacing the T.V. monitor, be sure to run the game Self-Test.

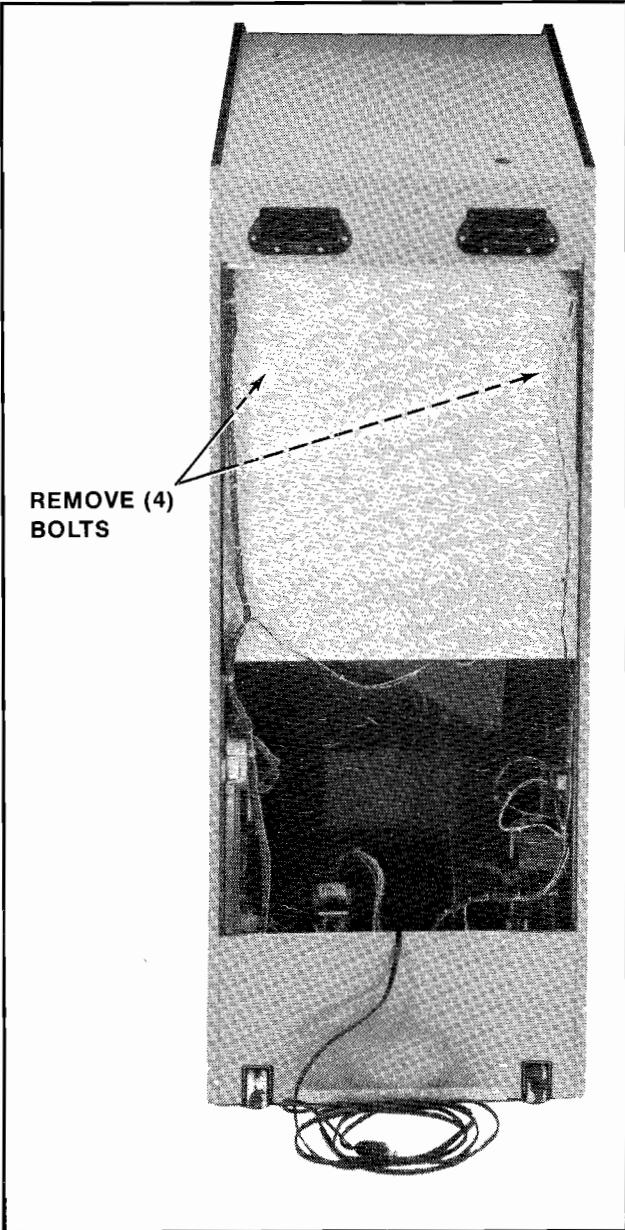


Figure 4-8 Removing the Monitor — Upright

**3. COCKTAIL TABLE MODEL:**

- Turn the power off to the game.
- Open the coin box door and release the two latches indicated in Figure 4-10.

**CAUTION: The right hand latch is very close to the HIGH VOLTAGE on the monitor. BE CAREFUL!!**

- Once the latches are released, unhook them from their latch plates.
- Grasp the table top at "A" and open it as indicated in Figure 4-10.

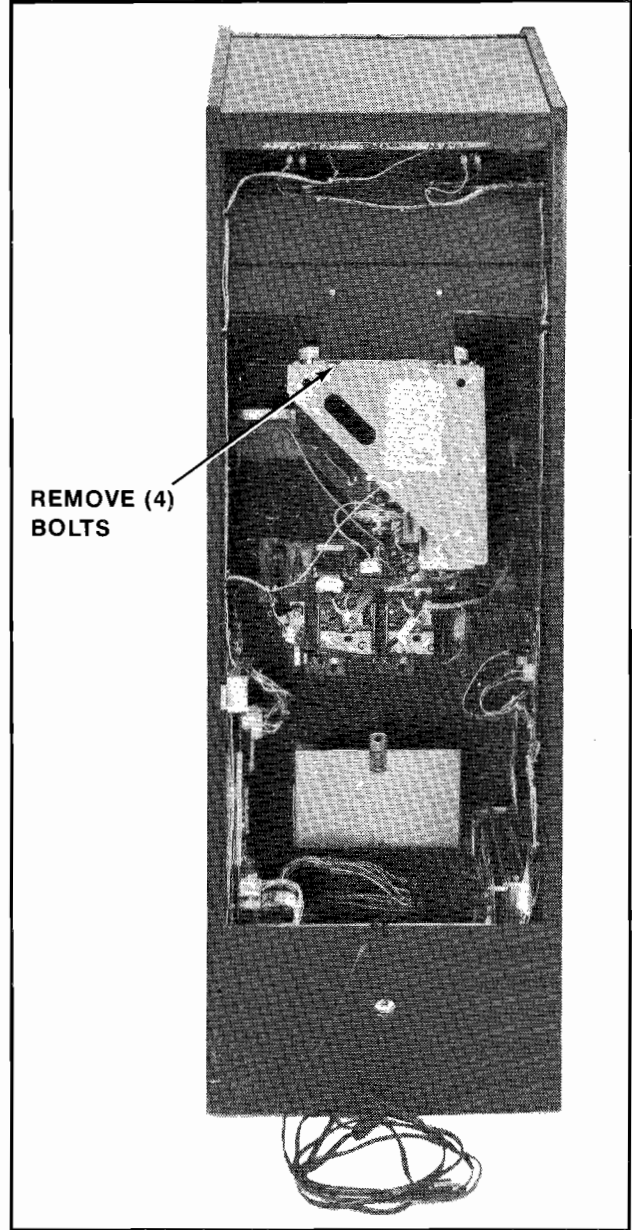


Figure 4-9 Removing the Monitor — Mini

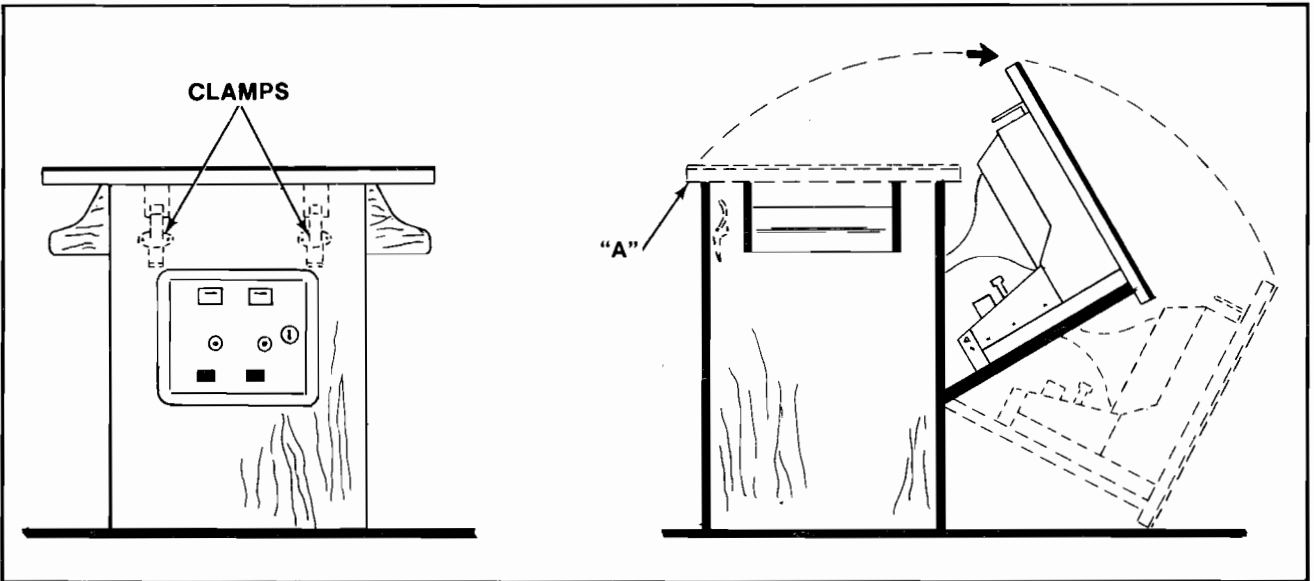


Figure 4-10 Opening the Cocktail Game

**CAUTION: due to the weight of the monitor, EXTREME CARE MUST be taken when opening the cabinet.**

- Remove the screws which hold the table top glass clamps in place.
- Remove the table top glass.
- Lift out the T.V. bezel assembly.
- Completely disconnect the T.V. monitor from all its cabling. **DON'T FORGET THE CHASSIS GROUND WIRE.**
- Remove the screws holding the T.V. monitor chassis to the "L" brackets by the door hinge(s). See Figure 4-11.
- Close the Cocktail Table and re-latch it.
- Remove the screws which secure the T.V. monitor mounting brackets to the edges of the slot cut in the table top. See Figure 4-11.
- Pry up the end of each monitor mounting bracket with a screwdriver or similar tool until you can grasp them both.
- Lift the T.V. monitor straight up and out of the table top being very careful not to bump the neck of the picture tube.
- To reinstall the T.V. monitor assembly, reverse this procedure.
- Be sure to check the clearance of the "L" brackets **BEFORE** setting the monitor into the table top.
- After replacing the T.V. monitor, be sure to run the game Self-Test.

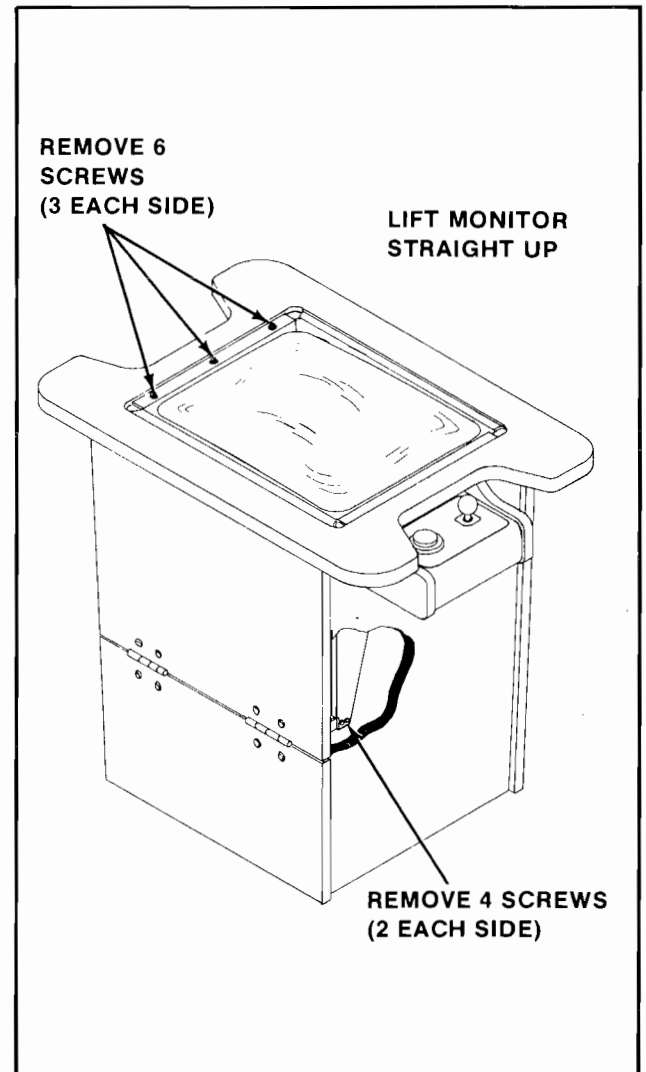


Figure 4-11 Removing the Monitor — Cocktail

## PRINTED CIRCUIT BOARD (P.C.B.) REPLACEMENT

### 1. UPRIGHT MODEL: See Figure 4-12.

- Turn the power to the game off.
- Unlock and open the rear access door.
- Disconnect all cabling from the P.C. boards and lift them out of their card rack.
- Disconnect the linear power supply board from all its cabling, remove the P.C.B. supports indicated in Figure 4-12, and slide the linear power supply board out the back of the cabinet.

- To reinstall the above P.C.B.'s, reverse this procedure.

**NOTE: P.C.B.'s are all keyed and will ONLY fit into their connectors one way without forcing them. The plugs on the cable harness which connect it to the P.C.B.'s are also keyed and will ONLY go onto their connectors one way without forcing them.**

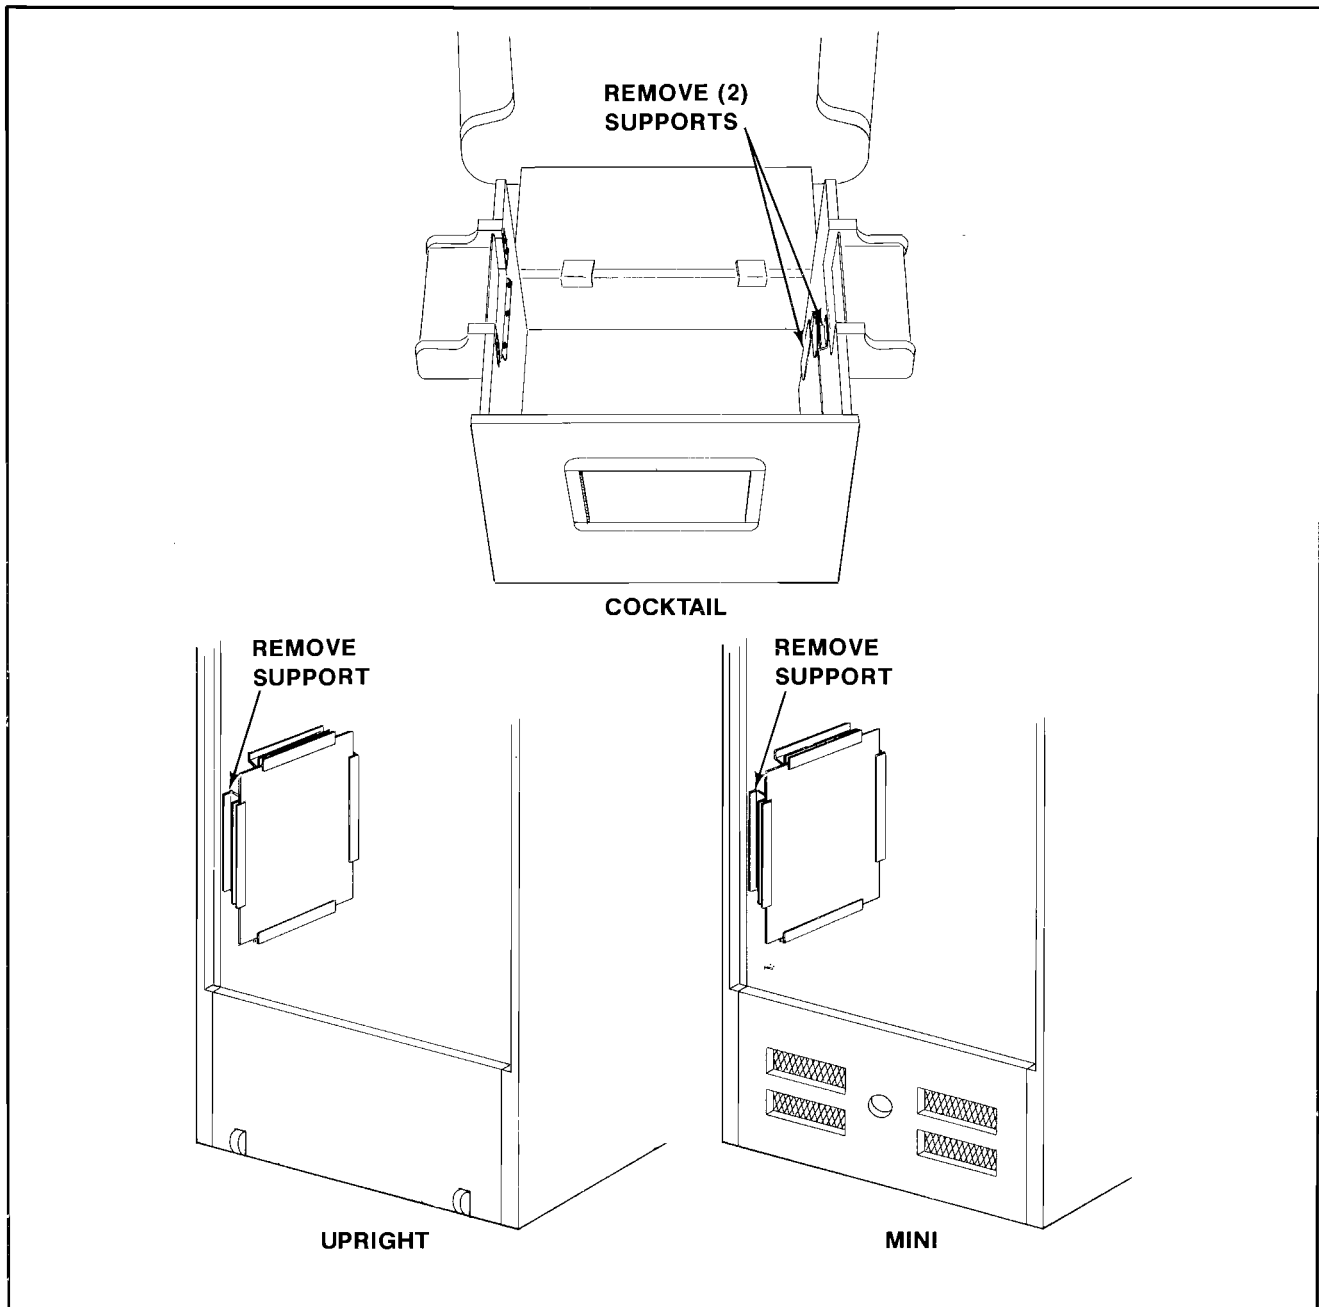


Figure 4-12 Removing P.C.B.s

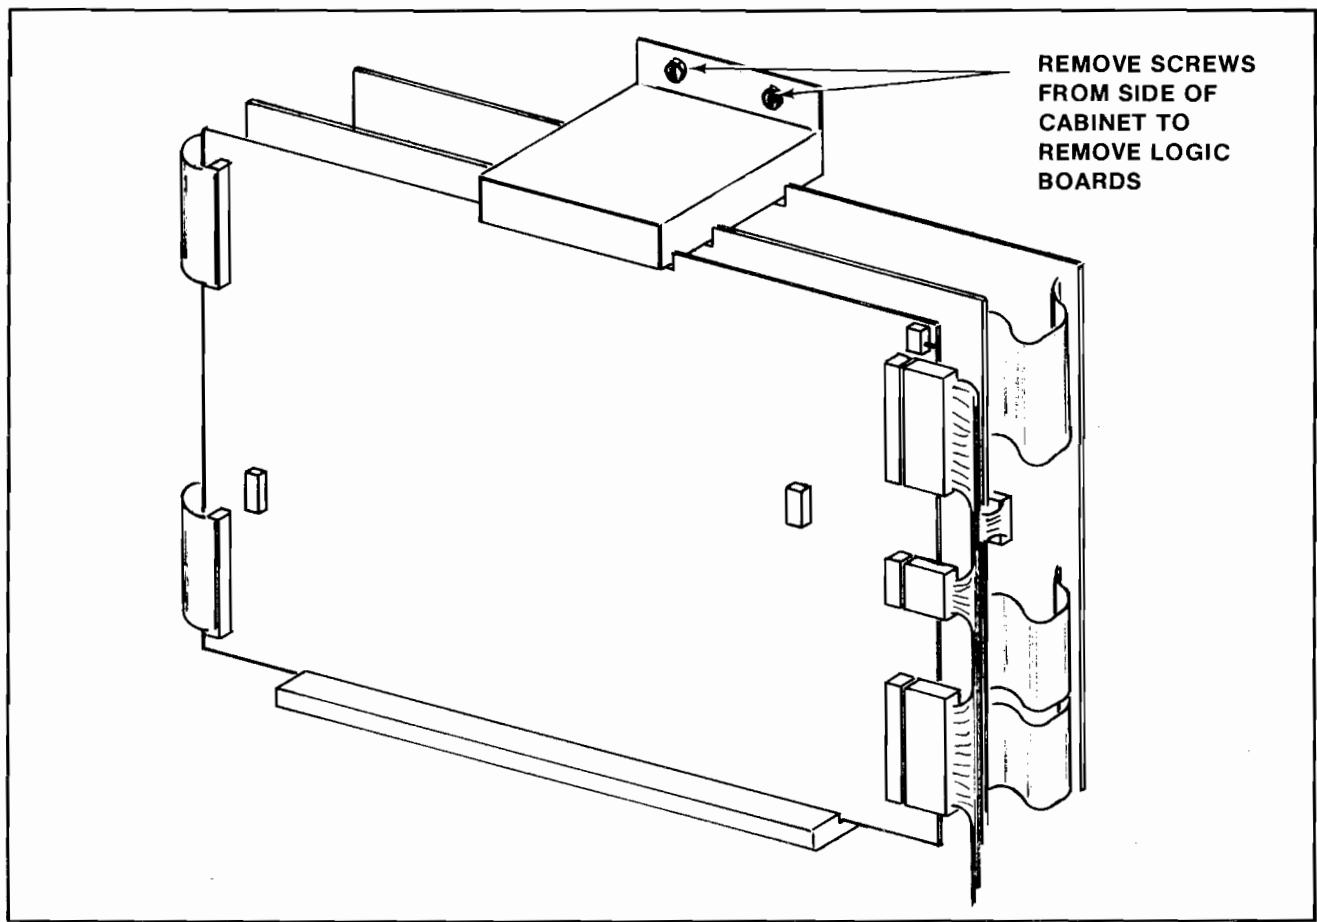


Figure 4-13 Removing P.C.B.s from Card Rack

**2. MINI MODEL:** See Figure 4-12.

- Turn the power off to the game.
- Unlock and open the rear access door.
- Disconnect all cabling from the P.C. boards and lift them out of their card rack.
- Disconnect the linear power supply board from all its cabling, remove the P.C.B. supports indicated in Figure 4-12, and slide the linear power supply board out the back of the cabinet.
- To reinstall the above P.C.B.'s, reverse this procedure.

**3. COCKTAIL TABLE MODEL:** See Figure 4-12.

- Turn the power off to the game.
- Open the cabinet:  
Open the coin box door and release the two latches indicated in Figure 4-10.

**CAUTION: The right hand latch is very close to the HIGH VOLTAGE on the monitor. BE CAREFUL!!**

Once they're release, unhook them from their latch plates.

- Grasp the table top at "A" and open it as indicated in Figure 4-10.

**CAUTION: Due to the weight of the monitor, EXTREME CARE MUST be taken when opening the cabinet.**

- Remove the linear power supply board. See Figure 4-12.  
Disconnect it from all its cabling.  
Remove the two smallest P.C.B. supports.  
Once these are removed, the linear power supply can be lifted out the top of the cabinet.  
To reinstall the linear power supply board, reverse this procedure.
- To remove the P.C. boards from the card rack. See Figure 4-13.  
Disconnect them from ALL their cabling.  
The P.C. boards are now free and can be slid from their rack.  
To reinstall the P.C. boards, reverse this procedure.

## OPENING THE ATTRACTION PANEL

### 1. UPRIGHT MODEL:

- Turn the power to the game off.

- Opening the attraction panel:

Remove the screws which secure the top bracket in place. (They are on its top side.) See Figure 4-14.

Remove the top bracket and slide up the attraction panel. This exposes the speaker board assembly on which is mounted the speakers, the fluorescent and black light tubes, and their mounting bracket assemblies. See Figure 4-14.

To reinstall the attraction panel, reverse this procedure.

- The fluorescent light tube may be replaced at this time. BE CAREFUL NOT TO DROP IT.

**WARNING: If you drop a fluorescent tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any fluorescent tube.**

- Replacing the fluorescent light tube starter. See Figure 4-15.

**Be sure the power to the game has been turned off.**

Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

To replace the fluorescent light tube starter, reverse this procedure.

- The ultraviolet light tube may be replaced at this time by removing the rear access door of the game and the back scenery panel if necessary. See Figure 4-16. BE CAREFUL NOT TO DROP IT.

**WARNING: If you drop an ultraviolet light tube and it breaks, IT WILL IMplode! Shattered glass can fly six (6) feet or more from the implosion. Use care when replacing any ultraviolet tube.**

- Replacing the ultraviolet light tube starter. See Figure 4-15.

**Be sure the power to the game has been turned off.**

Grasp the starter (it is on the back of the mounting bracket), give it a quarter turn, and remove it from its socket.

To replace the ultraviolet light tube starter, reverse this procedure.

- Removing the speaker board assembly:

The attraction panel, the rear access door of the game, and, if necessary, the back scenery panel **MUST** be removed first. This will enable you to

reach all the necessary areas where cables **MUST** be disconnected.

Disconnect the speaker board assembly from all its cabling. There is one plug at the upper right and upper left corners of the rear of the cabinet. There is also a small plug right at the ON/OFF switch. And **DO NOT FORGET TO DISCONNECT THE GROUND WIRE LUG FROM THE ON/OFF SWITCH!**

Remove the screws which secure the speaker board assembly to the cabinet.

The speaker board assembly is now free and can be slid out through the hole in the front of the game where the attraction panel was mounted.

To reinstall the speaker board assembly, reverse this procedure.

- Replacement of the fluorescent and ultraviolet tube mounting bracket assemblies.

Disconnect it from its power cable.

Remove the screws which secure them to the speaker board assembly.

To reinstall the fluorescent ultraviolet tube mounting bracket assemblies, reverse this procedure.


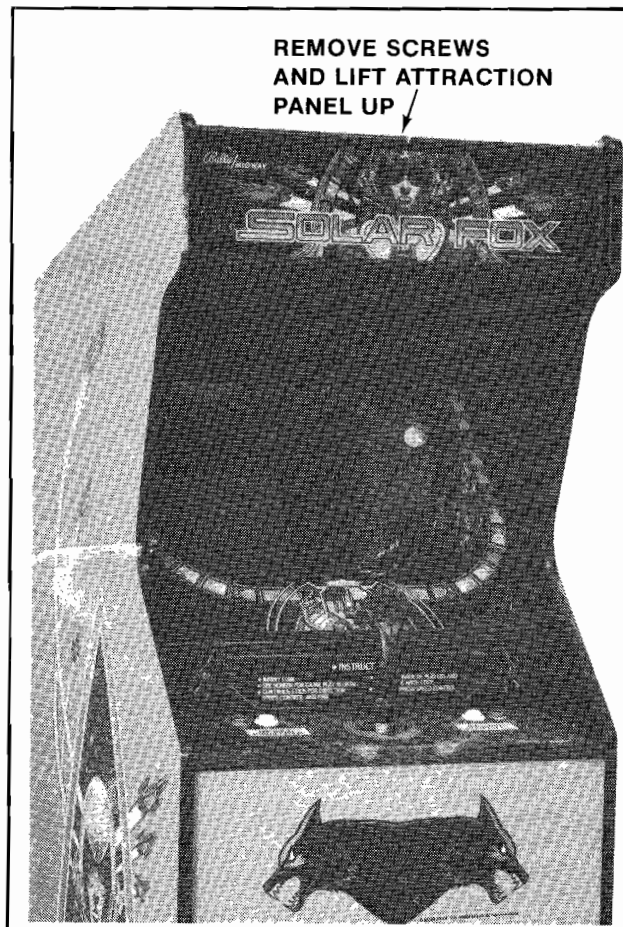


Figure 4-14 Opening the Attraction Panel — Upright

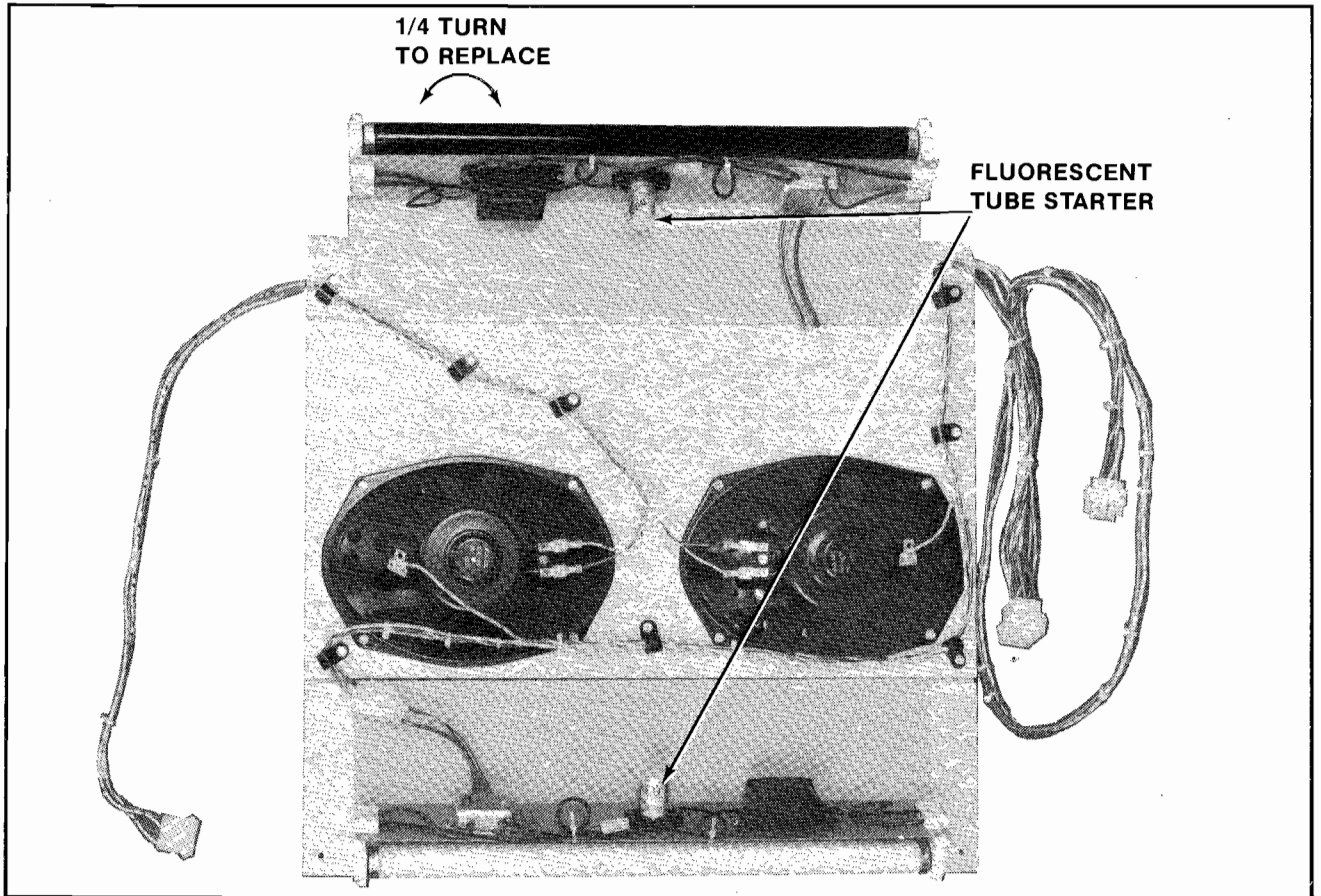


**Figure 4-15 Replacing Fluorescent Tube Starter**

- Replacing the speaker(s).  
Disconnect the speaker(s) from its cabling. Remove the nuts and bolts which secure the speaker in place and set them aside. Once they bolts which secure the speaker(s) in place are removed, the speaker(s) may be removed from the speaker board assembly. Reverse this procedure to reinstall the speaker(s).

**2. MINI MODEL.** See Figure 4-17.

- **Turn the power off to the game.**
- Remove the screws from the top and bottom of the formed attraction panel.
- Remove the formed attraction panel by pulling it straight away from the cabinet. This exposes the attraction panel light bulbs and their mounting board.
- To service the light bulbs and their mounting board:  
Turn the power to the game back on so you can see which bulbs are burnt out. Mark the burnt out bulbs and turn the power to the game back off again.

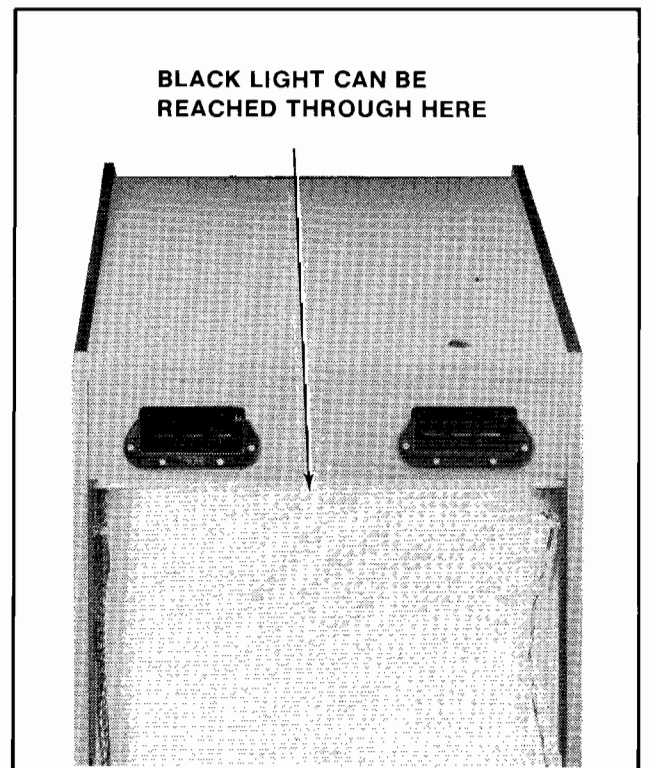

**Figure 4-16 Replacing Black Light**

To replace the burnt out bulbs, grasp them gently and pull straight out.

The new bulbs are gently pushed into the empty sockets.

To completely replace the light bulb mounting board:

Open the cabinet rear access door and unplug the mounting board from its power cable.

Remove the screws that hold the mounting board to the cabinet.

Gently slide the mounting board out the front of the cabinet being careful not to catch its cable on anything.

To reinstall the above removed items, reverse this procedure.

- To replace the speaker.

**Be sure the power is off to the game.**


Disconnect the speaker from its cabling.

Remove the nuts and bolts securing the speaker.

Slide the speaker out through the rear access door.

To reinstall the speaker, simply reverse this procedure.

### **3. THE COCKTAIL TABLE MODEL HAS NO BACK-LIT ATTRACTION PANEL.**

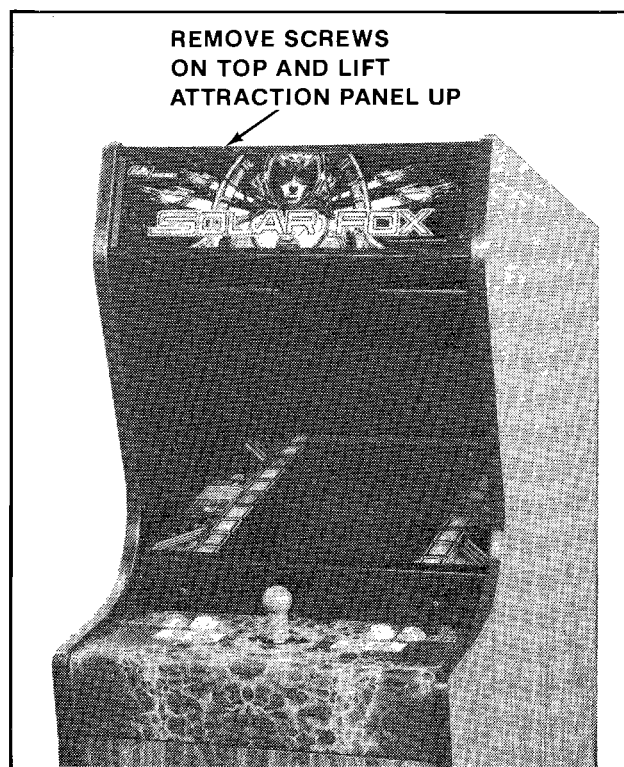

**Figure 4-17 Opening the Attraction Panel — Mini**


## **V Illustrated Parts Breakdown**

**SOLAR FOX — ALL VERSIONS — NOT SHOWN — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
		<b>TRANSFORMER BOARD ASSY.</b>
	MT00-00089-A000	POWER TRANSFORMER — 115V., 60 HZ (UPRIGHT & MINI)
	MT00-00092-0000	TRANSFORMER (UPRIGHT & MINI)
	MT00-00096-0000	POWER TRANSFORMER — 110/125V., 60 HZ (COCKTAIL ONLY)
	MT00-00093-0000	TRANSFORMER W/MAGNETIC SHIELD (COCKTAIL ONLY)
	0017-00101-0628	#8-32 x 3/4 CARRIAGE BOLT (4 REQ'D.)
	0017-00104-0026	#8 FLAT WASHER (4 REQ'D.)
	0017-00103-0008	#8-32 HEX NUT (4 REQ'D.)
	0017-00101-0141	#8 x 11/16 UNSLOT. HEX HD. SCREW (22 REQ'D.)
	0720-00001-0100	1 POS. FUSE CLIP ASSY. (UPRIGHT & MINI)
	0720-00001-0200	2 POS. FUSE CLIP ASSY. ( MINI & COCKTAIL)
	0720-00001-0300	3 POS. FUSE CLIP ASSY. (UPRIGHT & COCKTAIL)
	0017-00003-0002	SLO-BLO FUSE 1/2A., 250V. (UPRIGHT & COCKTAIL)
	0017-00003-0004	SLO-BLO FUSE 2A., 250V. (UPRIGHT—2, MINI—2, COCKTAIL—3)
	0017-00003-0217	SLO-BLO FUSE 2-1/2A., 250V. (ALL)
	A945-00002-0000	125VA. FILTER ASSY.
	A151-00079-0000	115V. CONVENIENCE OUTLET
	A508-00037-0000	2 LEAD TRANSFORMER BD, FILTER ASSY.
	A945-00005-0000	CAPACITOR ASSY. — 60 HZ (UPRIGHT & COCKTAIL)
	A945-00005-0100	CAPACITOR ASSY. — 60 HZ (MINI)
	0017-00003-0379	CAPACITOR CLAMP
	0017-00021-0370	MALE CONNECTOR — 5 TAB
	0017-00021-0624	TERMINAL STRIP (COCKTAIL)
	3010-13106-0000	TERMINAL STRIP (UPRIGHT & MINI)
	3000-17246-0500	5.50 x .350 GROUND STRAP (UPRIGHT)
	3000-17246-0900	48.00 x .350 GROUND STRAP (UPRIGHT)
	3000-17246-1000	36.00 x .350 GROUND STRAP (COCKTAIL)
	3000-17246-1100	30.00 x .350 GROUND STRAP (MINI & COCKTAIL)
	3010-03003-0000	GROUNDING CLIP
		<b>CARD RACK W/BOARDS ASSY.</b>
	A084-90009-A982	CPU BOARD ASSY. (UPRIGHT)
	A084-90009-A580	CPU BOARD ASSY. (MINI & COCKTAIL)
	A084-90908-B982	SOUND BOARD
	A084-91399-A982	VIDEO GENERATOR BOARD (UPRIGHT)
	A084-91399-A580	VIDEO GENERATOR BOARD (MINI & COCKTAIL)
	0017-00042-0208	P.C. BOARD SPACER SUPPORT 1-1/8" LG. (4 REQ'D.)
	0017-00042-0287	P.C. BOARD SPACER SUPPORT 5/8" LG. (4 REQ'D.)
	0017-00101-0085	#6 x 5/16 SLT. HEX HD. SCREW (8 REQ'D.)
	0968-00511-0000	BASE CARD RACK SUPPORT — BLOCK
	0017-00101-0033	#8 x 1-1/4" SLT. HEX HD. SCREW (2 REQ'D.)
	0017-00104-0031	#8 WASHER (2 REQ'D.)
	0968-00510-0000	TOP CARD RACK SUPPORT — BLOCK
	0968-00125-0000	SUPPORT BRKT. TO CABINET SIDE
	0017-00101-0014	#6 x 1/2 SLT. HEX HD. SCREW (2 REQ'D.)

NO. 982 — SOLAR FOX — UPRIGHT — FRONT

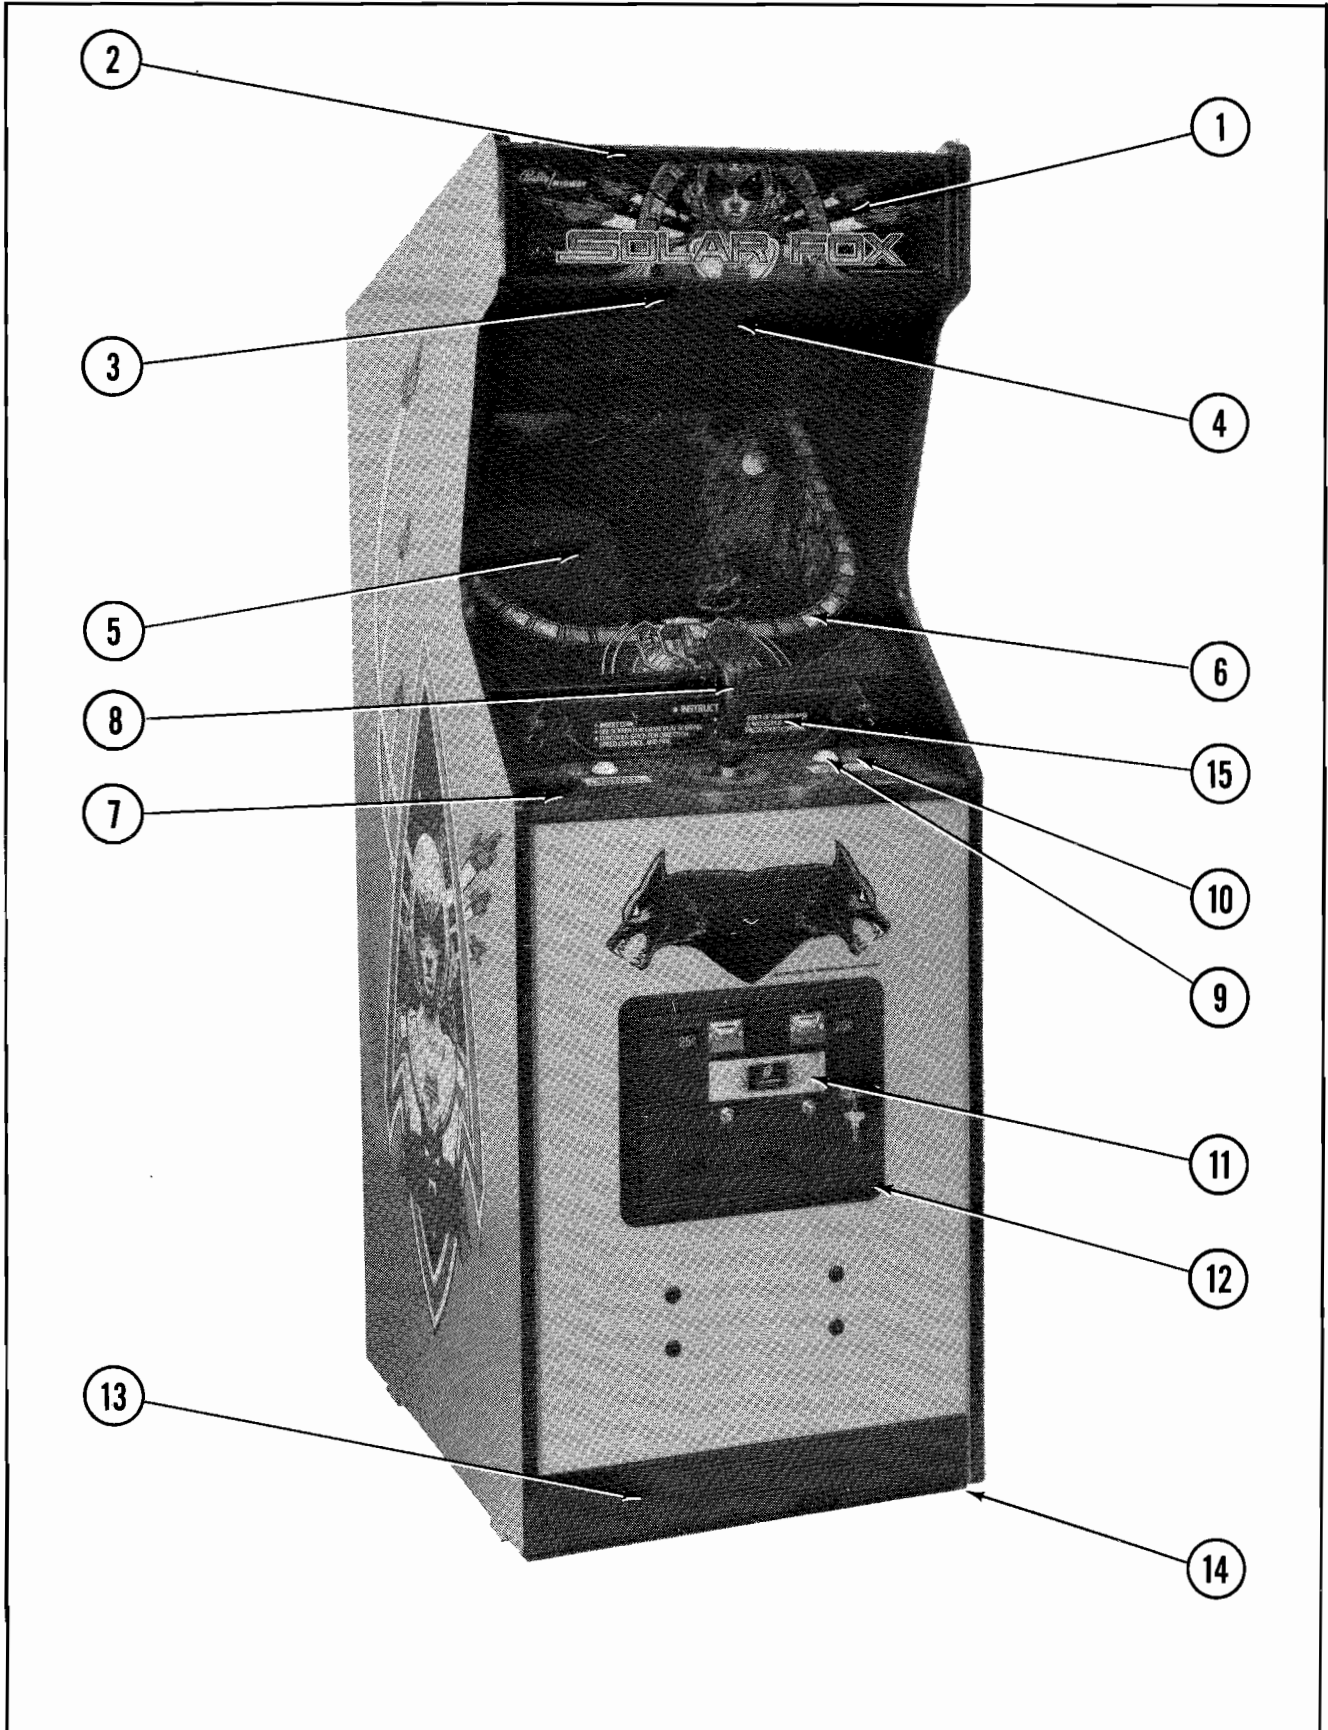


**NO. 982 — SOLAR FOX — UPRIGHT — FRONT — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	0982-00900-00XF 0537-00903-0061	DISPLAY HEADER GLASS CHANNEL 5-5/16 LG. (2 REQ'D.)
2	0508-00104-0000	HEADER RETAINER BRKT. — UPPER
3	0982-00101-00XF 0017-00101-0138	RETAINER/GRILLE #8 x 5/8 TORX TAMPER RESISTANT SCREW (15 REQ'D.)
	0017-00009-0522	LONG ARM KEY T-20 (FOR ABOVE SCREW)
4	A982-00025-0000 A982-00022-0000 A982-00023-0000	SPEAKER BOARD ASSY. A.C. ADAPTOR CABLE ASSY. SPEAKER CABLE ASSY.
5	0982-00902-00XF	MIRROR
6	0982-00905-00XF 0537-00903-0017	MAIN VIEWING GLASS GLASS CHANNEL 18-3/4 LG. (2 REQ'D.)
7	A982-00020-0000 0982-00904-0000 0550-00101-0100 0550-00101-0200 0555-00901-0000 0961-00115-00XF 0017-00009-0033	CONTROL SHELF PLATE ASSY. CONTROL SHELF OVERLAY CONTROL SHELF MTG. BRKT. — RIGHT CONTROL SHELF MTG. BRKT. — LEFT PLASTIC LOCATING PIN (8 REQ'D.) STRIKE (2 REQ'D.) LATCH (2 REQ'D.)
8	A982-00031-0000	CONTROL GRIP ASSY.
9	0017-00042-0301	YELLOW PUSH BUTTON ASSY. (2 REQ'D.)
10	0017-00042-0304 0017-00032-0093 0017-00103-0054	RED PUSH BUTTON ASSY. (2 REQ'D.) PUSH BUTTON SWITCH W/HOLDER (4 REQ'D.) 5/8-11 PAL NUT (4 REQ'D.)
11	A090-00300-11BK	U.S.A. 25¢ COIN DOOR ASSY.
12	0090-00002-04BK 0017-00101-0121	LARGE COIN DOOR FRAME #6-32 x 5/16 PHIL. TRS. HD. SCREW (3 REQ'D.) (MOUNTS COIN DOOR TO FRAME)
13	0935-00906-0100	KICK PLATE
14	0017-00102-0048 0017-00103-0026	3/8-16 x 2" LEG LEVELER (4 REQ'D.) 3/8-16 LEG LEVELER NUTS (4 REQ'D.)
15	0982-00106-00XF 0017-00101-0138	GLASS CLAMPING PLATE #8 x 5/8 TORX TAMPER RESISTANT SCREW (3 REQ'D.)

NO. 982 - SOLAR FOX — UPRIGHT — REAR ACCESS

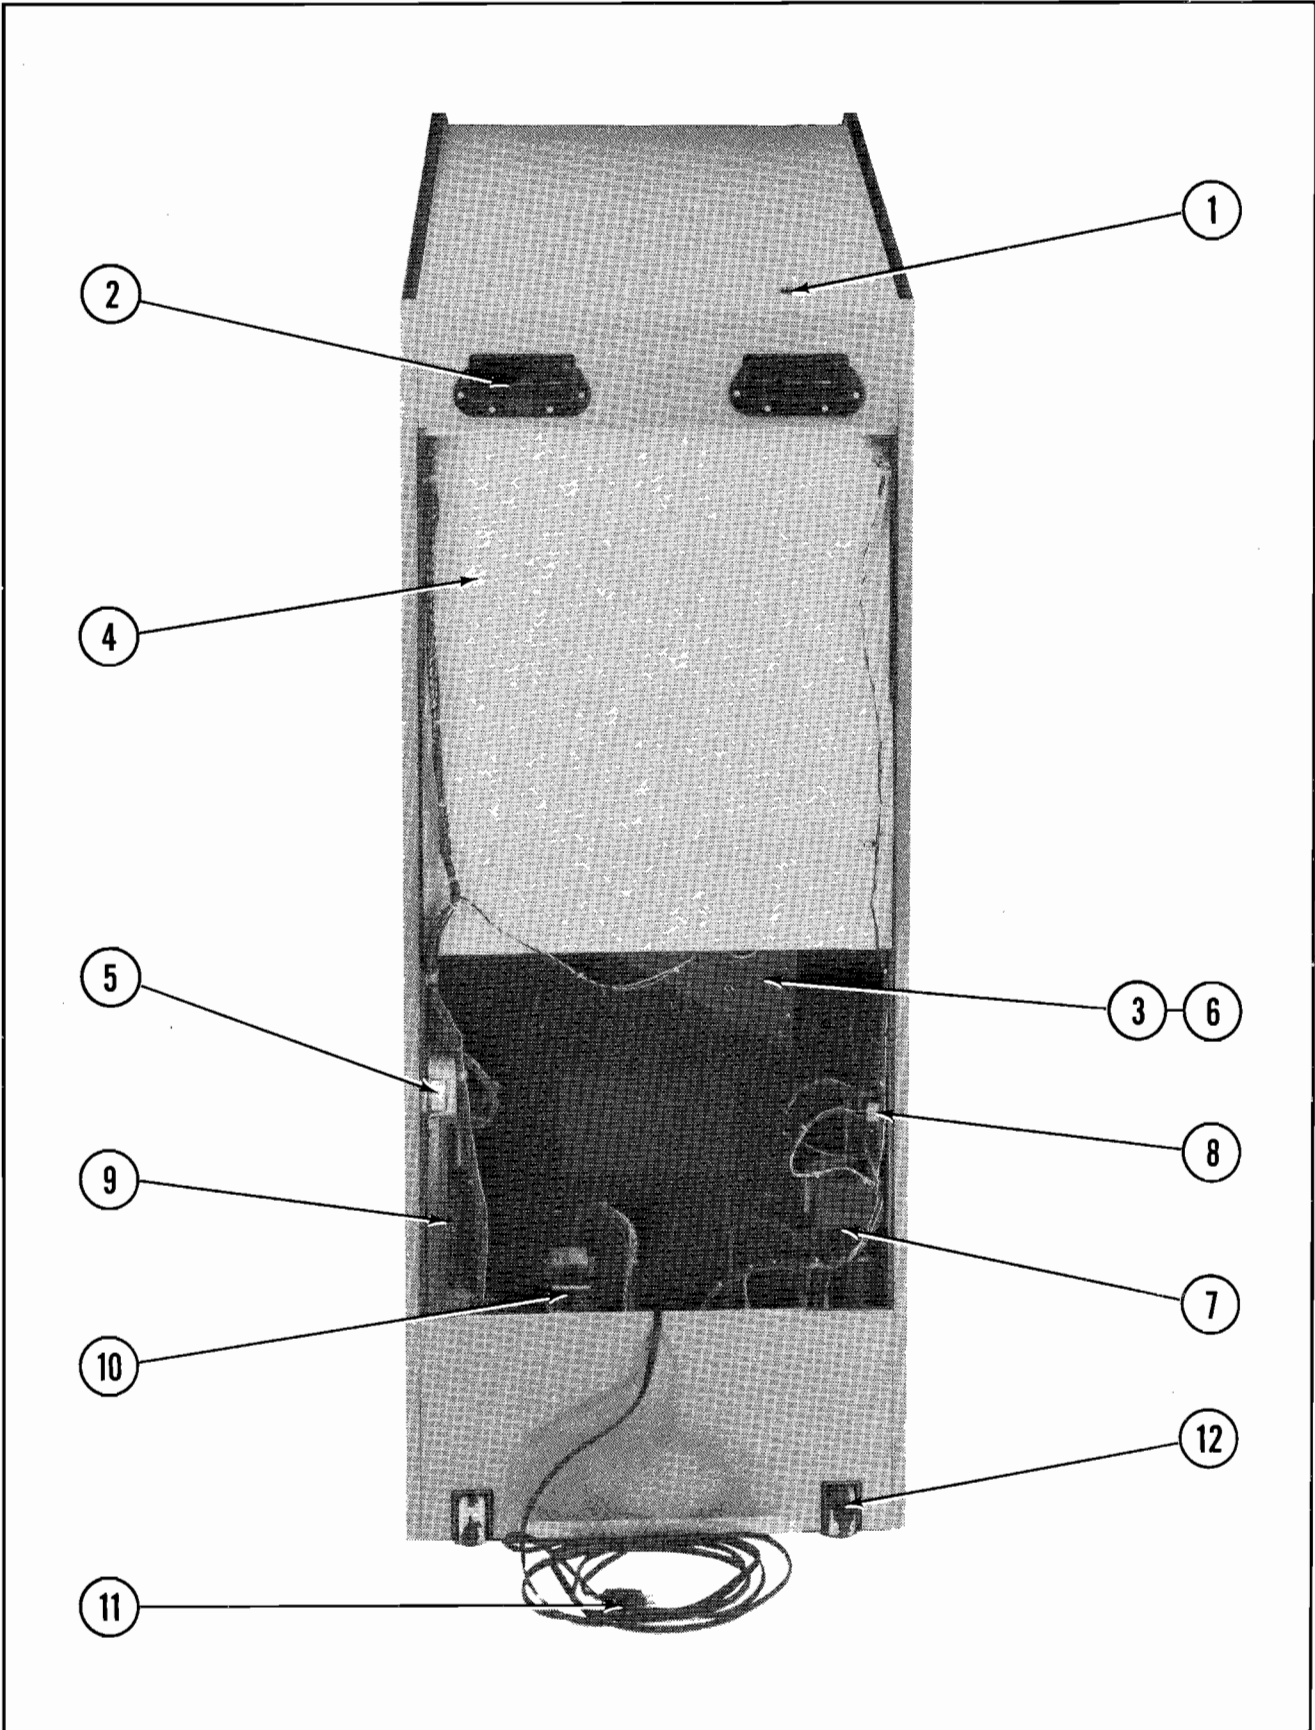

**NO. 982 — SOLAR FOX — UPRIGHT — REAR ACCESS — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	A088-00013-0000	ON/OFF SWITCH AND BRKT. ASSY.
2	0894-00916-0000	PLASTIC PULL AND VENT (2 REQ'D.)
3	0982-00906-0000	MONITOR MASK
	0982-00902-00XF	MIRROR
4	0982-00903-00XF	REAR SCENERY
5	A088-00015-0000	INTERLOCK SWITCH AND BRKT. ASSY.
6	0017-00003-0339	ELECTROHOME — 19" COLOR DUAL SYNC. HORIZ. MTG. MONITOR (OR)
6	0017-00003-0439	WELLS GARDNER — 19" COLOR DUAL SYNC. HORIZ. MTG. MONITOR
	A508-00005-0000	MONITOR MTG. CHANNEL ASSY. (2 REQ'D.)
	0595-00104-0000	MONITOR RAIL (2 REQ'D.)
	0017-00102-0066	1/4-20 x 3/4 UNSLOT HEX HD. BOLT (4 REQ'D.)
	0017-00102-0002	1/4-20 x 1/2 SLOT HEX HD. BOLT (4 REQ'D.)
	0017-00104-0014	7/8" DISH WASHER (8 REQ'D.)
	0017-00101-0141	#8 x 11/16 UNSLOT HEX HD. SCREW (8 REQ'D.)
	0017-00104-0046	7/8" FLAT WASHER (8 REQ'D.)
	0982-00907-0000	MONITOR SHIELD (FISH PAPER)
7	A982-00007-0000	CARD RACK W/BOARDS ASSY.
	A084-90908-B982	SOUND BOARD ASSY.
	A084-90009-A982	CPU BOARD ASSY.
	A084-91399-A982	VIDEO GENERATOR BOARD ASSY.
	A968-00018-0000	SUPPORT BRKT. ASSY. — TOP
	0968-00511-0000	CARD SUPPORT BASE — BOTTOM
8	A082-90910-E000	DUAL POWER AMP P.C. ASSY.
9	A082-90412-D000	125VA. POWER SUPPLY P.C. ASSY.
	0624-00902-0100	P.C. SUPPORT BRKT. 12" (2 REQ'D.)
	0624-00902-0500	P.C. SUPPORT BRKT. 6-1/2" (2 REQ'D.)
10	A982-00009-0000	TRANSFORMER BOARD ASSY.
11	A508-00023-0000	LINE CORD ASSY.
12	A961-00007-0000	CASTER ASSY. (2 REQ'D.)
	0961-00109-0000	WHEEL BRKT. (2 REQ'D.)
	0017-00042-0255	PLASTIC WHEEL (2 REQ'D.)
	0894-00702-00XF	SHAFT (2 REQ'D.)
	0017-00100-0037	3/8 E-RING (2 REQ'D.)
		<b>ADDITIONAL PARTS LIST</b>
	A515-00021-0000	MULTIFUNCTION SWITCH & BRKT. ASSY.
	A097-00009-0000	BACK DOOR LOCK ASSY.
	0017-00009-0490	5-5/8 SQR. BACK DOOR VENT GRILLE (4 REQ'D.)
	A950-00006-0000	COIN BOX CRADLE ASSY.
	0950-00105-0000	COIN BOX COVER
	0950-00104-0000	COIN BOX HANDLE
	0950-00101-0000	COIN DEFLECTOR (2 REQ'D.)
	0950-00900-0000	LARGE PLASTIC CASH BOX
	0017-00101-0142	1/4-20 x 1-3/8 RND. HD. BOLT (4 REQ'D.)
	0017-00104-0014	7/8 DISH WASHER (4 REQ'D.)
	0017-00103-0018	1/4-20 HEX NUT (4 REQ'D.)

**NO. 982 — SOLAR FOX — UPRIGHT — REAR ACCESS — PARTS LIST (Continued)**


*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
	A968-00029-0000	VIDEO SIGNAL CABLE ASSY.
	A982-00012-0000	MASTER CABLE ASSY.
	A089-00006-0000	125VA. FILTER CABLE ASSY. #1
	A089-00007-0000	125VA. FILTER CABLE ASSY. #2
	A982-00010-0000	HIGH VOLTAGE CABLE ASSY.
	A982-00011-0000	LOW VOLTAGE CABLE ASSY.
	A982-00015-0000	COIN DOOR CABLE ASSY.
	A982-00016-0000	CONTROL SHELF CABLE ASSY.


**FILTER ASSY. — PARTS LIST**  
*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	0945-00101-00XF	CHASSIS
2	0945-00803-0100	CAPACITOR — 55000MF — 25V.
3	0945-00803-0200	CAPACITOR — 100000MF — 15V.
4	0945-00100-0000	CAPACITOR STRAP
	0017-00101-0555	#6-32 x 5/16 SLT. HEX HD. SCR. (4 REQ'D.)
5	0017-00021-0539	5 POSITION TERMINAL STRIP (2 REQ'D.)
	0017-00101-0510	#4-40 x 1/2 SLT. PAN HD. SCR. (4 REQ'D.)
	0017-00104-0087	#4 FLAT WASHER (4 REQ'D.)
	0017-00104-0071	#4 EXT. TOOTH WASHER (4 REQ'D.)
	0017-00103-0002	#4-40 HEX NUT (4 REQ'D.)
6	0062-122H7-1XXX	RESISTOR — 150 OHM, 2W.
	0062-086H7-1XXX	RESISTOR — 47 OHM, 2W. — LOCATED ON OPPOSITE TERMINAL STRIP
7	0017-00003-0008	FUSE — 6 AMP — 120V.
8	0017-00003-0174	FUSE — 10 AMP — 32V.
	0017-00003-0433	FUSE HOLDER (2 REQ'D.)
9	0017-00041-0008	RUBBER GROMMET
10	A089-00007-0000	FILTER CABLE ASSY. #2
11	A089-00006-0000	FILTER CABLE ASSY. #1
12	0945-00804-0100	DIODE — 12A. — 50V. (4 REQ'D.)
	0017-00103-0086	#10-32 HEX NUT (4 REQ'D.)
	0017-00021-0484	SOLDER LUG (4 REQ'D.)
	0017-00104-0107	#10 FLAT WASHER (4 REQ'D.)
	0017-00009-0510	INSULATOR (8 REQ'D.)
	0017-00042-0283	BUSHING (4 REQ'D.)
	0945-00900-0000	DIODE FORMED FISHPAPER COVER — NOT SHOWN

FILTER ASSY.

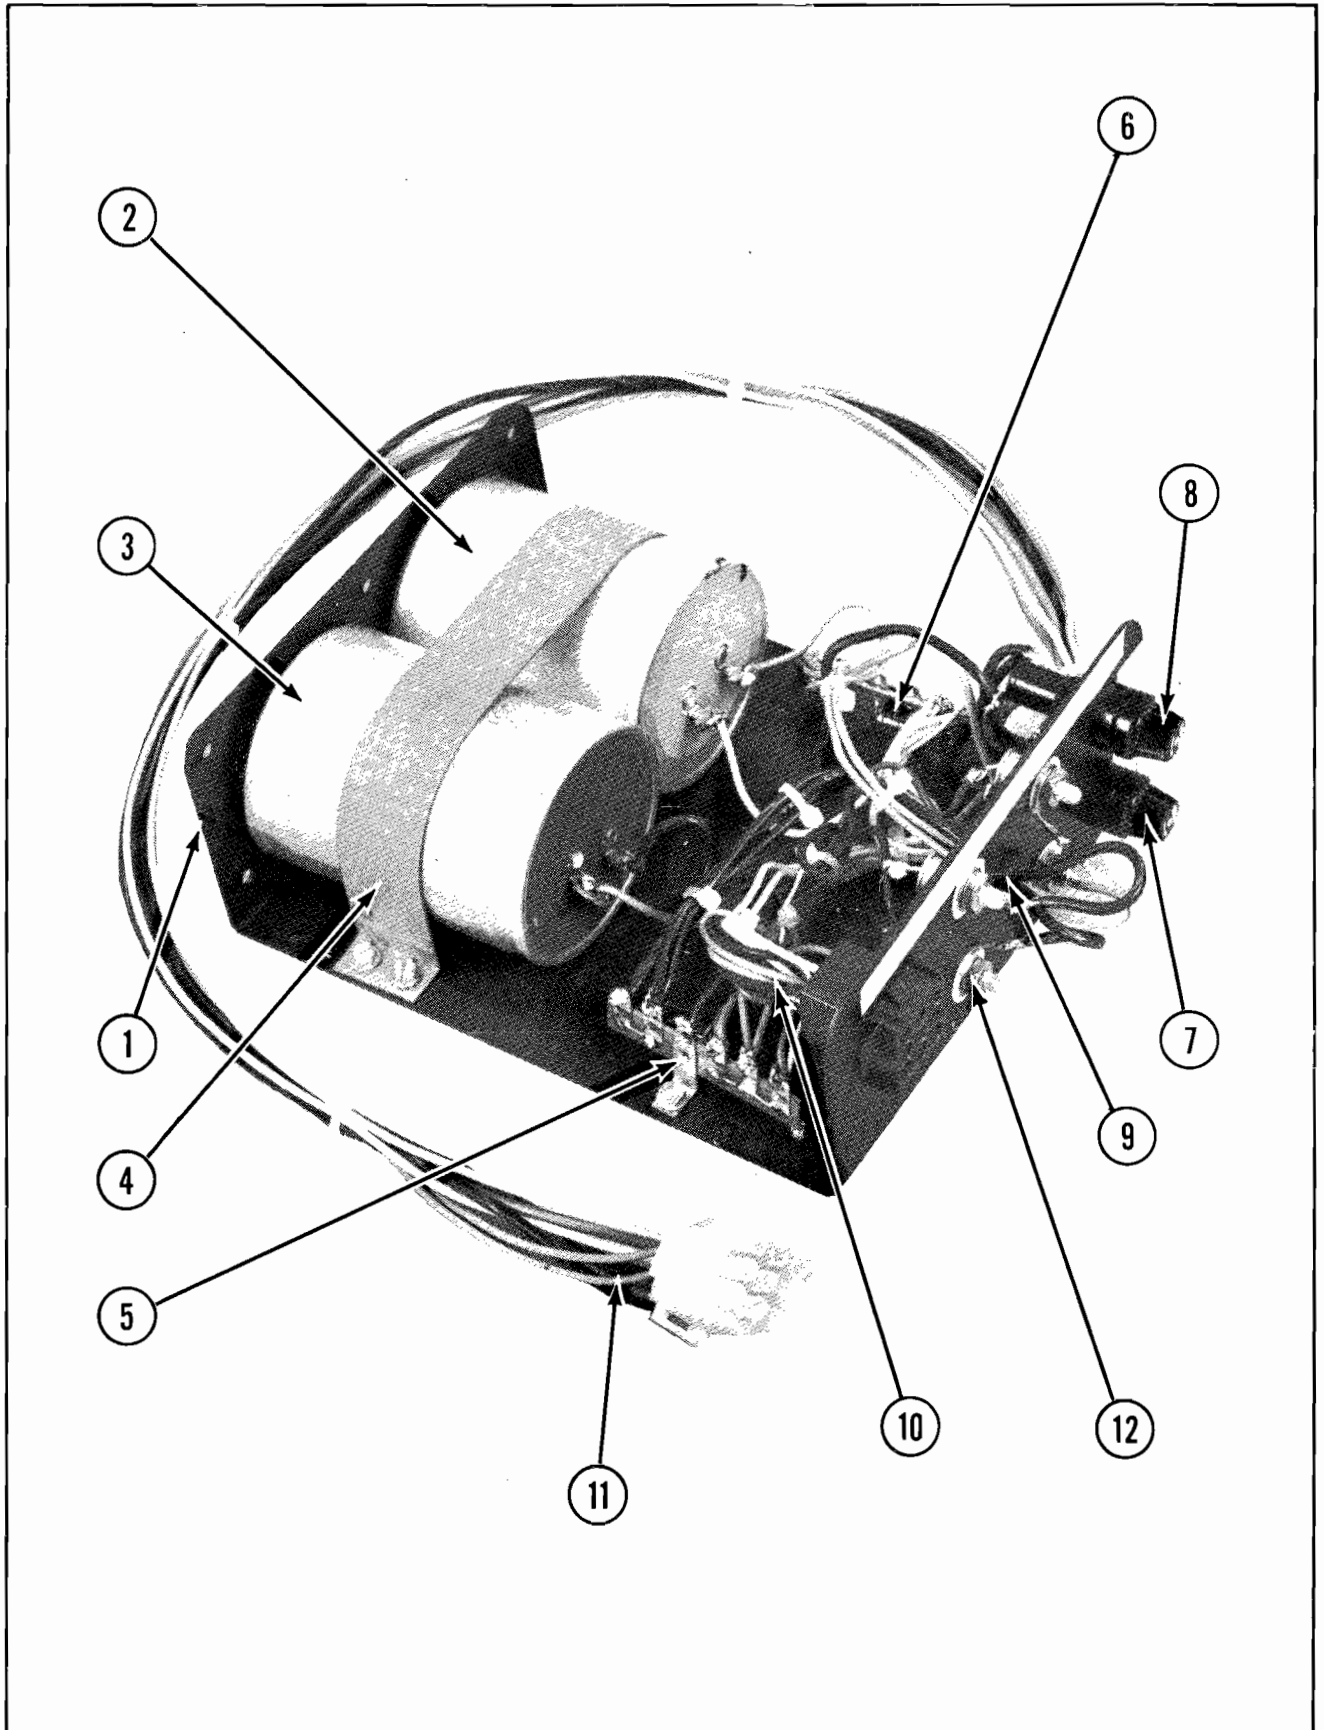

NO. 578 — SOLAR FOX — MINI — FRONT

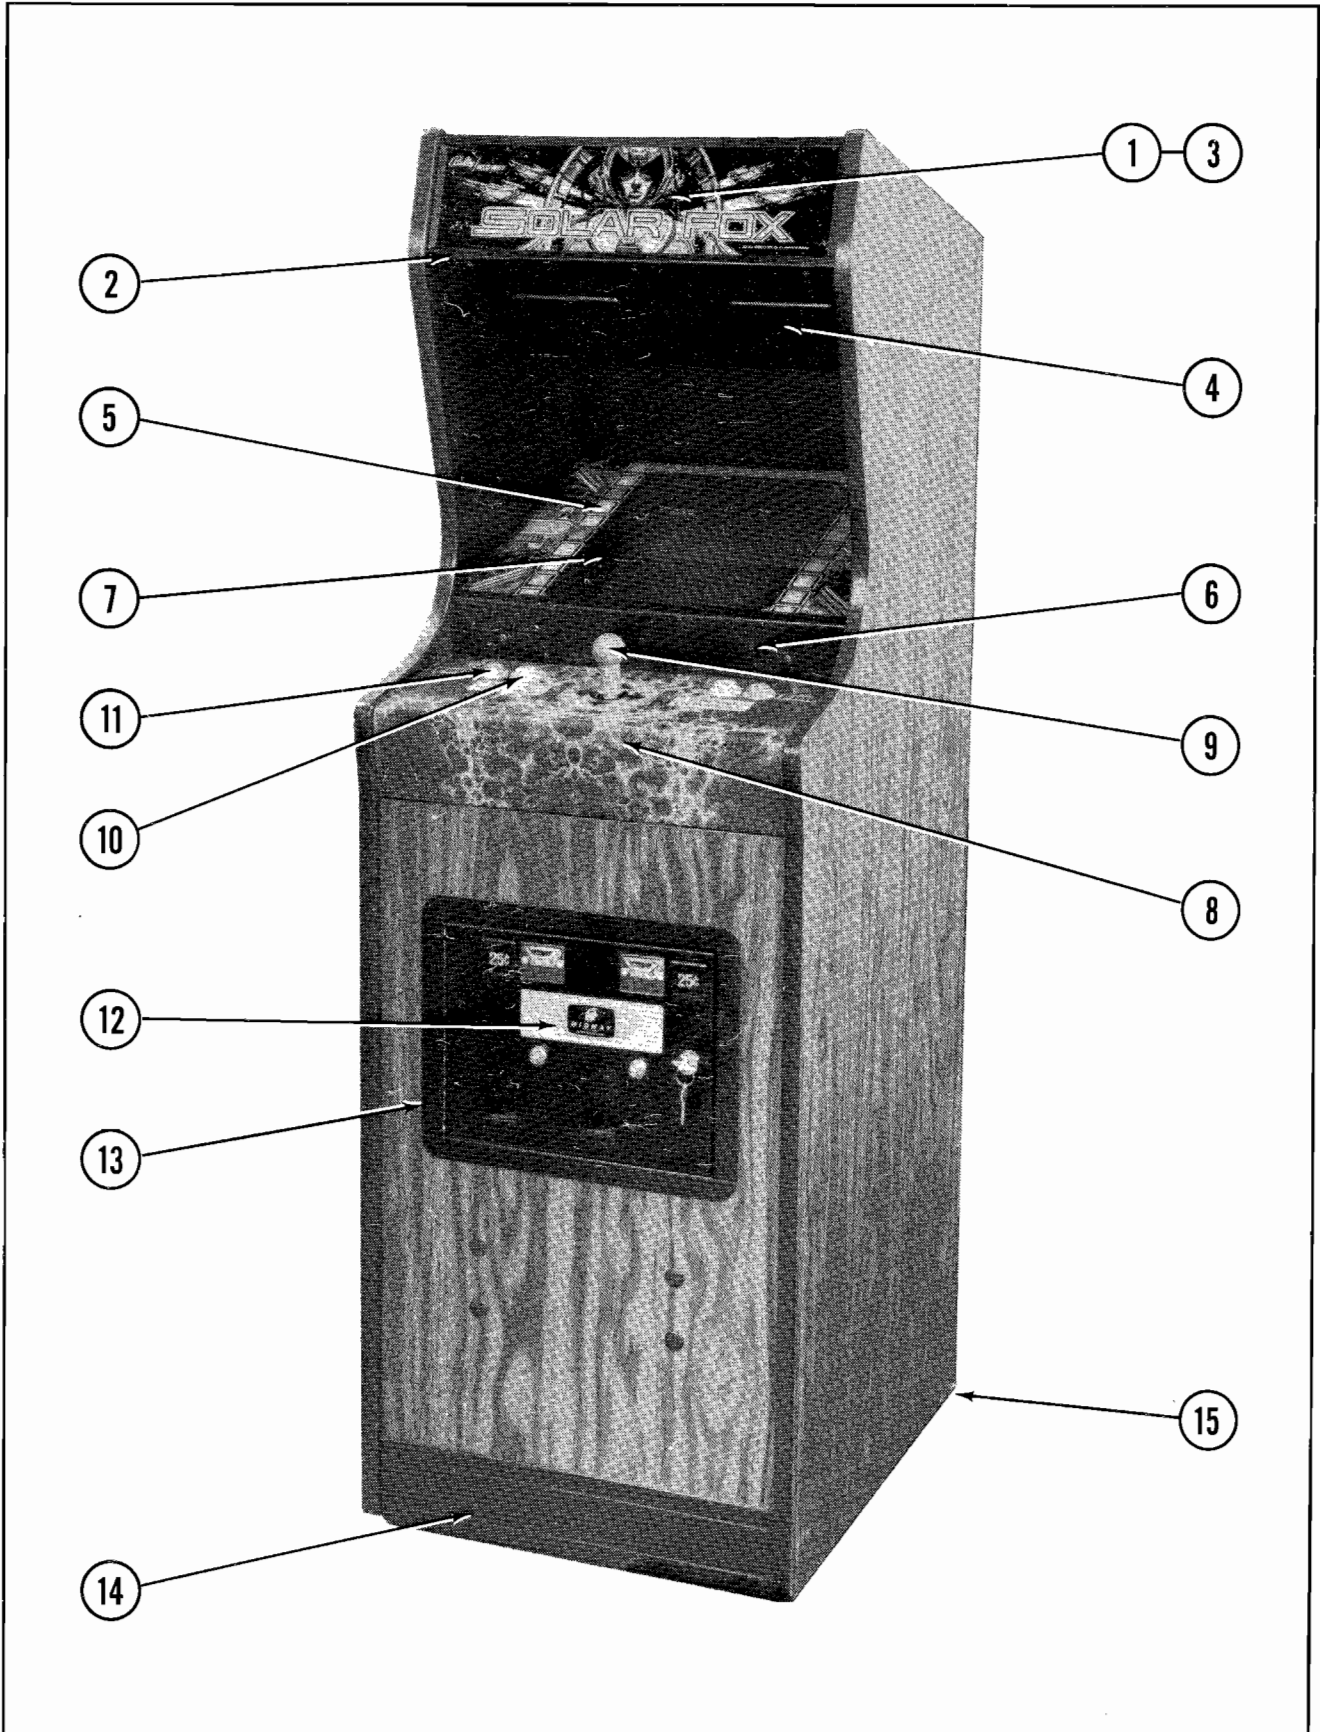


**NO. 578 — SOLAR FOX — MINI — FRONT — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

<b>ITEM</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	0578-00901-00XF 0537-00903-0060	HEADER DISPLAY PLEXI GLASS CHANNEL 4-1/2" LG. (2 REQ'D.)
2	0574-00100-00XF 0017-00101-0138 0017-00009-0522	HEADER RETAINING BRKT. (2 REQ'D.) #8 x 5/8" TORX TAMPER RESISTANT SCREW (6 REQ'D.) LONG ARM KEY T-20 (FOR ABOVE SCREW)
3	A574-00007-0000 0017-00003-0219 0017-00031-0030 A574-00015-0000	INSERT DISPLAY ASSY. #194 LAMP 14V., .27A. (5 REQ'D.) WEDGE BASE LAMP SOCKET (5 REQ'D.) INSERT CABLE ASSY.
4	0017-00009-0393 0017-00003-0430	BLACK SPEAKER GRILLE W/SLOTS (2 REQ'D.) 6" x 9" SPEAKER 4 OHM, 10W. (2 REQ'D.)
5	0578-00900-00XF 0537-00903-0056	VIEWING GLASS GLASS CHANNEL 14-1/2" LG. (2 REQ'D.)
6	A578-00019-0000 0017-00101-0138	GLASS CLAMPING PLATE ASSY. #8 x 5/8" TORX TAMPER RESISTANT SCREW (2 REQ'D.)
7	A514-00004-0000 0513-00900-0000 0934-00905-0000 A961-00026-0000	T.V. BEZEL ASSY. BEZEL PLEXI-GLASS (TINTED) BEZEL MTG. BRKT. ASSY. (2 REQ'D.)
8	A578-00016-0000 A578-00017-0000 0578-00902-0000 0550-00101-0100 0550-00101-0200 0555-00901-0000 0961-00115-00XF 0017-00009-0033	OVERLAY/CONTROL PLATE ASSY. CONTROL SHELF PLATE CONTROL SHELF OVERLAY CONTROL SHELF MTG. BRKT. — RIGHT CONTROL SHELF MTG. BRKT. — LEFT PLASTIC LOCATING PIN (4 REQ'D.) STRIKE (2 REQ'D.) LATCH CLAMP (2 REQ'D.)
9	A578-00022-0000	CONTROL ASSY.
10	0017-00042-0301	YELLOW PUSHBUTTON ASSY. (2 REQ'D.)
11	0017-00042-0304 0017-00032-0093 0017-00103-0054	RED PUSHBUTTON ASSY. (2 REQ'D.) PUSHBUTTON SWITCH W/HOLDER (4 REQ'D.) 5/8-11 PAL NUT (4 REQ'D.)
12	A090-00300-11BK	U.S.A. 25¢ COIN DOOR ASSY.
13	0090-00002-04BK 0017-00101-0121	LARGE COIN DOOR FRAME #6-32 x 5/16 PHIL. TRS. HD. SCREW (3 REQ'D.) (MOUNTS COIN DOOR TO FRAME)
14	0935-00906-0400	KICK PLATE
15	0017-00102-0048 0017-00103-0026	3/8-16 x 2" LEG LEVELERS (4 REQ'D.) 3/8-16 LEG LEVELER NUTS (4 REQ'D.)

NO. 578 — SOLAR FOX — MINI — REAR ACCESS

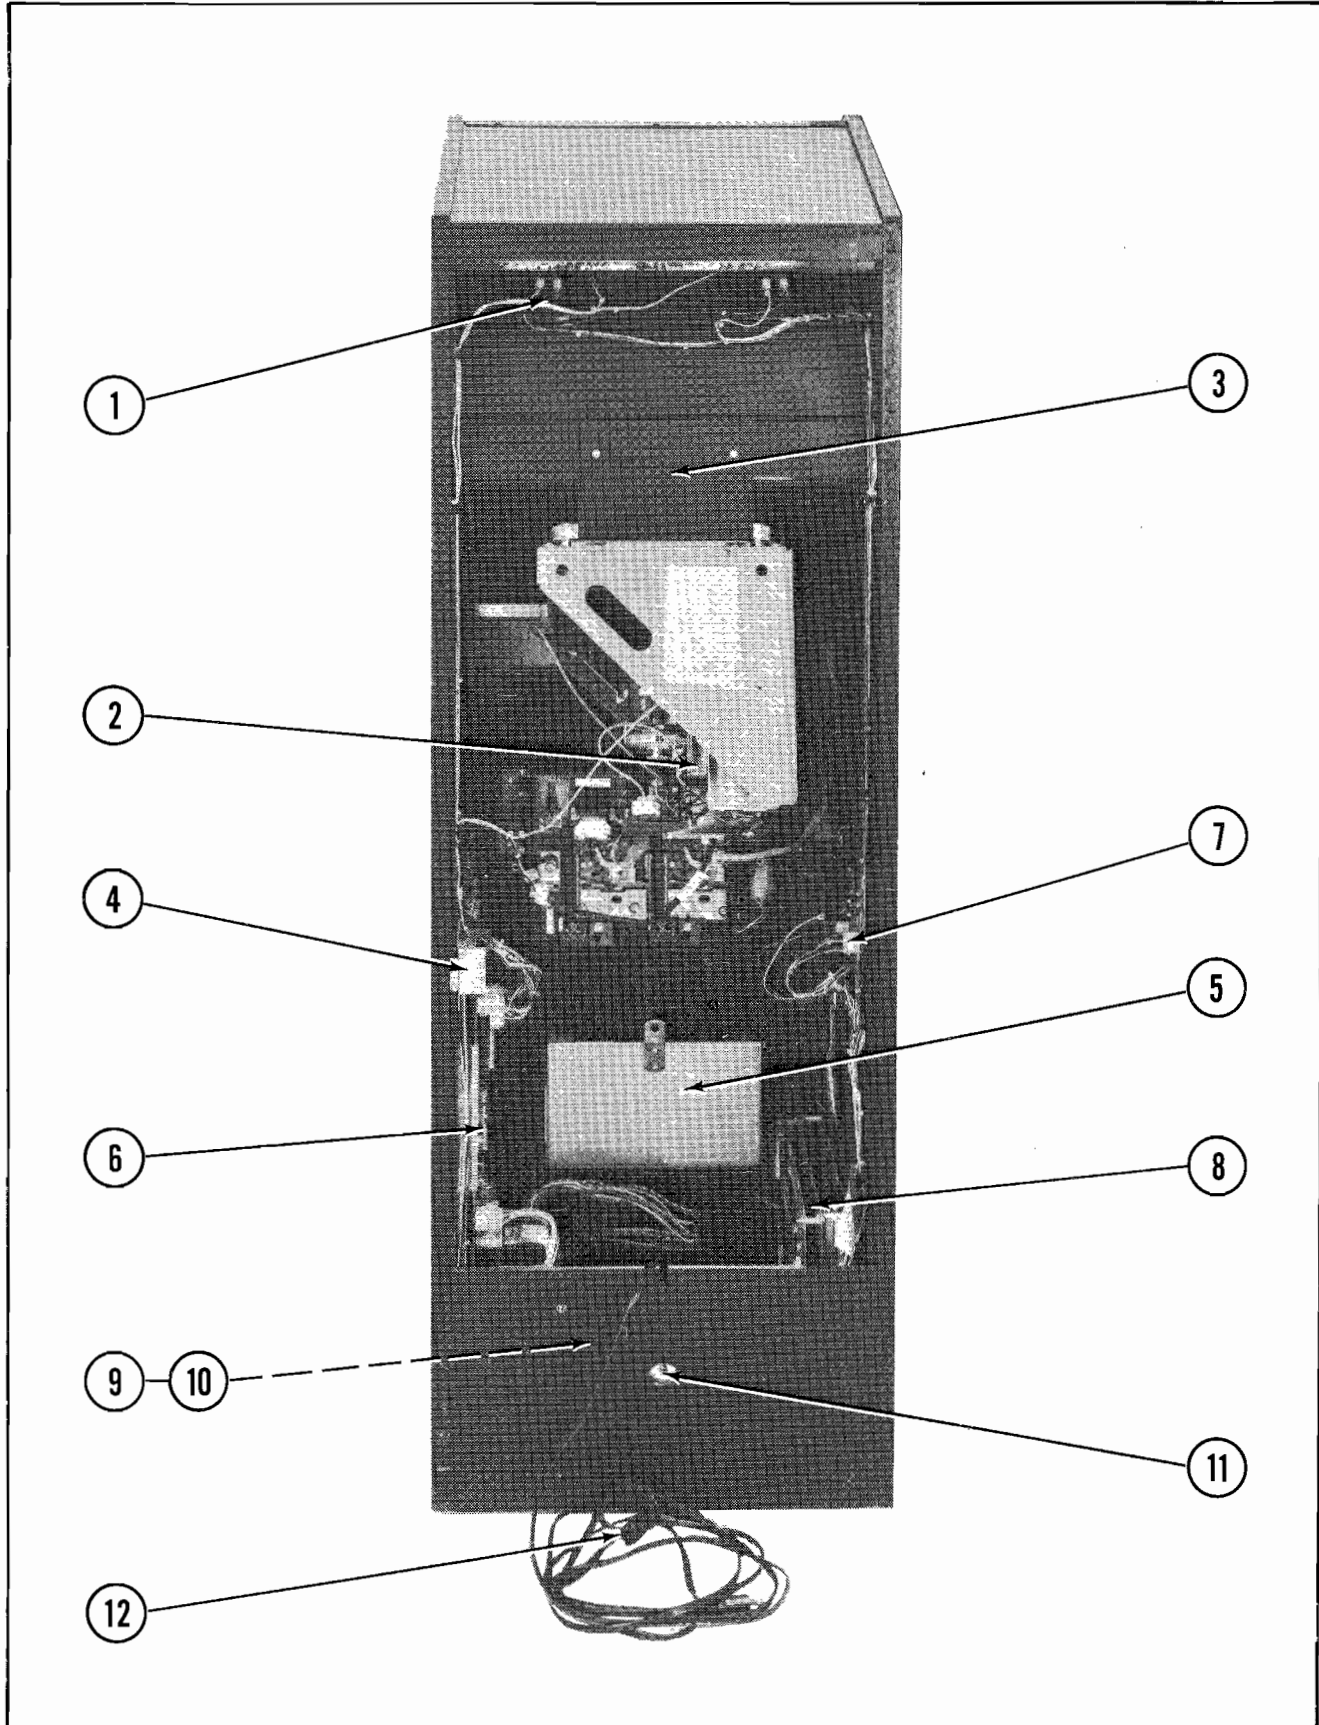


**NO. 578 — SOLAR FOX — MINI — REAR ACCESS — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

<b>ITEM</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	0017-00003-0430	6" x 9" SPEAKER 4 OHM, 10W. (2 REQ'D.)
2	0017-00003-0340	ELECTROHOME — 13" COLOR DUAL SYNC. HORIZ. MTG. MONITOR (OR)
2	0017-00003-0435	WELLS GARDNER — 13" COLOR DUAL SYNC. HORIZ. MTG. MONITOR
3	A926-00012-00XF	T.V. MONITOR BRKT. ASSY.
	0513-00101-0000	MONITOR MTG. BRKT.
	0017-00102-0066	1/4-20 x 3/4 UNSLOT HEX HD. BOLT (4 REQ'D.)
	0017-00104-0014	7/8 DISH WASHER
4	A088-00015-0000	INTERLOCK SWITCH & BRKT. ASSY.
5	A950-00004-0000	COIN BOX ASSY.
	A950-00006-0000	COIN BOX CRADLE ASSY.
	0950-00105-0000	COIN BOX COVER
	0950-00104-0000	COIN BOX HANDLE
	0950-00101-0000	COIN DEFLECTOR (2 REQ'D.)
	0950-00900-0000	LARGE PLASTIC CASH BOX
	0017-00101-0142	1/4-20 x 1-3/8 RND. HD. BOLT (4 REQ'D.)
	0017-00104-0014	7/8 DISH WASHER (4 REQ'D.)
	0017-00103-0018	1/4-20 HEX NUT (4 REQ'D.)
6	A082-90412-D000	125VA. POWER SUPPLY P.C. BD. ASSY.
	0624-00902-0100	P.C. SUPPORT BRKT. 12" LG. (2 REQ'D.)
	0624-00902-0500	P.C. SUPPORT BRKT. 6-1/2" LG. (2 REQ'D.)
7	A082-90910-E000	DUAL POWER AMP P.C. ASSY.
8	A580-00013-0000	CARD RACK W/BOARDS ASSY.
	A084-90009-0580	CPU BD. ASSY.
	A084-90908-B982	SOUND BD. ASSY.
	A084-91399-A580	VIDEO GENERATOR BD. ASSY.
	A968-00018-0000	SUPPORT BRKT. ASSY. — TOP
	0968-00511-0000	CARD SUPPORT BASE — BOTTOM
9	A568-00009-0000	TRANSFORMER BOARD ASSY.
10	A945-00002-0000	125VA. FILTER ASSY.
11	A088-00013-0000	ON/OFF SWITCH & BRKT. ASSY.
12	A508-00023-0000	LINE CORD ASSY.
<b>ADDITIONAL PARTS LIST</b>		
	A097-00009-0000	BACK DOOR LOCK ASSY.
	0017-00009-0490	5-5/8" SQR. BACK DOOR VENT GRILLE (4 REQ'D.)
	0926-00904-0000	PROTECTIVE BUBBLE — BACK DOOR
	A578-00010-0000	HIGH VOLTAGE CABLE ASSY.
	A578-00011-0000	LOW VOLTAGE CABLE ASSY.
	A578-00012-0000	MASTER CABLE ASSY.
	A968-00029-0000	VIDEO SIGNAL CABLE ASSY.
	A982-00015-0000	COIN DOOR CABLE ASSY.
	A578-00013-0000	CONTROL SHELF CABLE ASSY.
	A089-00006-0000	FILTER CABLE ASSY. #1
	A089-00007-0000	FILTER CABLE ASSY. #2
	0555-00901-0000	PLASTIC LOCATING PIN (6 REQ'D.)
	A515-00021-0000	MULTIFUNCTION SWITCH BRKT. ASSY.
	3010-03003-0000	GROUNDING CLIP

NO. 580 — SOLAR FOX — COCKTAIL — FRONT

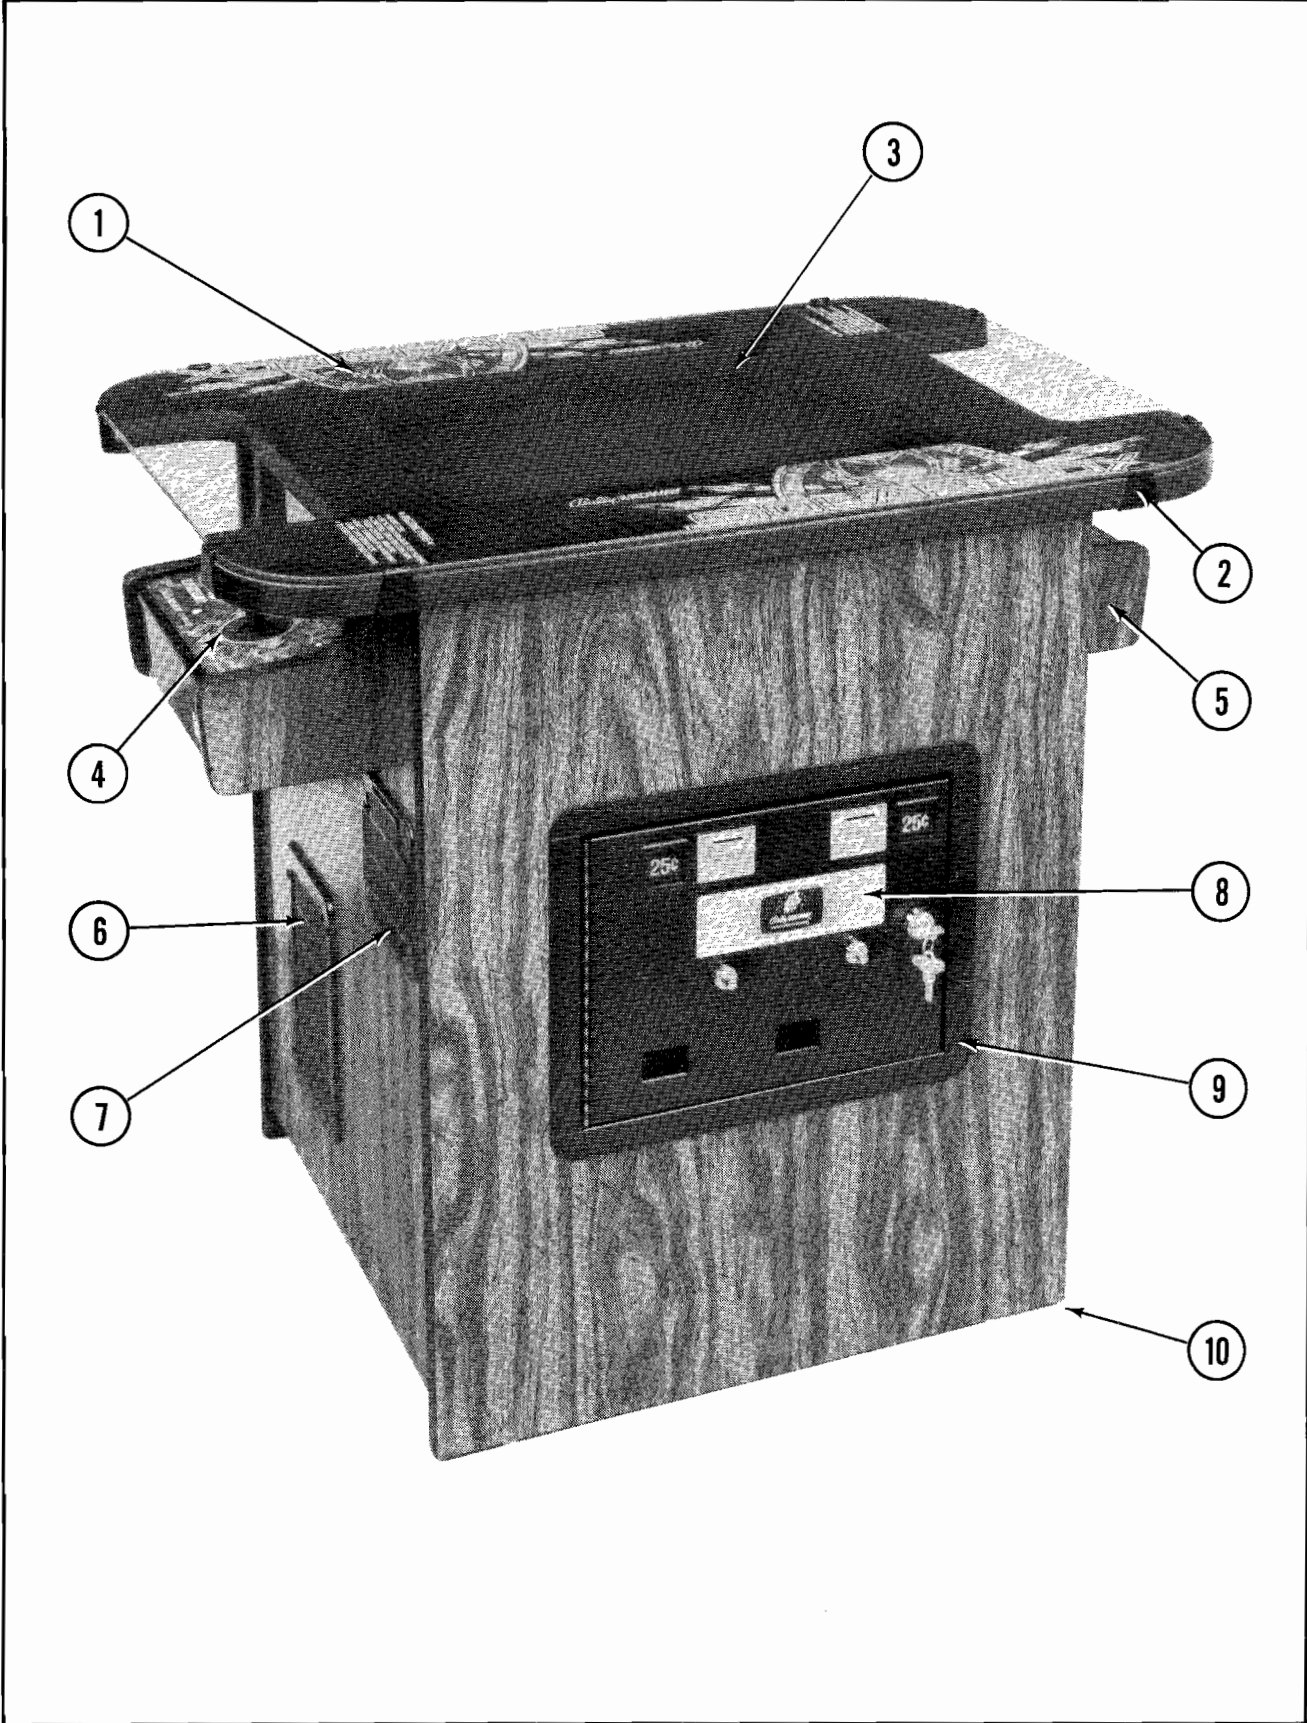


**NO. 580 — SOLAR FOX — COCKTAIL — FRONT — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	0017-00009-0499 0580-00901-0000	COVER GLASS — 32" x 22" x 1/4" ARTWORK UNDERLAY
2	0775-00104-00XF 0017-00101-0117	GLASS CLIPS (8 REQ'D.) #8 x 5/8 PHIL. TRS. HD. SCREW (16 REQ'D.)
3	0557-00900-0000 0508-00905-0000	T.V. BEZEL SMOKED PLEXI — 17-3/8" x 13-1/4" x 1/8"
4	A580-00004-0100	CONTROL SHELF ASSY. — PLAYER 1
5	A580-00004-0200	CONTROL SHELF ASSY. — PLAYER 2
6	0017-00009-0393	BLACK SPEAKER GRILLE W/SLOTS (2 REQ'D.)
7	0017-00009-0482 0017-00003-0431 0017-00101-0136 0017-00103-0061	SPEAKER GRILLE — SMALL (2 REQ'D.) 4" SQR. SPEAKER — 4 OHM, 10W. (2 REQ'D.) #8-32 x 1-1/4 CARRIAGE BOLT (16 REQ'D.) #8-32 HEX NUT W/SEMS (16 REQ'D.)
8	A090-00300-11BK	U.S.A. 25¢ COIN DOOR
9	0090-00002-02BK 0017-00101-0121	LARGE COIN DOOR FRAME #6-32 x 5/16 PHIL. TRS. HD. SCREW (3 REQ'D.) (MOUNTS COIN DOOR TO FRAME)
10	0017-00102-0048 0017-00103-0026	3/8-16 x 2" LEG LEVELERS (4 REQ'D.) 3/8-16 LEG LEVELER NUTS (4 REQ'D.)

NO. 580 - SOLAR FOX — COCKTAIL — INTERIOR ACCESS

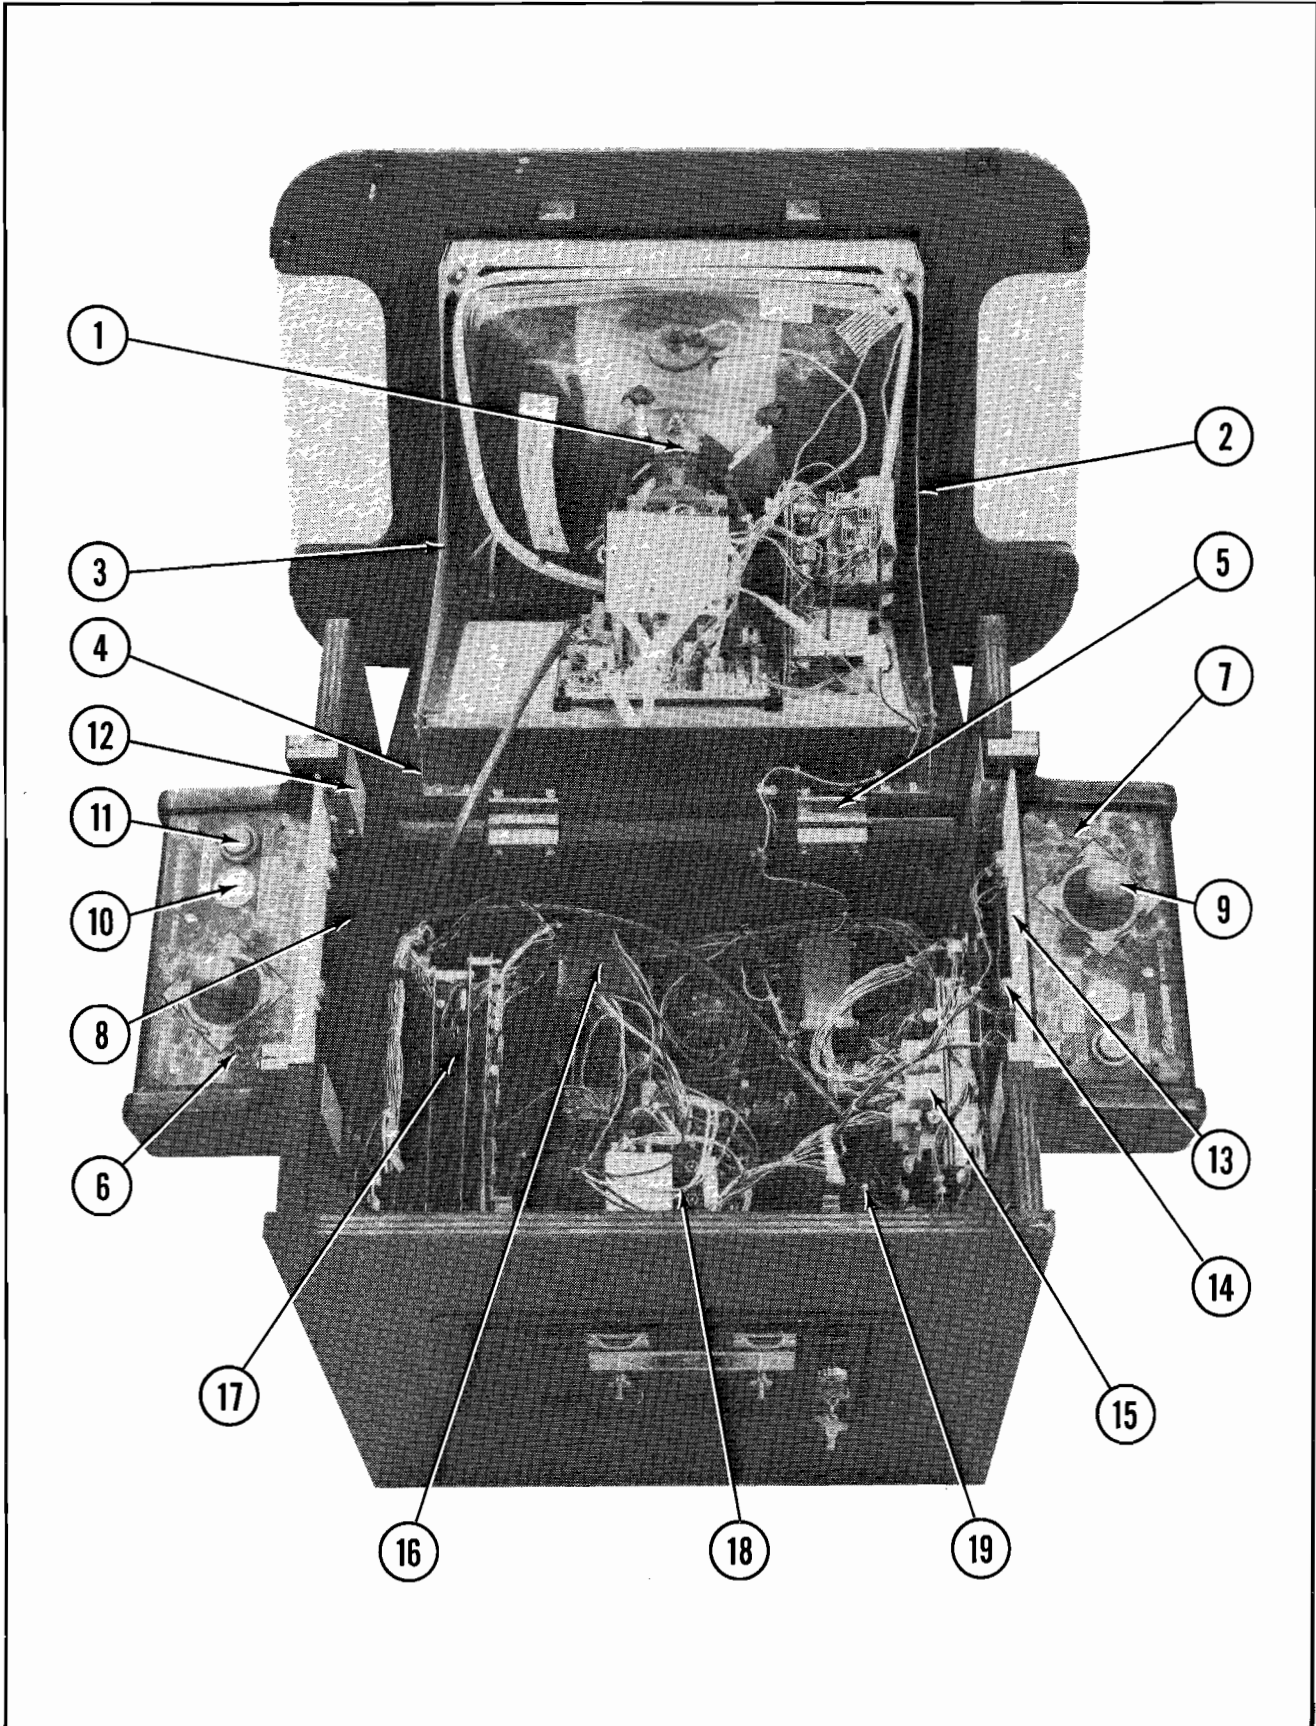

**NO. 580 — SOLAR FOX — COCKTAIL — INTERIOR ACCESS — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	0017-00003-0339	ELECTROHOME — 19" COLOR DUAL SYNC. HORIZ. MTG. MONITOR (OR)
1	0017-00003-0439	WELLS GARDNER — 19" COLOR DUAL SYNC. HORIZ. MTG. MONITOR
2	A515-00019-0000	MONITOR SUPPORT ASSY. — LEFT
3	A515-00019-0100	MONITOR SUPPORT ASSY. — RIGHT
	0017-00101-0109	#8 x 5/16 UNSLOT. HEX HD. BOLT (6 REQ'D.)
4	0927-00101-00XF	SUPPORT ANGLE (2 REQ'D.)
	0017-00101-0598	#8-32 x 5/16 SLT. HEX HD. SCREW (4 REQ'D.)
5	0017-00009-0514	2-1/2" HINGE (2 REQ'D.)
	0017-00101-0639	#8-32 x 1-1/4" CARRIAGE BOLT (4 REQ'D.)
	0017-00101-0628	#8-32 x 3/4" CARRIAGE BOLT (4 REQ'D.)
	0017-00103-0061	#8-32 HEX NUT W/SEMS (8 REQ'D.)
6	0580-00900-0100	DECORATIVE OVERLAY — PLAYER 1
7	0580-00900-0200	DECORATIVE OVERLAY — PLAYER 2
	0580-00100-00XF	CONTROL PANEL (2 REQ'D.)
	0017-00101-0620	#8-32 x 1/2 CARRIAGE BOLT (8 REQ'D.)
	0017-00103-0061	#8-32 HEX NUT W/SEMS (8 REQ'D.)
	0017-00101-0341	#6 x 1/4 PHIL. TRS. HD. SCREW (10 REQ'D.)
8	0510-00101-00XF	BOTTOM PAN (2 REQ'D.)
9	A580-00015-0000	CONTROL ASSY. (2 REQ'D.)
10	0017-00042-0301	YELLOW PUSH BUTTON ASSY. (2 REQ'D.)
11	0017-00042-0304	RED PUSH BUTTON ASSY. (2 REQ'D.)
	0017-00032-0093	PUSH BUTTON SWITCH W/HOLDER (4 REQ'D.)
	0017-00103-0054	5/8-11 PAL NUT (4 REQ'D.)
12	0930-00104-0000	CONTROL PANEL LOCATING BRKT. (4 REQ'D.)
	0017-00101-0025	#8 x 1/2" SLT. HEX HD. SCREW (16 REQ'D.)
13	0727-00901-0000	LIGHT SHIELD (2 REQ'D.)
14	0017-00031-0044	WEDGE BASE LAMP SOCKET (4 REQ'D.)
	0017-00003-0219	#194 LAMP 14V., .27A (4 REQ'D.)
	0017-00101-0555	#6-32 x 5/16" SLT. HEX HD. SCREW (4 REQ'D.)
15	A082-90412-D000	125VA. POWER SUPPLY P.C. ASSY.
	0624-00902-0500	P.C. SUPPORT BRKT. 6-1/2" LG. (4 REQ'D.)
16	A580-00007-0000	TRANSFORMER BOARD ASSY.
17	A580-00013-0000	CARD RACK W/BOARDS ASSY.
	A084-90009-A580	CPU BOARD ASSY.
	A084-90908-B982	SOUND BOARD ASSY.
	A084-91399-A580	VIDEO GENERATOR P.C. ASSY.
	A968-00018-0000	SUPPORT BRKT. ASSY. — TOP
	0968-00511-0000	CARD SUPPORT BASE — BOTTOM
18	A945-00002-0000	125VA. FILTER ASSY.
19	A775-00013-0000	FAN ASSEMBLY
	0151-00081-0000	4" FAN
	0775-00110-00XF	FAN PLATE
	0749-00106-00XF	VENT SCREEN
	0017-00101-0347	#6-32 x 1/2" R.H.M.S. (4 REQ'D.)
	0017-00104-0009	#6 EXT. WASHER (4 REQ'D.)
	0017-00103-0005	#6-32 HEX NUT (4 REQ'D.)
	0017-00101-0026	#8 x 5/8 SLT. HEX HD. SCREW (4 REQ'D.)

**NO. 580 — SOLAR FOX — COCKTAIL — INTERIOR ACCESS — PARTS LIST (Continued)**

*ORDER BY PART NUMBER ONLY*


ITEM	PART NO.	DESCRIPTION
		<b>ADDITIONAL PARTS LIST</b>
	A082-90910-E000	DUAL POWER AMP P.C. ASSY.
	A088-00014-0000	INTERLOCK SWITCH & BRKT. ASSY.
	A515-00021-0000	MULTIFUNCTION SWITCH BRKT. ASSY.
	A088-00013-0000	ON/OFF SWITCH & BRKT. ASSY.
	0610-00132-00ZN	STRIKE (2 REQ'D.)
	0017-00009-0033	LATCH CLAMP (2 REQ'D.)
	0017-00101-0141	#8 x 11/16 UNSLOT HEX HD. SCREW (8 REQ'D.)
	A927-00019-0000	COIN BOX ASSY.
	A962-00004-0000	COIN BOX COVER ASSY.
	A962-00005-0000	COIN BOX SIDE CHANNEL ASSY. — SHORT
	0962-00101-0000	COIN BOX SIDE CHANNEL — SHORT
	0017-00101-0628	#8-32 x 3/4 CARRIAGE BOLT (4 REQ'D.)
	0017-00104-0022	#8 WASHER (4 REQ'D.)
	0017-00103-0061	#8-32 HEX NUT W/SEMS (4 REQ'D.)
	A580-00010-0000	MASTER CABLE ASSY.
	A580-00008-0000	HIGH VOLTAGE CABLE ASSY.
	A580-00009-0000	LOW VOLTAGE CABLE ASSY.
	A580-00005-0100	CONTROL SHELF CABLE ASSY. — PLAYER 1
	A580-00005-0200	CONTROL SHELF CABLE ASSY. — PLAYER 2
	A580-00011-0000	VIDEO SIGNAL CABLE ASSY.
	A982-00015-0000	COIN DOOR CABLE ASSY.
	A927-00005-0000	LEG KIT ASSY. (HIGH BASE) — OPTIONAL (INCLUDES 4 LEGS & HARDWARE)
	A508-00023-0000	LINE CORD ASSY.

**SOLAR FOX — UPRIGHT — SPEAKER BOARD ASSY. — PARTS LIST**


*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	0017-00003-0043	18" FLUORESCENT LAMP — COOL WHITE
2	0017-00003-0095	18" BLACK LIGHT
3	0017-00003-0445	FLUORESCENT LOCKS (4 REQ'D.)
4	0017-00031-0036	FLUORESCENT SOCKET (4 REQ'D.)
5	0017-00101-0573	#6-32 x 1/2 SLT. RND. HD. SCREW (8 REQ'D.)
6	0595-00105-0000	FLUORESCENT BRKT. (2 REQ'D.)
7	0017-00003-0026	BALLAST (2 REQ'D.)
8	0017-00101-0598	#8-32 x 5/16 SLT. HEX HD. SCREW (8 REQ'D.)
9	0017-00003-0019	STARTER (2 REQ'D.)
10	0017-00003-0412	STARTER HOLDER (2 REQ'D.)
11	A961-00042-0000	LINE FILTER ASSY. (2 REQ'D.)
12	0017-00003-0430	6" x 9" SPEAKER 4 OHM, 10W (2 REQ'D.)
13	0017-00101-0141	#8 x 11/16 UNSLOT. HEX HD. SCREW (8 REQ'D.)
	A982-00022-0000	A.C. ADAPTOR CABLE ASSY.
	A982-00023-0000	SPEAKER CABLE ASSY.
	A508-00017-0000	FLUORESCENT CABLE ASSY.
	A508-00027-0000	FLUORESCENT CABLE ASSY. — BLACK LIGHT

SOLAR FOX — UPRIGHT — SPEAKER BOARD ASSY.

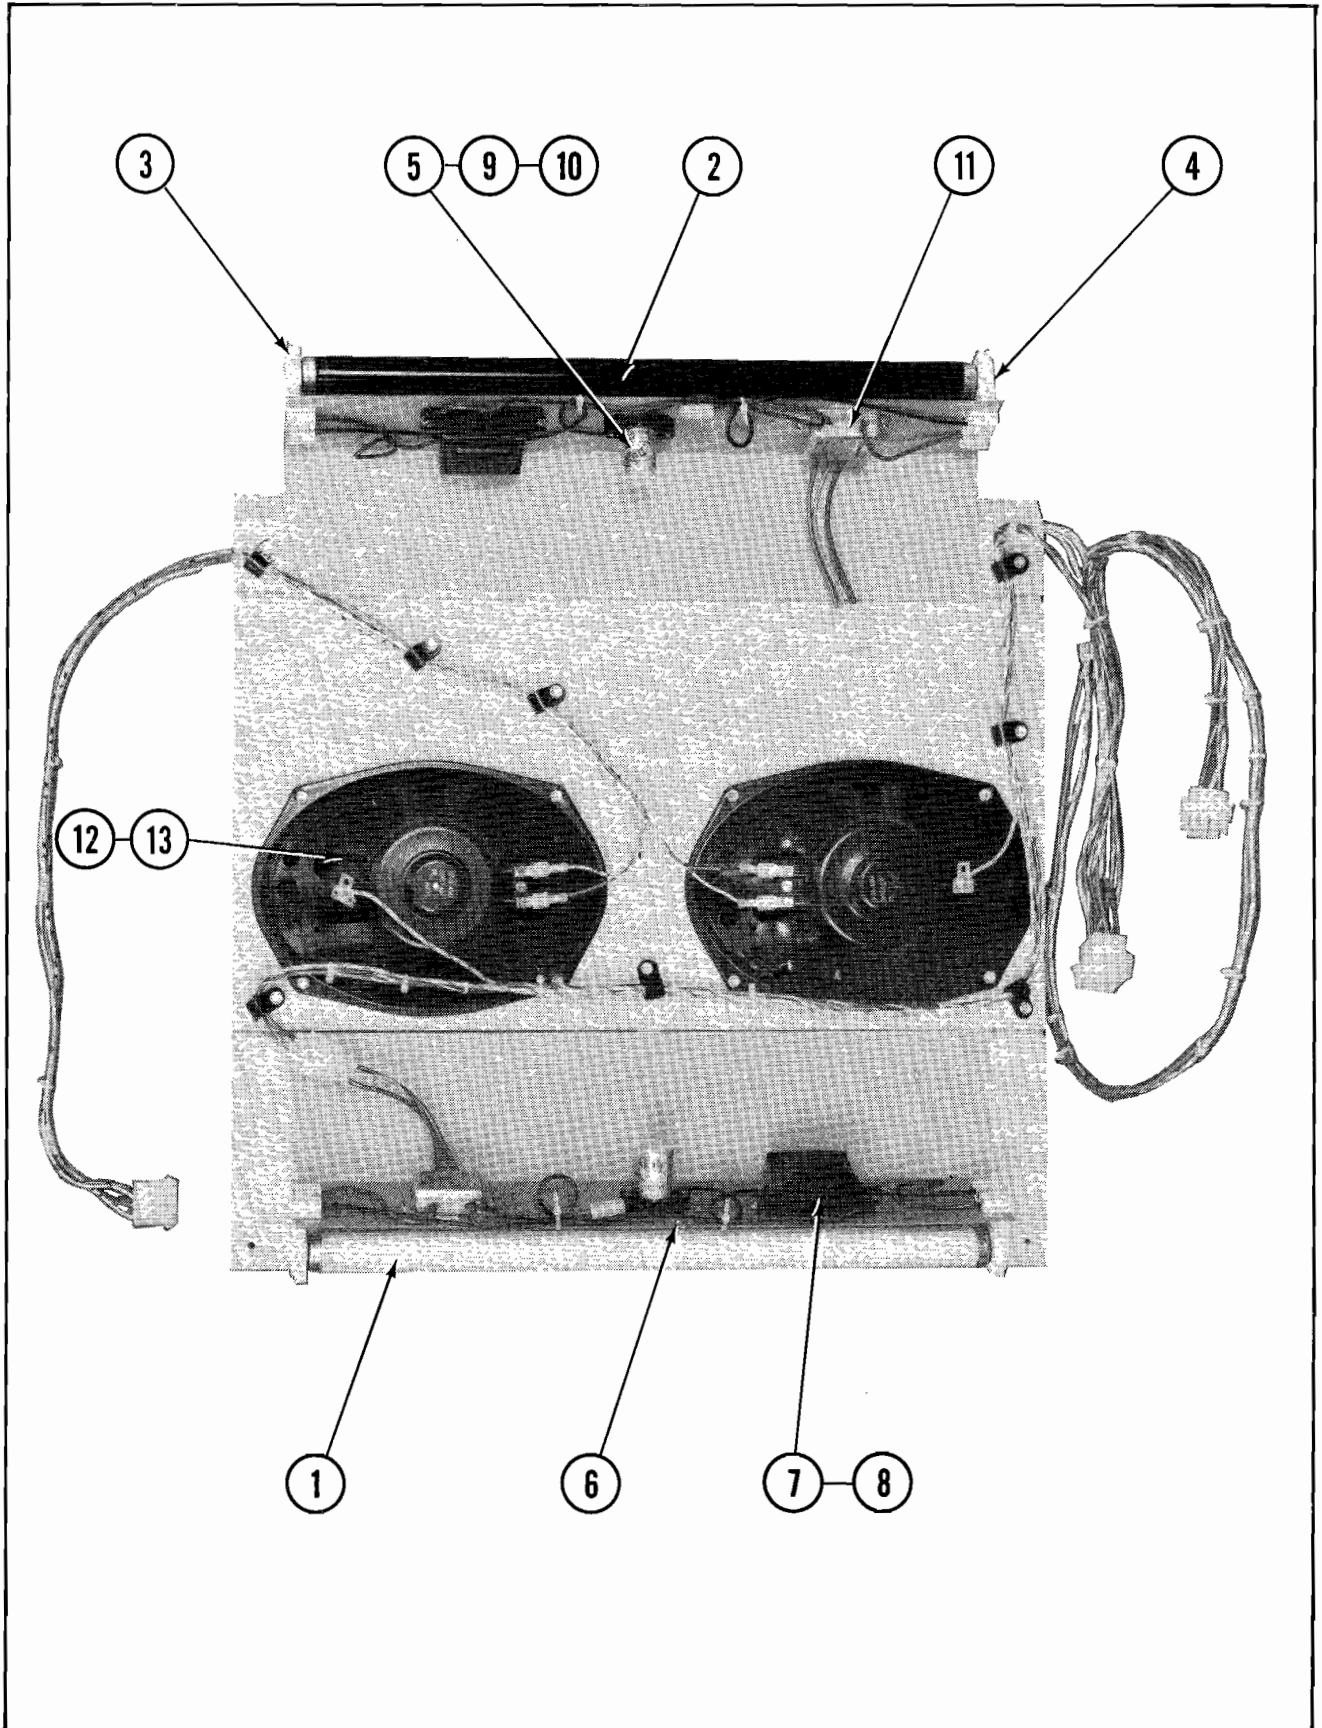

SOLAR FOX — UPRIGHT — CONTROL GRIP ASSY.

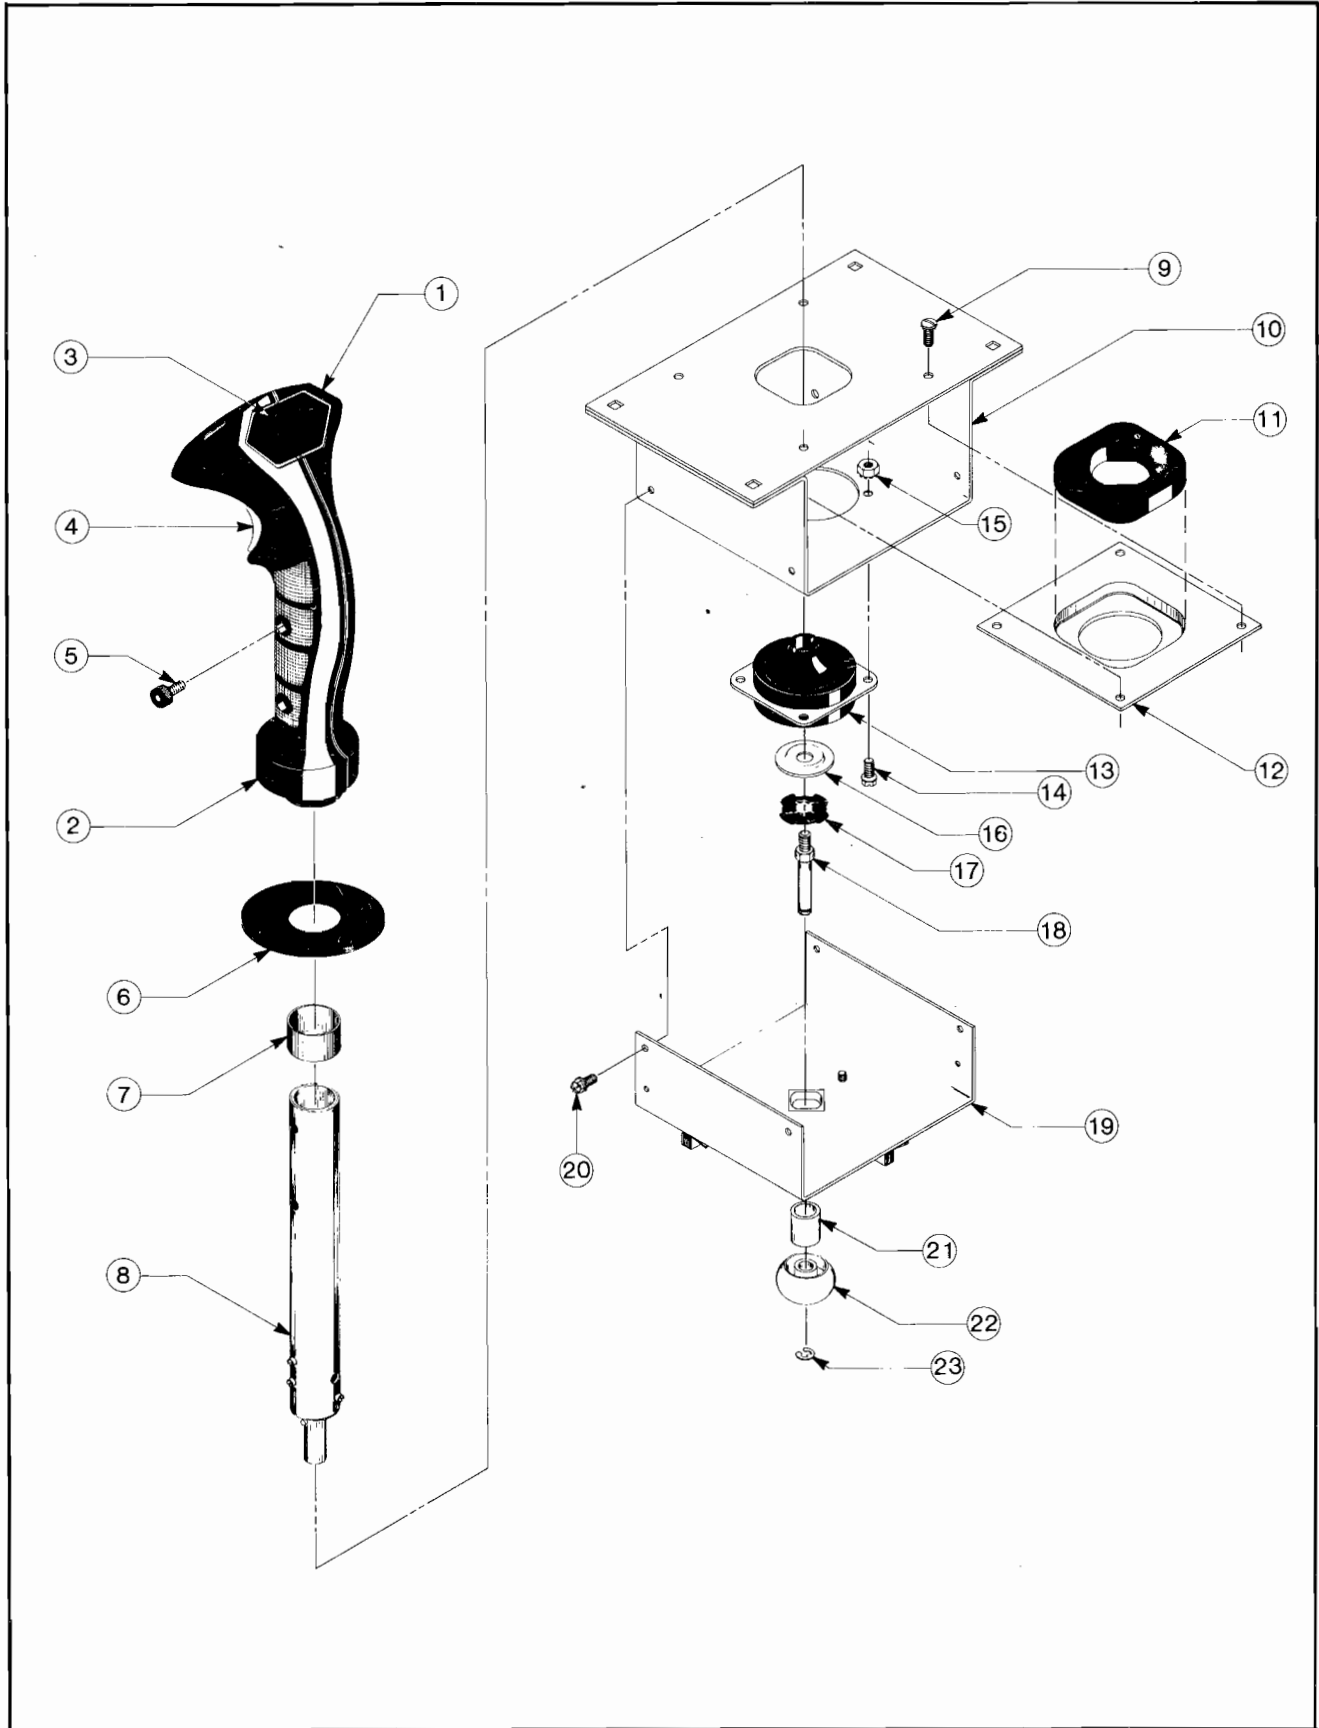


**SOLAR FOX — UPRIGHT — CONTROL GRIP ASSY. — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

<b>ITEM</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	0873-00900-0200	CONTROL GRIP — LEFT
2	0873-00900-0100	CONTROL GRIP — RIGHT
3	0873-00902-0000	LENS
4	0628-00906-0000	TRIGGER
	A628-00028-0000	CONTROL GRIP SWITCH ASSY.
	0020-00202-0000	SWITCH PLATE
	0017-00101-0528	#5-40 x 3/4 SLT. RND. HD. M.S. (2 REQ'D.)
	0873-00123-00XF	SWITCH MTG. BRKT.
	0017-00101-0083	#4-20 x 3/8 PHIL PAN HD. SCREW (2 REQ'D.)
5	0017-00101-0116	#10-32 x 3/8 HEX BUTTON HD. SCREW (5 REQ'D.)
	0017-00009-0513	1/8" TAMPER PROOF ALLEN KEY
6	0628-00904-0000	SLIDE
7	0628-00921-0000	SLEEVE
8	A628-00024-0000	TUBING & PIVOT PIN PINNING ASSY.
9	0017-00101-0615	#8-32 x 3/8 SLT. PAN HD. M.S. (4 REQ'D.)
10	A982-00029-0000	CENTERING BRKT. WELD ASSY.
11	0628-00909-0000	BUMPER
12	0873-00113-00XF	BUMPER MTG. BRKT.
13	0982-00908-0000	GROMMET — MODIFIED
14	0017-00101-0799	#10-32 x 3/8 SLT. HEX HD. SCREW (4 REQ'D.)
15	0017-00103-0081	#10-32 HEX NUT W/SEMS (4 REQ'D.)
16	0628-00922-0000	SHOULDER WASHER
17	0017-00104-0014	DISH WASHER
18	0628-00700-00XF	ACTUATING PIN
19	A628-00031-0000	STOP PLATE & SWITCH BRKT. ASSY.
20	0017-00101-0598	#8-32 x 5/16 SLT. HEX HD. SCREW (4 REQ'D.)
21	0628-00920-0000	ROLLER
22	0921-00700-0000	ACTUATOR
23	0017-00100-0025	1/4" E-RING

SOLAR FOX — CONTROL ASSEMBLY — COCKTAIL & MINI

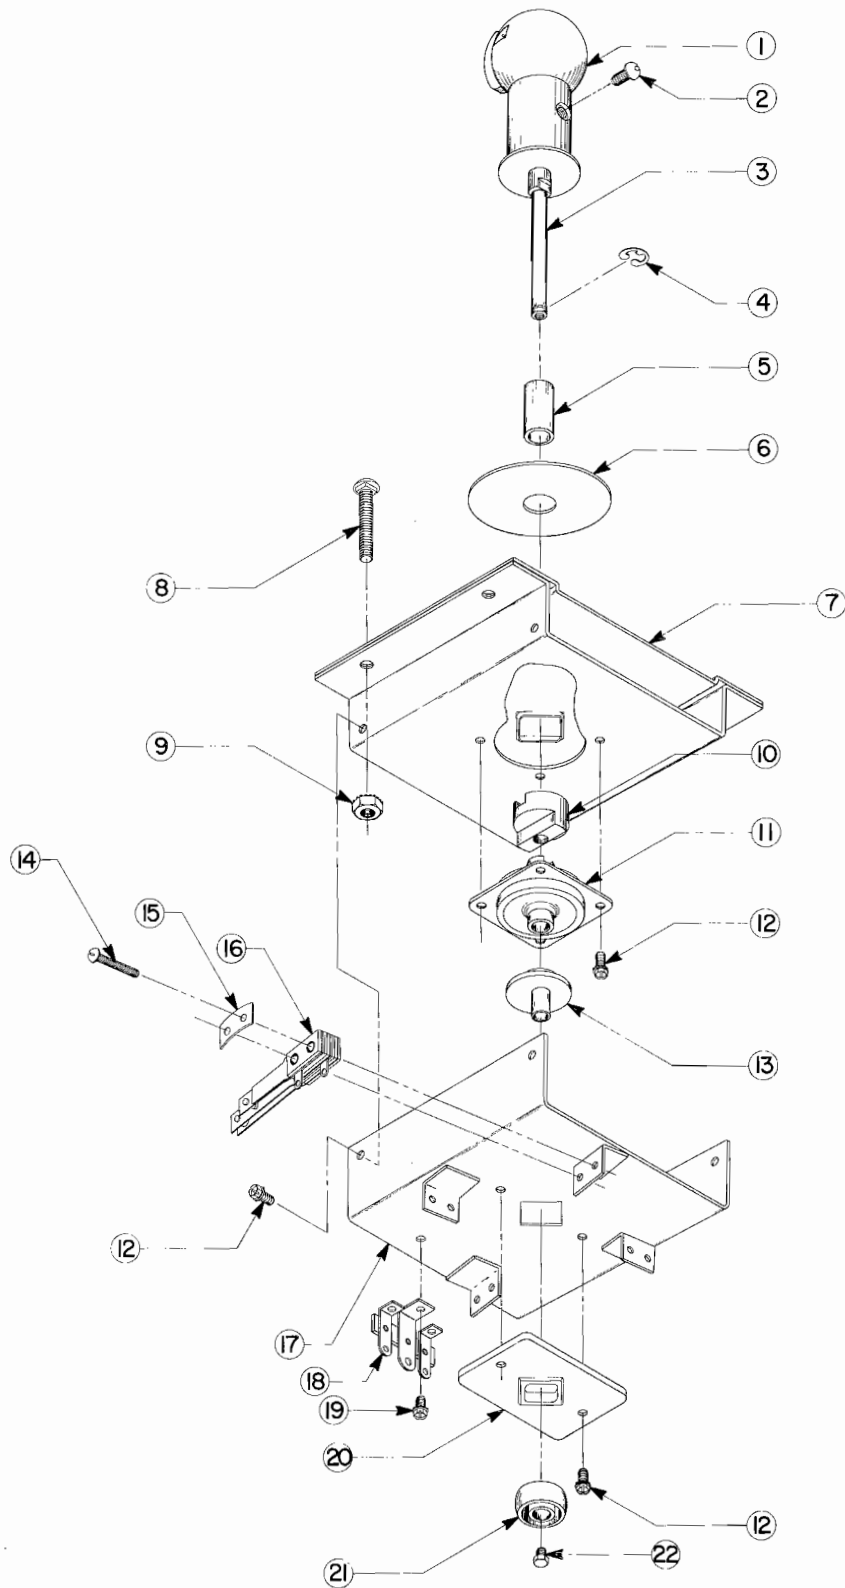


**SOLAR FOX — CONTROL ASSEMBLY — COCKTAIL & MINI PARTS LIST**

*ORDER BY PART NUMBER ONLY*

<b>ITEM</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	A727-00020-0000	KNOB & SWITCH ASSY.
	0010-00267-0000	COMPRESSION SPRING
	0017-00032-0103	SWITCH
2	0017-00101-0148	#8-32 x 1/4 TAMPER RESISTANT TORX SCREW (2 REQ'D.)
3	0727-00703-00XF	SHAFT
4	0017-00100-0025	1/4" E-RING
5	0578-00903-0000	SLEEVE
6	0921-00902-0000	SLIDE PLATE
7	A595-00006-0000	PIVOT PLATE WELD ASSY.
8	0017-00101-0637	#8-32 x 1" CARRIAGE BOLT (4 REQ'D.)
9	0017-00103-0061	#8-32 HEX NUT W/SEMS (4 REQ'D.)
10	0727-00700-00XF	ADAPTOR
11	0727-00907-0000	GROMMET
12	0017-00101-0598	#8-32 x 5/16 SLT. HEX HD. SCREW (10 REQ'D.)
13	0962-00904-0000	SLEEVE
14	0017-00101-0527	#5-40 x 5/8 SLT. RND. HD. SCR. (8 REQ'D.)
15	0020-00202-0000	SWITCH PLATE (4 REQ'D.)
16	A932-00009-0000	SWITCH ASSEMBLY (4 REQ'D.)
17	A932-00012-00XF	STOP PLATE & SWITCH BRKT. ASSY.
18	0017-00021-0634	2 POSITION TERMINAL STRIP
19	0017-00101-0107	#6 x 5/16 SLT. HEX HD. SCREW
20	0932-00905-0000	WEAR PLATE
21	0921-00700-0000	ACTUATOR
22	0727-00704-0000	END GROMMET

FRONT DOOR ASSEMBLY — U.S.A. 25¢

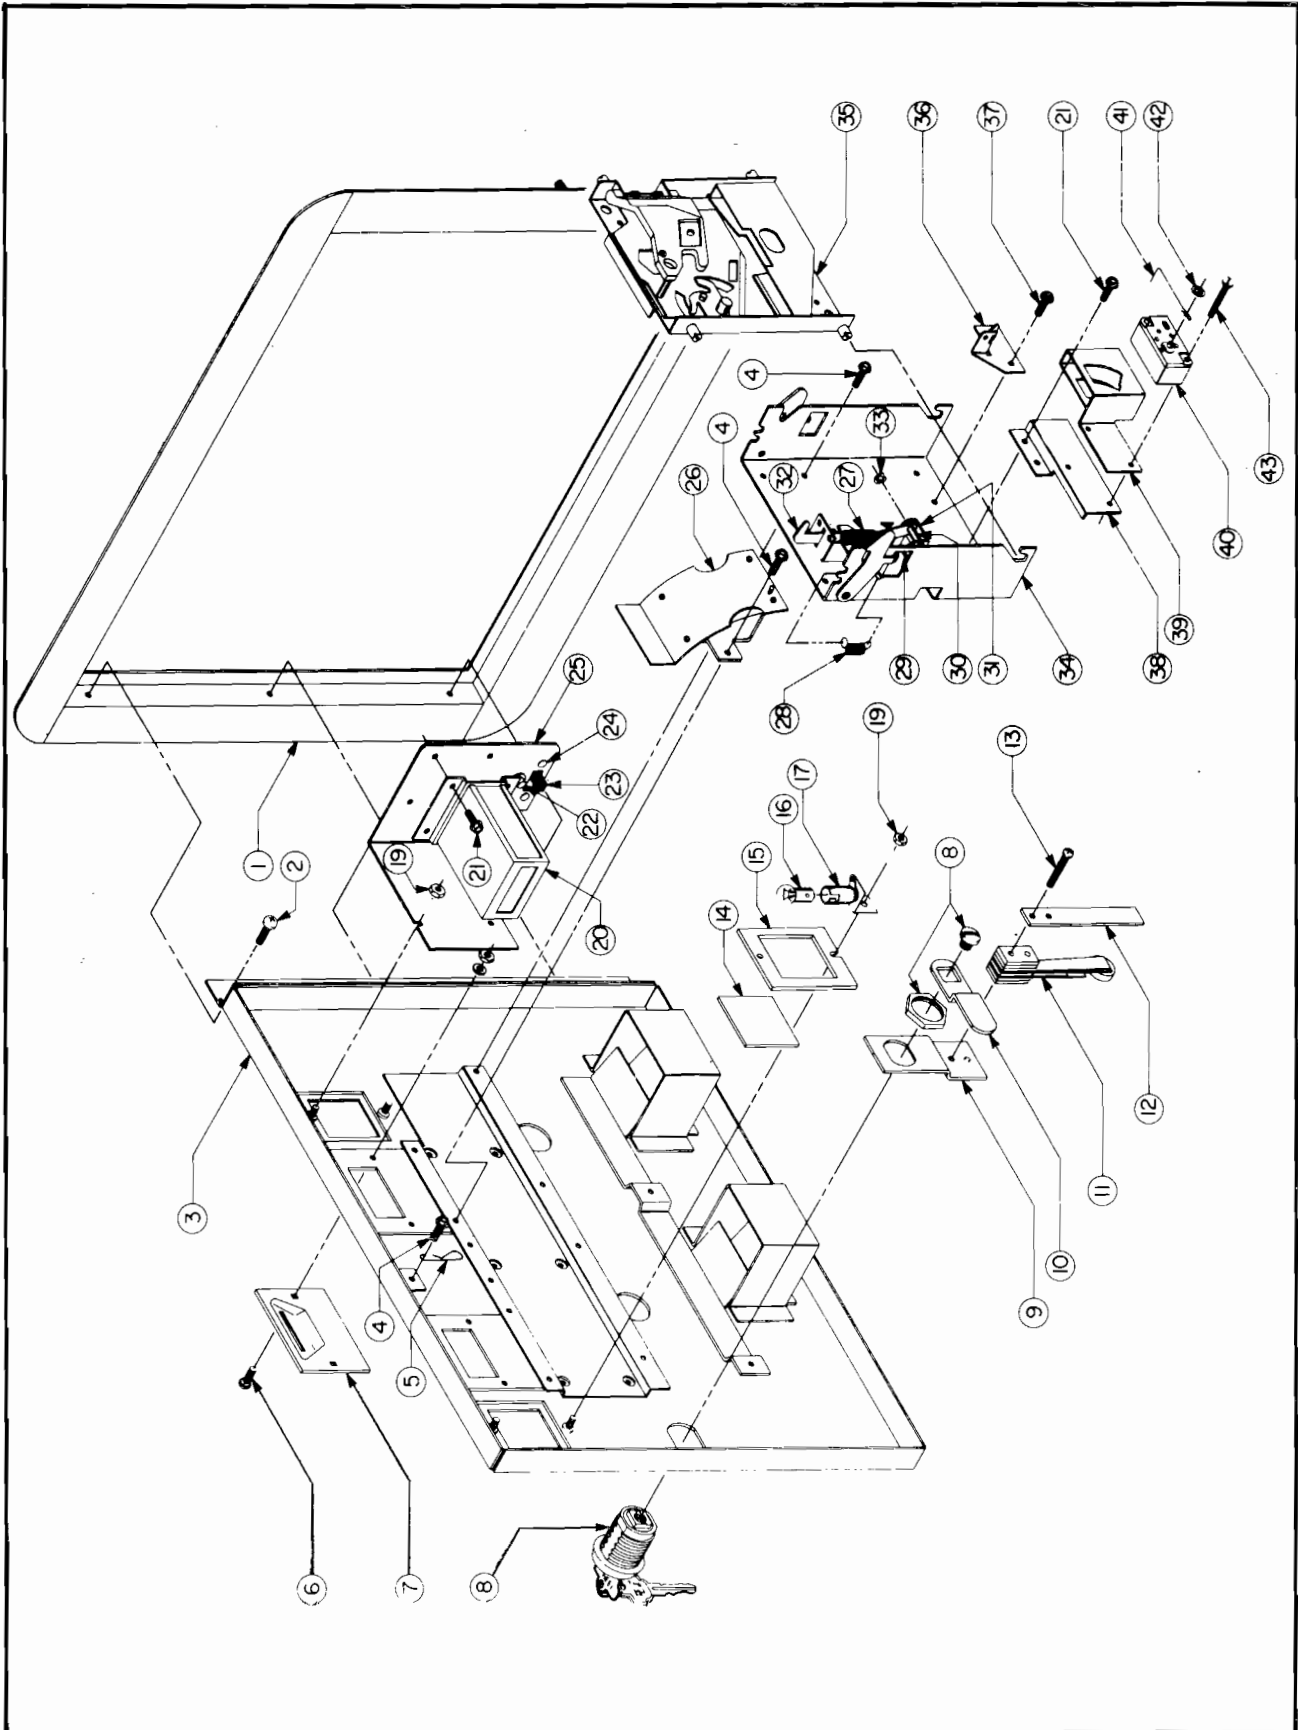


**FRONT DOOR ASSEMBLY — U.S.A. 25¢**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	0090-00002-02BK	DOUBLE ENTRY COIN DOOR FRAME
2	0017-00101-0121	#6-32 x 5/16 PHIL. TRS. HD. SCR. (3 REQ'D.)
3	A090-00073-02BK	DOUBLE ENTRY COIN DOOR W/DRESS PLATE
4	0017-00101-0123	#8 x 1/4 UNSLOT. HEX HD. SCREW (4 REQ'D.)
5	0017-00007-0019	KEY HOOK
6	0017-00101-0552	#6-32 x 1/4 CARRIAGE BOLT (4 REQ'D.)
7	0090-00117-03XF	COIN ENTRY PLATE — 25¢ (2 REQ'D.)
8	A097-00005-0000	DOOR LOCK & KEY W/SCREW & NUT (OR)
8	A097-00006-0000	DOOR LOCK & KEY W/SCREW & NUT
9	0090-00128-00XF	DOOR TILT SWITCH BRKT.
10	0017-00005-0041	DOOR CAM
11	A090-00096-0000	DOOR TILT SWITCH
12	0090-00126-01XF	SWITCH BACK-UP PLATE
13	0017-00101-0525	#5-40 x 9/16" PHIL. HD. M.S. (2 REQ'D.)
	A090-00096-0000	DOOR TILT SWITCH & BRKT. ASSY. (ITEMS 9 & 11 THRU 13)
14	0090-00903-9500	25¢ WINDOW (2 REQ'D.)
15	0090-00143-00XF	COIN PLEX RETAINER
16	0017-00003-0219	12 VOLT LAMP — G.E. #194 (2 REQ'D.)
17	0017-00031-0048	WEDGE SOCKET W/BRKT. (2 REQ'D.)
19	0017-00103-0084	#6-32 HEX NUT W/SEMS (4 REQ'D.)
20	A090-00089-0000	COIN METER W/DIODE
21	0017-00101-0124	#6 x 1/4 UNSLOT. HEX HD. SCR. (8 REQ'D.)
22	0017-00032-0051	PUSH BUTTON SWITCH
23	0017-00032-0007	SLIDE SWITCH
24	0017-00072-0034	STEEL OVAL HD. RIVET
25	0090-00173-0000	COIN COUNTER MTG. BRKT.
	A090-00082-0100	TEST SWITCH & BRKT. ASSY. (ITEMS 23 THRU 25)
26	A090-00087-0000	COIN CHUTE & TOP ASSY. (2 REQ'D.)
27	0010-00134-0000	SPRING
28	0010-00181-0000	SPRING
29	0017-00007-0083	1/8 x 1-5/8 ROLL PIN
30	0090-00129-00XF	PIVOT POST
31	0090-00167-00XF	PIVOT LEVER
32	0093-00155-00XF	REJECT LEVER
33	0017-00100-0018	E-RING
	A090-00088-0000	REJECT LEVER ASSY. (2 REQ'D.) (ITEMS 30 THRU 33)
34	A090-00085-0000	COIN ACCEPTOR FRAME ASSY. (2 REQ'D.)
35	0017-00005-0003	COIN ACCEPTOR W/STRING CUTTER (2 REQ'D.) (OR)
35	0017-00005-0211	COIN ACCEPTOR W/ANTI STRING DEVICE (2 REQ'D.) (OR)
35	0017-00005-0214	COIN ACCEPTOR W/STRING CUTTER (2 REQ'D.)
36	A090-00064-0000	ANTI-PENNY DEVICE
37	0017-00101-0099	#6 x 1/4 SLT. HEX HD. M.S. (2 REQ'D.)
38	0090-00162-00XF	COIN SWITCH MTG. BRKT.
39	0017-00005-0203	COIN SWITCH CHUTE
40	0017-00005-0195	COIN SWITCH
41	0010-00599-0000	COIN SWITCH WIRE
42	0017-00007-0132	PUSH-ON RING
	A090-00059-0400	COIN SWITCH & WIRE ASSY. (ITEMS 40 THRU 42)
43	0017-00101-0698	#4-40 x 3/4 SLT. RND. HD. M.S. (2 REQ'D.)
	A090-00077-0000	COIN GUIDE & SWITCH ASSY. (ITEMS 38 THRU 43)


SOLAR FOX — ALL VERSIONS — CONTROL SWITCH ASSY.

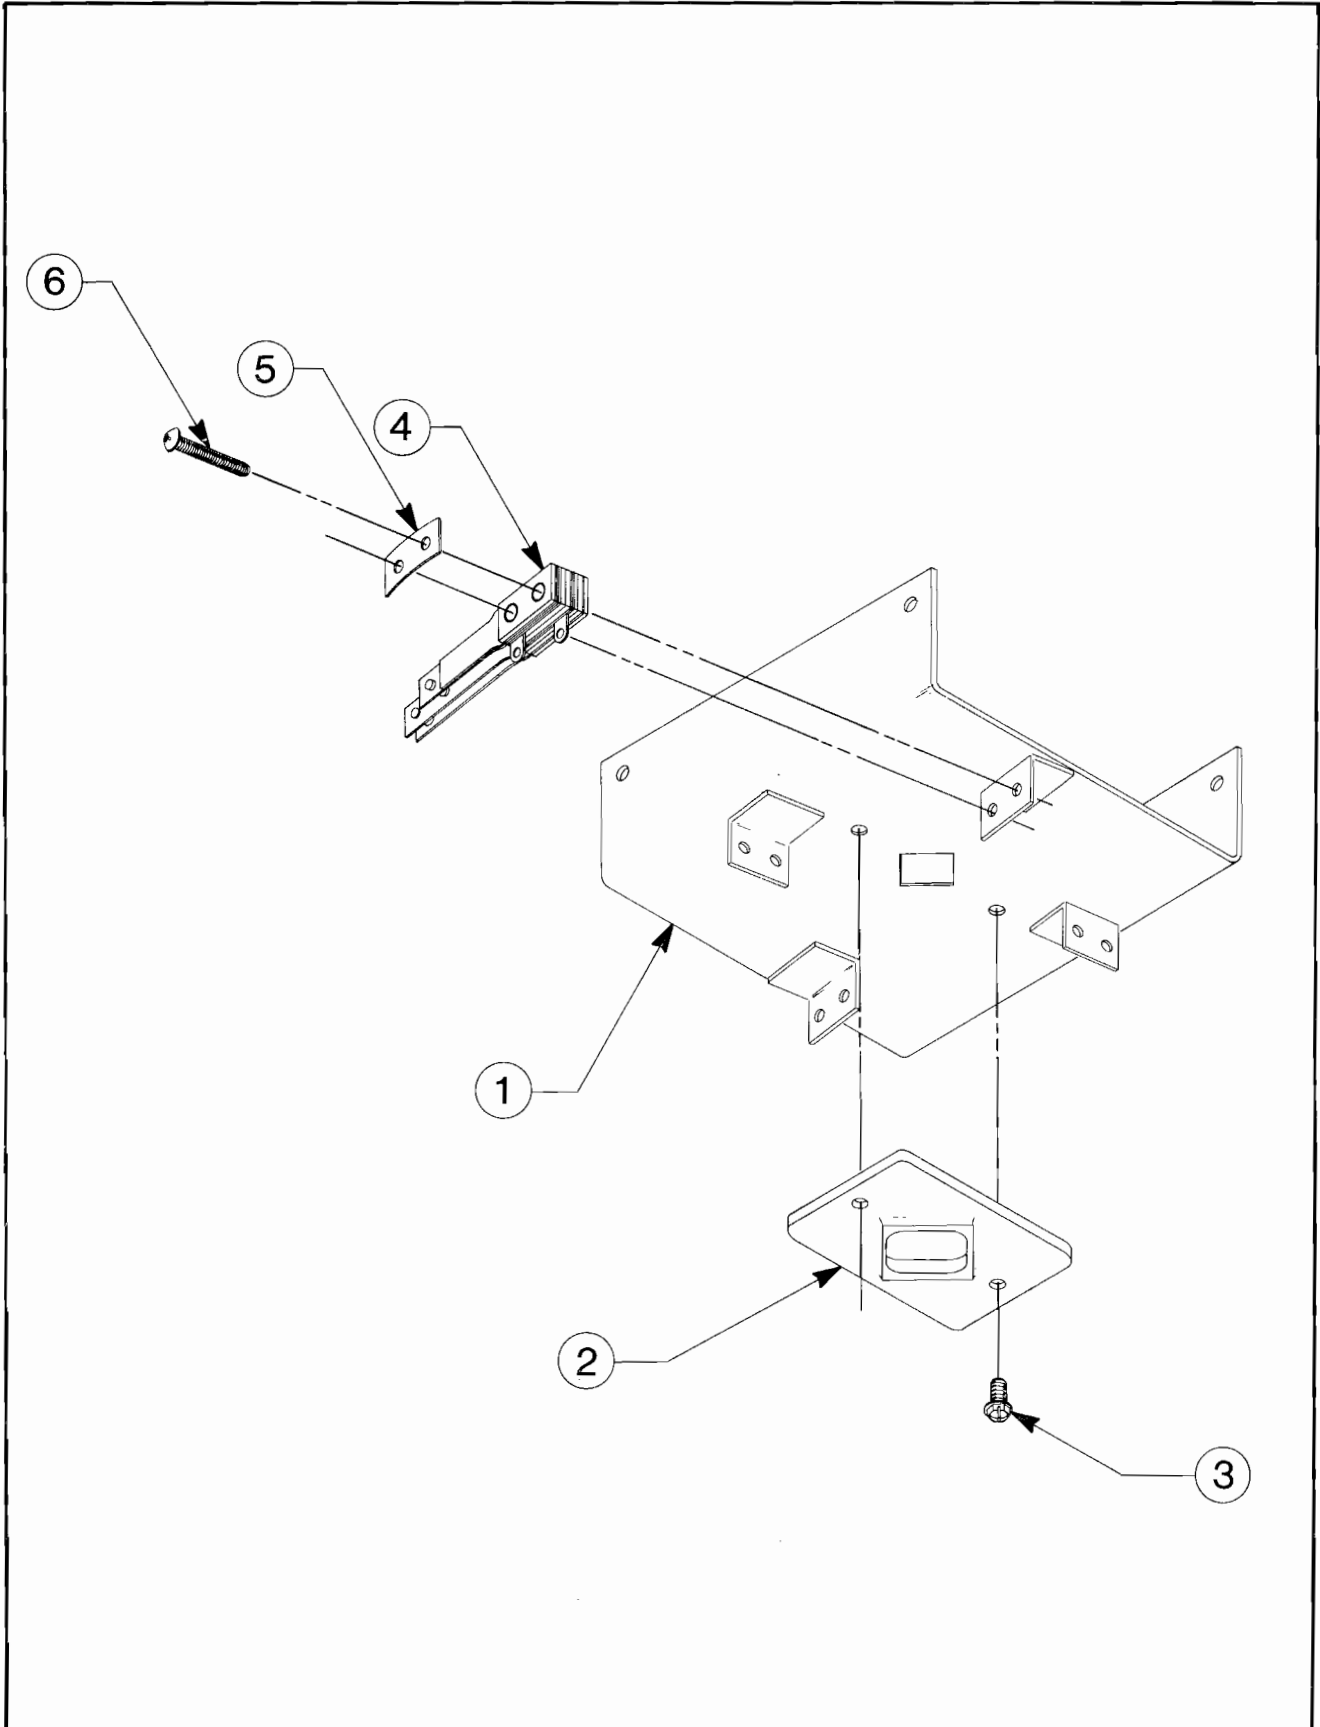

**SOLAR FOX — ALL VERSIONS — CONTROL SWITCH ASSY. — PARTS LIST**

*ORDER BY PART NUMBER ONLY*

ITEM	PART NO.	DESCRIPTION
1	A628-00031-0000	STOP PLATE & SWITCH BRKT.
2	0932-00905-0000	WEAR PLATE
3	0017-00101-0598	#8-32 x 5/16 SLT. HEX. HD. SCREW (2 REQ'D.)
4	A932-00009-0000	SWITCH ASSY. (4 REQ'D.)
5	0020-00202-0000	SWITCH PLATE (4 REQ'D.)
6	0017-00101-0527	#5-40 x 5/8 SLT. RND. HD. M.S. (8 REQ'D.)

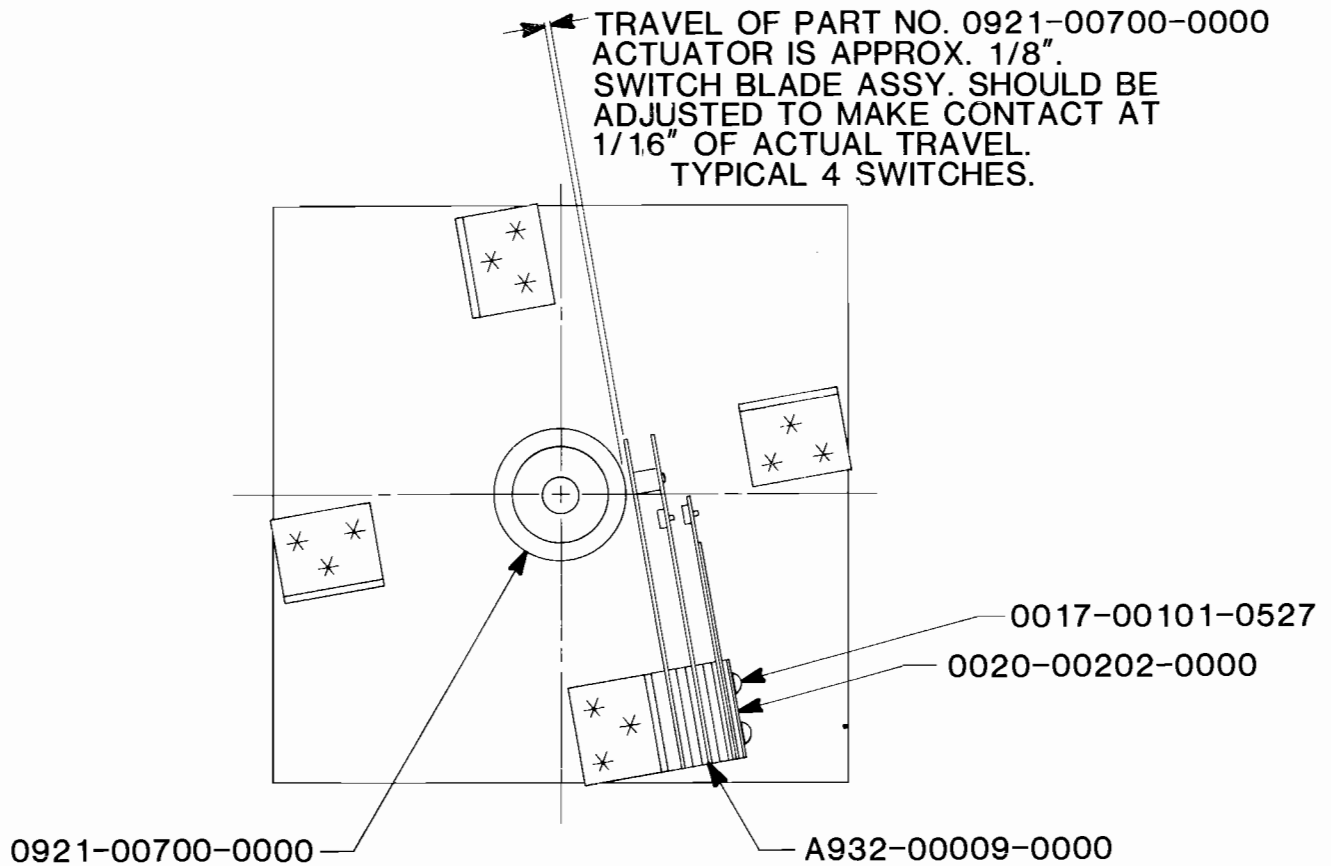

# VI Technical Troubleshooting

## Introduction

The most common problems occur in harness components such as the coin acceptor, player controls, interconnecting wiring, etc. The TV monitor and PCB computer cause their share of problems too, but not as much as the harness and its component parts. TV monitor troubleshooting will not be covered here because it is covered in that section of this manual.

As you already know, the PCB computer is a complex device with a number of different circuits. Some circuits remain basically the same among games, but overall there are a great many differences between them. PCB troubleshooting procedures, therefore, can be lengthy and will differ greatly among games. However, some basic Z-80 CPU information is involved in this section.

## General Suggestions

The first step in any troubleshooting procedure is correctly identifying the malfunction's symptoms. This includes not only the circuits or features malfunctioning, but also those still operational. A carefully trained eye will pick up other clues as well. For instance, a game in which the computer functions fail completely just after money was collected may have a quarter shorting the PCB traces. Often, an experienced troubleshooter will be able to spot the cause of the problem even before opening the cabinet.

After all the clues are carefully considered, the possible malfunctioning areas can be narrowed down to one or two good suspects. Those areas can be examined by a process of elimination until the cause of the malfunction is discovered.

## Harness Component Troubleshooting

Typical problems falling in this category are coin and credit problems, power problems and failure of individual features.

### NO GAME CREDIT

For example, your prospective player inserts his quarter and is not awarded a game. The first item to check is if the quarter is returned. If the quarter is returned, the malfunction most certainly lies in the coin acceptor itself. First, use a set of test coins (both old and new) to ascertain that the player's coin is not undersize or underweight. If your test coins are also returned, coin acceptor servicing is indicated. Generally, the cause of this particular problem is a maladjusted magnet gate. Normally, this will mean slightly closing the magnet gate a little by turning the adjusting screw out a bit (see section on coin acceptor for more details).

If the quarter is not returned and there is no game credit, the cause of the malfunction may be in one of several areas. First try operating the coin return button; if the coin is returned, the problem is most likely in the magnet gate. Enlarge the gap according to the coin acceptor service procedures. If this does not cure the problem, remove the coin acceptor, clean it and perform the major adjustment procedure.

If the trapped coin is not returned when the wiper lever is actuated, you may have an acceptor jammed by a slug, gummed up with beer, a jammed coin chute, or mechanical failure of the acceptor mechanism. In this case, first check for the slug that will generally be trapped against the magnet. If so, simply remove the slug and test the acceptor. If the chute is blocked, remove the acceptor and remove the jammed coins. If there is actual failure of the acceptor, remove the unit and repair as indicated in the coin acceptor service procedures.

If the coin is making its way through the acceptor (that is, falling into the coin box), yet there is still no game credit, you either have a mechanical failure of the coin switch or electrical failure of the coin and credit circuits. The first place to begin is by checking the coin switch. Most of these switches are the make/break variety of micro switch, which is checked by testing for continuity between the NO, NC, and C terminals. When not actuated, the NC and C terminals should be continuous and the NO terminal open. When operated, the NO and C terminals should close and the NC should be open. If the coin switch checks out, examine the connections to the terminals to make sure there is good contact. If necessary, use the continuity tester and check from the terminal lug on the switch to the associated PCB trace. This will tell you if there is a continuous line all the way to the credit circuit.

If the coin switch wires do not check out, the problem is in the computer — most likely in the coin and credit circuitry.

If you do get game credit when a coin is deposited, but the game will not start when the start switch is pressed, you may have a problem in the start switch, the interconnecting wiring or in the computer. First check the switch. If the switch is OK, proceed to check the wiring. Again, make sure you go from the terminal lug on the switch to the PCB trace. This way, you will check the terminal contact as well as PCB edge connector contact. If the wiring is continuous, proceed to check the PCB credit circuit. If not, check each section of the wiring, until the discontinuity is located. If the wiring is OK, the problem must lie in the computer.

## Transformer and Line Voltage Problems

Your machine must have the correct line voltage to operate properly. If the line voltage drops too low, a circuit in the computer will disable game credit. The point at which the computer will fail to work will vary some from game to game, but no game will work on line voltage that drops below 105 VAC.

Low line voltage may have many causes. Line voltage normally fluctuates a certain amount during the day as the total usage varies. Peak usage times occur mainly at dawn or dusk, so if your machine's malfunction seems to be related to the time of day, this may be a factor. A large load connected to the same line as the game (such as a large air conditioner or other device with an exceptionally large motor) may drop the line voltage significantly when starting up. This drop can result in an intermittent credit problem. In addition, poor connections in the location wiring, plug, or line cord may also cause a significant drop in power. Cold solder joints in the game's harness, especially in areas like the transformer connections, interlock switch, or fuse block, may also produce the same results, although probably on a more permanent basis.

Sometimes location owners (especially in bars) replace light switches with dimmer rheostats, and the game is sometimes on the same line. Obviously, the voltage available to the game is going to drop dramatically when the dimmer is turned.

In any case, the way to check for correct line voltage is with your VOM. Set the VOM to 250 VAC and stick the probes in the wall receptacle. If it's OK here, check the transformer primary connections. If you do not get 117 VAC, examine the solder joints on the transformer, fuse block, and interlock switch. If you do get 117 VAC, the problem must be either in the transformer, harness connections, or in the PCB power supply.

If you suspect the transformer, check its secondaries with the VOM set to 50 VAC and correlate the readings with the legend on the side of the transformer. The transformer must also be correctly grounded, so check the ground potential as well, especially if there is a hum bar rolling up or down the TV screen.

## HARNESS PROBLEMS

Other harness problems include blowing fuses and malfunctioning controls. The repeating blown-fuse problem can sometimes be quite exasperating to solve, for short circuits have the tendency to occur in areas almost impossible to find. First, try inserting a new fuse, as old fuses age and blow without cause. If the new one also blows, you definitely have a short.

The best way to approach this problem is by turning the power off and disconnecting devices that may be causing the problem, such as the TV, transformer, and PCB. Disconnect the devices by pulling off their connectors, but do not allow them to touch. If necessary, insulate them with small pieces of electrical tape. Then, connect your VOM across the terminals of the fuse block (all electrical power shut off), and set it to one of the resistance scales. This will save blowing a fuse each time you want to check the circuit.

If the VOM reveals that disconnecting the devices removed the short, reconnect the devices one by one until the short returns. The last device connected is the one that is at fault. If the VOM reads a short even after the devices are disconnected, the fault must lie in the harness itself, and only patient exploration will reveal its location. First, carefully examine all the wiring, looking for terminals that may be touching, metal objects such as coins shorting connections or burned insulation. If necessary, use the VOM to check each suspected wire.

## MALFUNCTIONING CONTROLS

One of the most common problems here is a bad potentiometer. Typically, a bad pot will cause the image to jump as it reaches a certain point. The only cure for this one is to install a new pot.

If a feature that is operated by a switch (for example, joysticks, foot pedals, control panel buttons) does not operate at all, check the switch with a VOM or continuity tester to verify its operation. If the switch does not check out, replace it. If the switch is OK, you should suspect the input to the switch from the PCB. In this case, get out the harness and logic schematics and check to see what kind of input it is. In many cases, the input will be +5 VDC. If so, use the VOM to check its presence. Normally, the switch is used to pull a +5 VDC line LOW to GND or to pull a LOW line HIGH. If the PCB output is missing, check the wire length from the PCB. If you find the signal at the PCB trace, the wire length or connection is at fault. If not, begin exploring the PCB using the logic schematics.

# A Glossary of Microprocessor Terms

**MICROPROCESSOR** — one or several microcircuits that perform the function of a computer's CPU. Sections of the circuit have arithmetic and comparative functions that perform computations and executive instructions.

**CPU** — central-processing unit. A computing system's "brain", whose arithmetic, control and logic elements direct functions and perform computations. The microprocessor section of a microcomputer is on one chip or several chips.

**PROM** — programmable read-only memory. User permanently sets binary on-off bits in each cell by selectively fusing or not fusing electrical links. Non-erasable. Used for low-volume applications.

**EPROM** — erasable, programmable, read-only memory. Can be erased by ultraviolet light bath, then reprogrammed. Frequently used during design and

development to get programs debugged, then replaced by ROM for mass production.

**ROM** — read-only memory. The program, or binary on-off bit pattern, is set into ROM during manufacture, usually as part of the last metal layer put onto the chip. Nonerasable. Typical ROM's contain up to 16,000 bits of data to serve as the microprocessor's basic instructions.

**RAM** — random-access memory. Stores binary bits as electrical charges in transistor memory cells. Can be read or modified through the CPU. Stores input instructions and results. Erased when power is turned off.

**LSI** — large scale integration. Formation of hundreds or thousands of so-called gate circuits on semiconductor chips. Very large scale integration (VLS) involves microcircuits with the greatest component density.

**MOS** — metal-oxide semiconductor. A layered construction technique for integrated circuits that achieves high component densities. Variations in MOS chip structures create circuits with speed and low-power requirements, or other advantages (static will damage a MOS chip).

---

## Introduction to the Z-80 CPU

The term "microcomputer" has been used to describe virtually every type of small computing device designed within the last few years. This term has been applied to everything from simple "microprogrammed" controllers constructed out of TTL MSI up to low end minicomputers with a portion of the CPU constructed out of TTL LSI "bit slices." However, the major impact of the LSI technology within the last few years has been with MOS LSI. With this technology, it is possible to fabricate complete and very powerful computer systems with only a few MOS LSI components.

The Zilog Z-80 family of components can be configured with any type of standard semiconductor memory to generate computer systems with an extremely wide range of capabilities. For example, as few as two LSI circuits and three standard TTL MSI packages can be combined to form a simple controller. With additional memory and I/O devices a computer can be constructed with capabilities that only a minicomputer could previously deliver.

New products using the MOS LSI microcomputer are being developed at an extraordinary rate. The Zilog Z-80 component set has been designed to fit into this market through the following factors:

1. The Z-80 is fully software compatible with the popular 8080A CPU.
2. Existing designs can be easily converted to include the Z-80.
3. The Z-80 component set is at present superior in both software and hardware capabilities to any other microcomputer system on the market today.
4. For increased throughput the Z80A operating at a 4 MHz clock rate offers the user significant speed advantages.

Microcomputer systems are extremely simple to construct using Z-80 components. Any such system consists of three parts:

1. **CPU (Central Processing Unit)**
2. **Memory**
3. **Interface Circuits to peripheral devices**

The CPU is the heart of the system. Its function is to obtain instructions from the memory and perform the desired operations. The memory is used to contain instructions and in most cases data that is to be processed. For example, a typical instruction sequence may be to read data from a specific peripheral device, store it in a location in memory, check the parity and write it out to another peripheral device. Note that the Zilog component set includes the CPU and various general purpose I/O device controllers, while a wide range of memory devices may be used from any source. Thus, all required components can be connected together in a very simple manner with virtually no other external logic.

## General Purpose Registers

There are two matched sets of general purpose registers, each set containing six 8-bit registers that may be used individually as 8-bit registers or as 16-bit register pairs by the programmer. One set is called BC, DE and HL while the complementary set is called BC', DE' and HL'. At any one time the programmer can select either set of registers to work with through a single exchange command for the entire set. In systems where fast interrupt response is required, one set of general purpose registers and an accumulator/flag register may be reserved for handling this very fast routine. Only a simple exchange command need be executed to go between the routines. This greatly reduces interrupt service time by eliminating the requirement for saving and retrieving register contents in the external stack during interrupt or subroutine processing. These general purpose registers are used for a wide range of applications by the programmer. They also simplify programming, especially in ROM based systems where little external read/write memory is available.

## Arithmetic & Logic Unit (ALU)

The 8-bit arithmetic and logical instructions of the CPU are executed in the ALU. Internally the ALU communicates with the registers and the external

data bus on the internal data bus. The type of functions performed by the ALU include:


<b>Add</b>	Left or right shifts or rotates (arithmetic and logical)
<b>Subtract</b>	Increment
<b>Logical AND</b>	Decrement
<b>Logical OR</b>	Set bit
<b>Logical Exclusive OR</b>	Reset bit
<b>Compare</b>	Test bit

## Instruction Register and CPU Control

As each instruction is fetched from memory, it is placed in the instruction register and decoded. The control sections performs this function and then generates and supplies all of the control signals necessary to read or write data from or to the registers, control the ALU and provide all required external control signals.

## Z-80 CPU Pin Description

The Z-80 CPU is packaged in an industry standard 40 pin Dual In-Line Package. The I/O pins are shown in the below figure and the function of each is described.

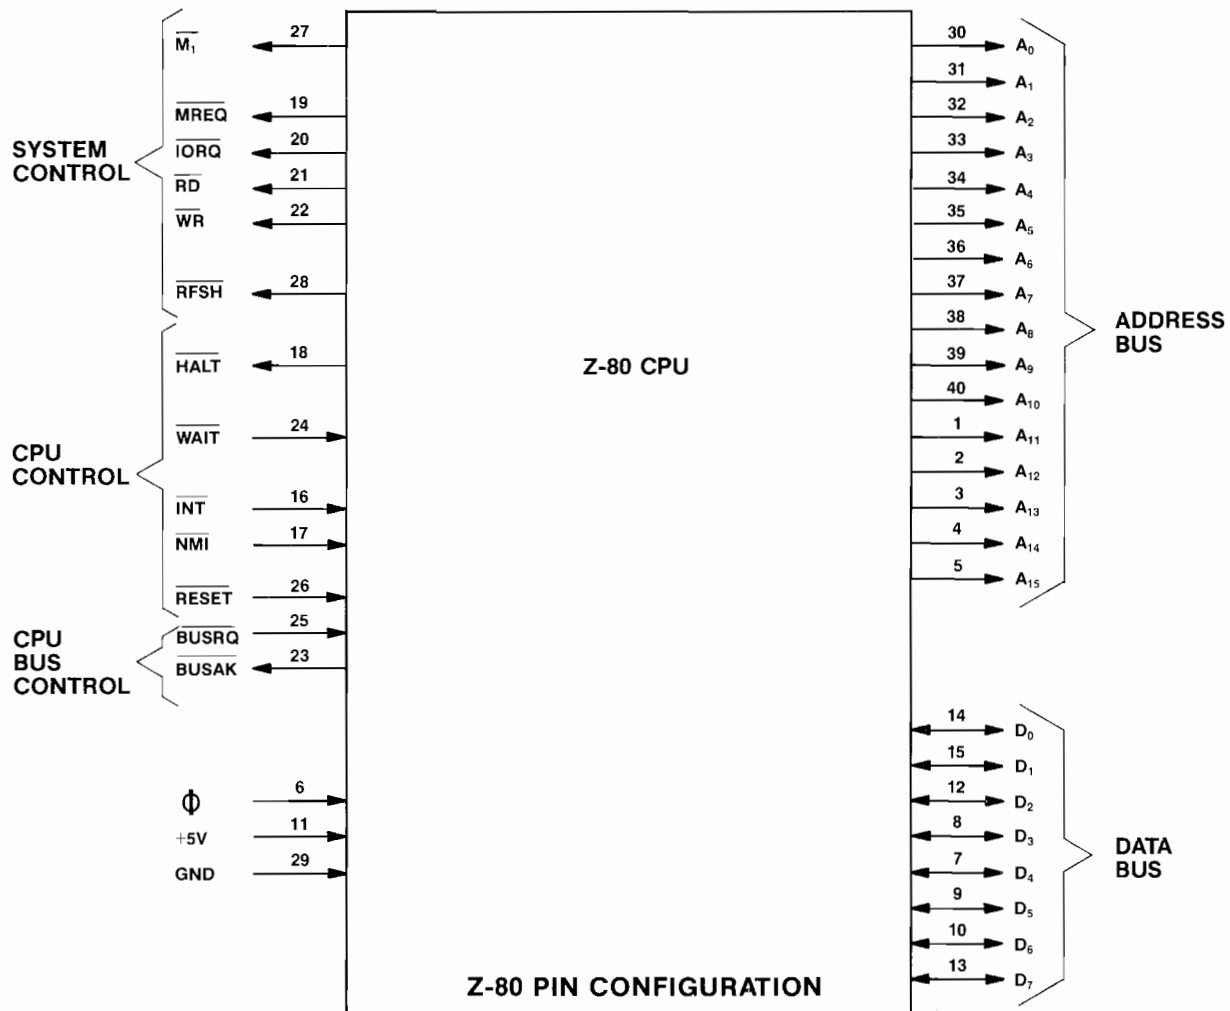

**A<sub>0</sub>-A<sub>15</sub>****(Address Bus)**

Tri-state output, active high. A<sub>0</sub>-A<sub>15</sub> constitute a 16-bit address bus. The address bus provides the address for memory (up to 64K bytes) data exchanges and for I/O device data exchanges. I/O addressing uses the 8 lower address bits to allow the user to directly select up to 256 input or 256 output ports. A<sub>0</sub> is the least significant address bit. During refresh time, the lower 7 bits contain a valid refresh address.

**D<sub>0</sub>-D<sub>7</sub>****(Data Bus)**

Tri-state input/output, active high. D<sub>0</sub>-D<sub>7</sub> constitute an 8-bit bidirectional data bus. The data bus is used for data exchanges with memory and I/O devices.

**M<sub>1</sub>****(Machine Cycle one)**

Output, active low. M<sub>1</sub> indicates that the current machine cycle is the OP code fetch cycle of an instruction execution. Note that during execution of 2-byte op-codes,  $\overline{M1}$  is generated as each op code byte is fetched. These two byte op-codes always begin with  $\overline{CBH}$ ,  $\overline{DDH}$ ,  $\overline{EDH}$  or  $\overline{FDH}$ .  $\overline{M1}$  also occurs with  $\overline{IORQ}$  to indicate an interrupt acknowledge cycle.

**MREQ****(Memory Request)**

Tri-state output, active low. The memory request signal indicates that the address bus holds a valid address for a memory read or memory write operation.

**IORQ****(Input/Output Request)**

Tri-state output, active low. The  $\overline{IORQ}$  signal indicates that the lower half of the address bus holds a valid I/O address for a I/O read or write operation. An  $\overline{IORQ}$  signal is also generated with an M<sub>1</sub> signal when an interrupt is being acknowledged to indicate that an interrupt response vector can be placed on the data bus. Interrupt Acknowledge operations occur during M<sub>1</sub> time while I/O operations never occur during M<sub>1</sub> time.

**RD****(Memory Read)**

Tri-state output, active low.  $\overline{RD}$  indicates that the CPU wants to read data from memory or an I/O device. The addressed I/O device or memory should use this signal to gate data onto the CPU data bus.

**WR****(Memory Write)**

Tri-state output, active low.  $\overline{WR}$  indicates that the CPU data bus holds valid data to be stored in the addressed memory or I/O device.

**RFSH****(Refresh)**

Output, active low.  $\overline{RFSH}$  indicates that the lower 7 bits of the address bus contain a refresh address for dynamic memories and the current MREQ signal should be used to do a refresh read to all dynamic memories.

**HALT****(Halt state)**

Output, active low.  $\overline{HALT}$  indicates that the CPU has executed a HALT software instruction and is awaiting either a non maskable or a maskable interrupt (with the mask enabled) before operation can resume. While halted, the CPU executes NOP's to maintain memory refresh activity.

**WAIT****(Wait)**

Input, active low.  $\overline{WAIT}$  indicates to the Z-80 CPU that the addressed memory or I/O devices are not ready for a data transfer. The CPU continues to enter wait states for as long as this signal is active. This signal allows memory or I/O devices of any speed to be synchronized to the CPU.

**INT****(Interrupt Request)**

Input, active low. The Interrupt Request signal is generated by I/O devices. A request will be honored at the end of the current instruction if the internal software controlled interrupt enable flip-flop (IFF) is enabled and if the  $\overline{BUSRQ}$  signal is not active. When the CPU accepts the interrupt, an acknowledge signal ( $\overline{IORQ}$  during M<sub>1</sub> time) is sent out at the beginning of the next instruction cycle. The CPU can respond to an interrupt in three different modes that are described in detail in section 5.4 (CPU Control Instructions).

**NMI****(Non-Maskable Interrupt)**

Input, negative edge triggered. The non maskable interrupt request line has a higher priority than  $\overline{INT}$  and is always recognized at the end of the current instruction, independent of the status of the interrupt enable flip-flop. NMI automatically forces the Z-80 CPU to restart to location 0066H. The program counter is automatically saved in the external stack so that the user can return to the program that was interrupted. Note that continuous  $\overline{WAIT}$  cycles can prevent the current instruction from ending, and that a  $\overline{BUSRQ}$  will override a NMI.

**RESET**

Input, active low. RESET forces the program counter to zero and initializes the CPU. The CPU initialization includes:

- 1) Disable the interrupt enable flip-flop

- 2) Set Register I = 00H
- 3) Set Register R = 00H
- 4) Set Interrupt Mode 0

During reset time, the address bus and data bus go to a high impedance state and all control output signals go to the inactive state.

#### **BUSRQ**

##### **(Bus Request)**

Input, active low. The bus request signal is used to request the CPU address bus, data bus and tri-state output control signals to go to a high impedance state so that other devices can control these buses. When BUSRQ is activated, the CPU will set these

buses to a high impedance state as soon as the current CPU machine cycle is terminated.

#### **BUSAK**

##### **(Bus Acknowledge)**

Output, active low. Bus acknowledge is used to indicate to the requesting device that the CPU address bus, data bus and tri-state control bus signals have been set to their high impedance state and the external device can now control these signals.

#### **CLK**

##### **(Clock)**

Single phase TTL level clock which requires only a 330 ohm pull-up resistor to +5 volts to meet all clock requirements.

---

MCR II SYSTEM P.C. BOARD JUMPER OPTIONS									
VIDEO GENERATOR P.C. BOARD									
MANUFACTURER	EPROM NO.	JW#1	JW#2	JW#3	JW#4	JW#5	JW#6	JW#7	JW#8
MOTOROLA	68764	#	*	*	#	*	*	*	*
	68766	#	*	*	#	*	*	*	*
INTEL	2764	*	#	#	*	#	*	*	#
T. I.	2564	#	*	*	#	*	#	#	*
SUPER C.P.U. P.C. BOARD									
JUMPER OPTIONS FOR PROGRAM ROMS ONLY									
MANUFACTURER	EPROM NO.	JW#2	JW#4	JW#5	JW#6	JW#7	JW#18	JW#19	
MOTOROLA	68764	#	#	*	#	*	*	#	
	68766	#	#	*	#	*	*	#	
T. I.	2564	#	#	*	#	*	*	#	
INTEL	2764	*	*	#	*	#	#	*	
JUMPER OPTIONS FOR BACKGROUND ROMS ONLY									
MANUFACTURER	EPROM NO.	JW#10	JW#11	JW#12	JW#13	JW#14	JW#15	JW#16	JW#17
MOTOROLA	68764	*	#	*	#	*	#	#	*
	68766	*	#	*	#	*	#	#	*
T. I.	2564	*	#	*	#	*	#	#	*
INTEL	2764	#	*	#	*	#	*	*	#
SOUND I/O P.C. BOARD									
MANUFACTURER	EPROM NO.	JW#1	JW#2						
NUMEROUS MFR'S	2532	*	#						
NUMEROUS MFR'S	2732	#	*						

\* = CUT JUMPER WIRES WHERE THIS SYMBOL "\*" APPEARS.

# = LEAVE JUMPER WIRES IN WHERE THIS SYMBOL "#" APPEARS.

The above table illustrates the fact that the Video Generator P.C. Board used in the MCR II System has 8 jumper wires, the SUPER C.P.U. P.C. Board used in the MCR II System has 19 jumper wires, and the Sound I/O P.C. Board used in the MCR II System has 2 jumper wires.

All of the above Boards can be used with a variety of different **SETS of EPROM chips**. However, these EPROMS are not all made by the same manufacturer

and do have some internal differences. So, in order to make them function properly in their respective P.C. Boards, certain jumper wires on these Boards have to be cut.

The above table tells you which jumpers to cut (depending on which EPROM set you're going to use) by showing a "\*" under that jumper wire's number. If there is **NO** "\*" under a jumper wire's number, **THAT PARTICULAR JUMPER WIRE IS NOT TO BE CUT.**

# VII. Coin Door Maintenance

**SPECIAL NOTE:** If you have any questions about the coin acceptors in your game(s), please feel free to contact their manufacturers. Each manufacturer's name is **PROMINENTLY** imprinted on every acceptor mechanism.

Metal mechanisms only:  
**COIN MECHANISMS, INC.**  
817 Industrial Drive  
Elmhurst, IL 60126  
Phone (312) 279-9150

Metal and Plastic mechanisms:  
**COINCO COIN ACCEPTORS, INC.**  
860 Eagle Drive  
Bensenville, IL 60106  
Phone (312) 766-6781

## COIN DOOR MAINTENANCE

### METAL COIN ACCEPTOR MECHANISMS

Periodically, the metal coin acceptor mechanism(s) must be removed from the coin door and cleaned.

1. **Make sure the power to the game is off.**
2. Unlock and open the coin door.

3. Remove the coin acceptor mechanism as shown in Figure 7-1.
  - Push down on the two spring loaded latches.
  - While holding the latches down, pull the top of the coin acceptor mechanism toward you.
  - Release the latches and lift out the coin acceptor mechanism.

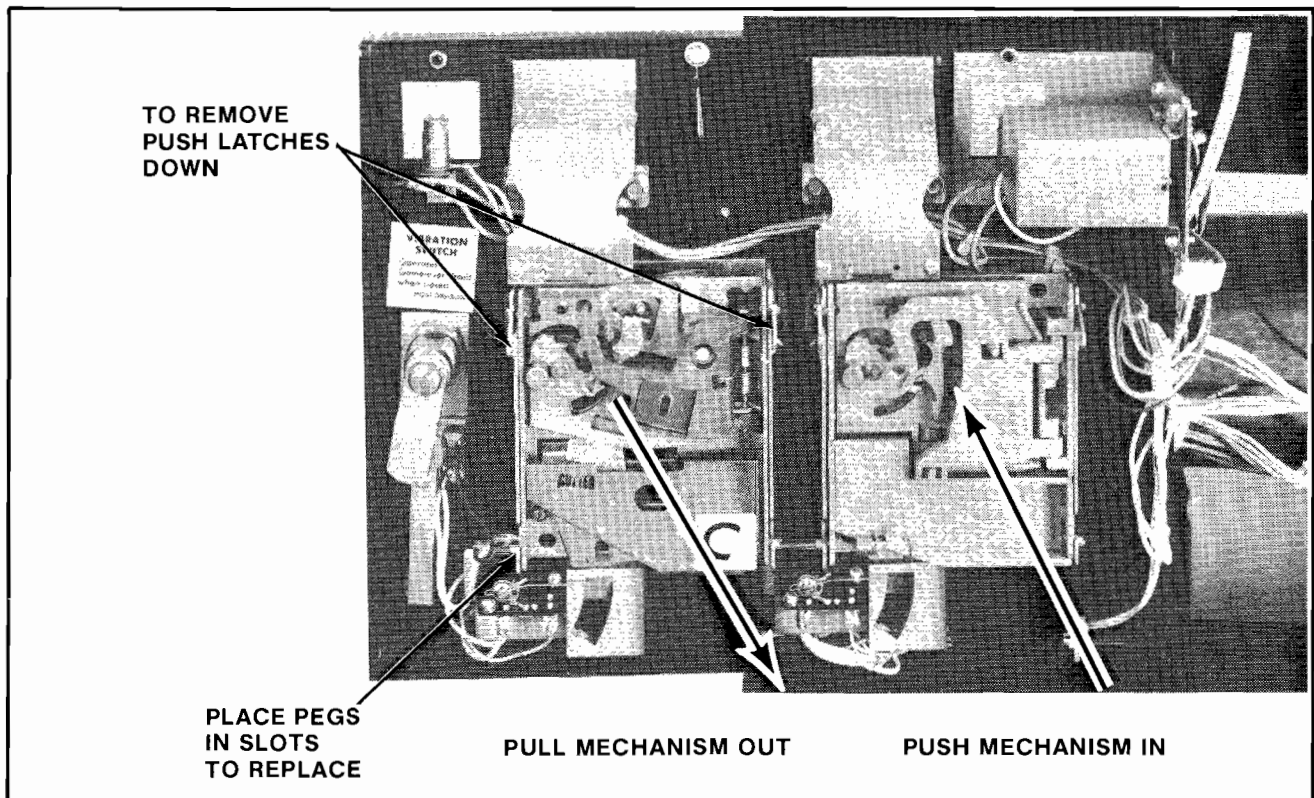


Figure 7-1 Removing and replacing coin acceptor

4. Clean the magnet of all foreign particles. See Figure 7-2.
  - This may be accomplished by swinging the gate open as shown in the above figure.
5. Remove the cradles and undersize levers and clean the bushings. (A pipe cleaner makes a good bushing cleaner.)
  - Also clean the pivot pin.
6. Whenever needed, the coin acceptor should be cleaned with hot water and cleanser in the following manner:
  - Place the coin acceptor in boiling water for about ten minutes.

**CAUTION: BE CAREFUL NOT TO BURN YOURSELF.**

- Next, use a brush and kitchen cleaner to remove all remaining foreign matter from the unit.
- Rinse the coin acceptor in clean boiling water.
- Dry the coin acceptor thoroughly by using filtered compressed air to blow it dry.

**NOTE:** The reason we recommend using boiling water is that it evaporates faster than cold water and speeds drying time.

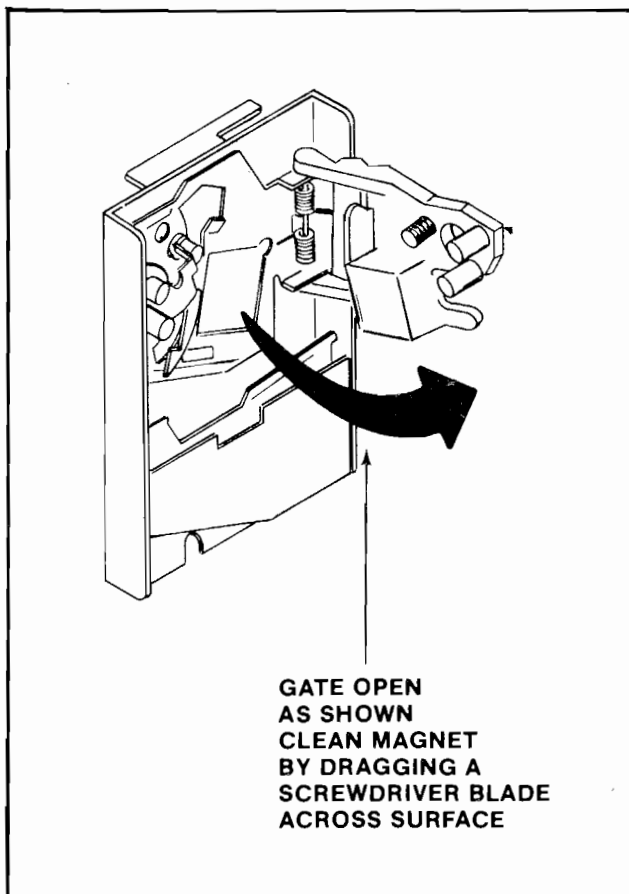


Figure 7-2 Cleaning the metal coin acceptor

7. To lubricate the coin acceptor:
  - Use **ONLY** powdered graphite and put it **ONLY** on the moving parts of the coin acceptor. These parts are called out in Figure 7-3.
  - Be extremely careful to keep the powdered graphite away from paths that are traveled by the coins.

**— WARNING —  
DO NOT USE OIL  
TO LUBRICATE THE  
COIN ACCEPTOR.**

8. Check the coin chute for obstructions such as: paper, gum, etc.
9. Reinstall the coin acceptor to the coin door. See Figure 7-1.
  - Place the two pegs at the coin acceptor's base into their retaining slots.
  - Now push the top of the coin acceptor toward the coin door until it snaps in place and is held there by the two spring loaded latches.
10. Close and lock the coin door.

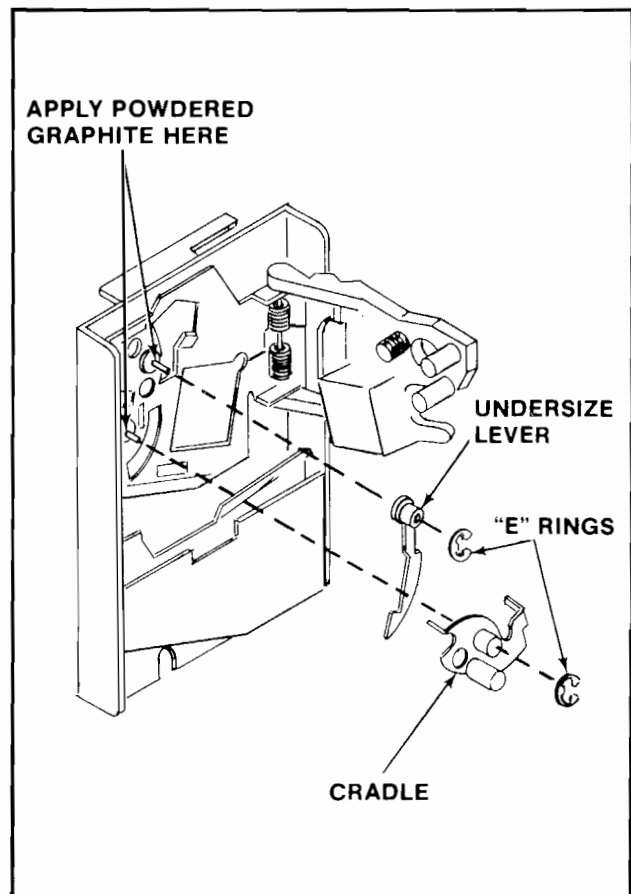


Figure 7-3 Lubricating the metal coin acceptor

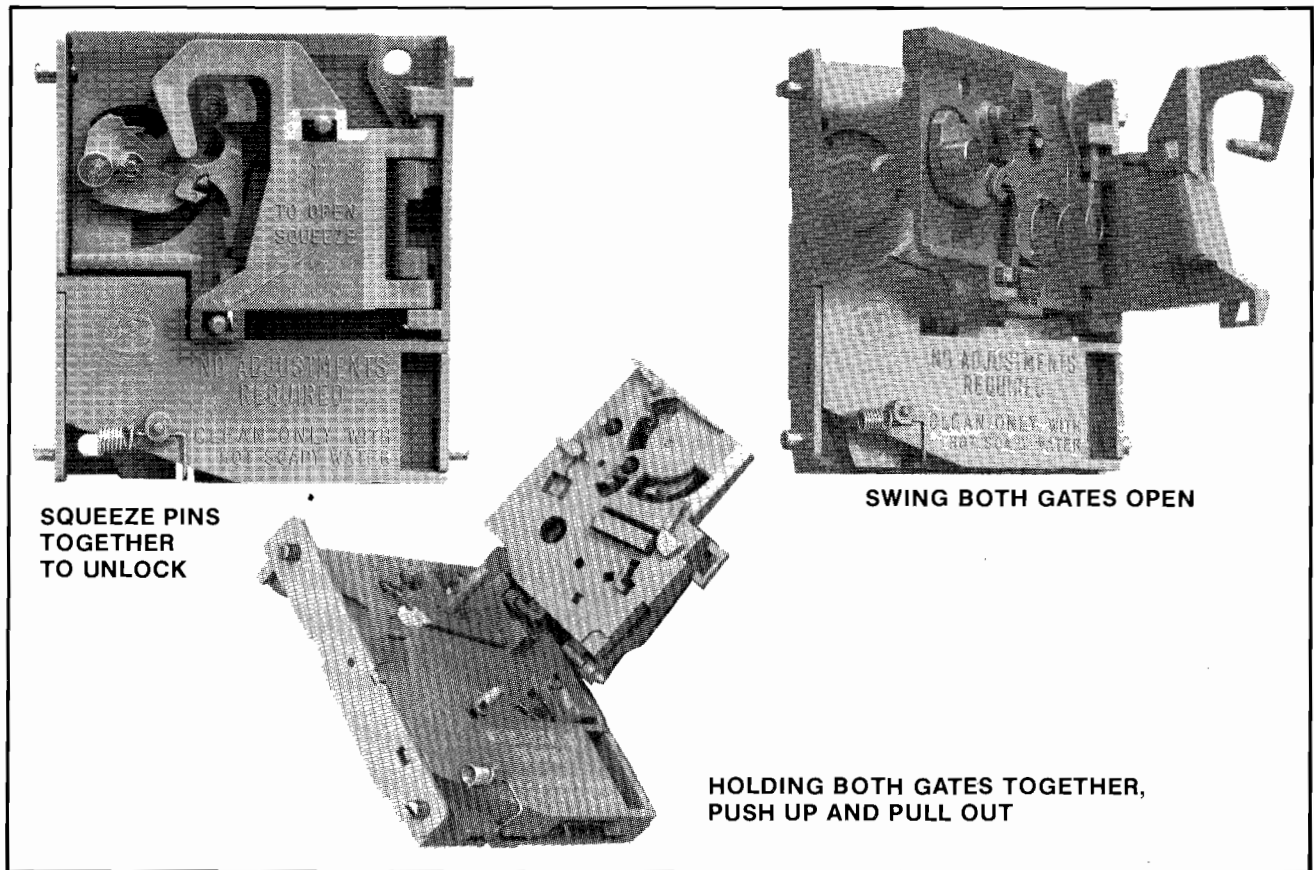


Figure 7-4 Opening the plastic coin acceptor

### PLASTIC COIN ACCEPTOR MECHANISMS


The plastic coin acceptor mechanism(s) must be removed periodically from the coin door and cleaned.

1. **Make sure the power to the game is off.**
2. Unlock and open the coin door.
3. Remove the coin acceptor mechanism(s) as shown in Figure 7-1.
  - Push down on the two spring loaded latches.
  - While holding the latches down, pull the top of the acceptor mechanism toward you.
  - Release the latches and lift out the mechanism.
4. Squeeze the two pins indicated in Figure 7-4 together to open the mechanism and break it down into its three basic parts.
  - Clean the mechanism in hot soapy water. It never rusts.
  - Rinse the mechanism in clean hot water and allow it to dry.

Reassemble the mechanism (it never needs lubrication).

5. Check the coin chute for obstructions such as: paper, gum, etc.
6. Reinstall the coin acceptor to the coin door. See Figure 7-5.
  - Place the two pegs at the coin acceptor's base into their retaining slots.
  - Now push the top of the coin acceptor toward the coin door until it snaps in place and is held there by the two spring loaded latches.
7. Close and lock the coin door.

**NOTE:** See Figure 7-6 for instructions on how to set the plastic coin acceptor mechanisms to either accept or reject Canadian quarters.

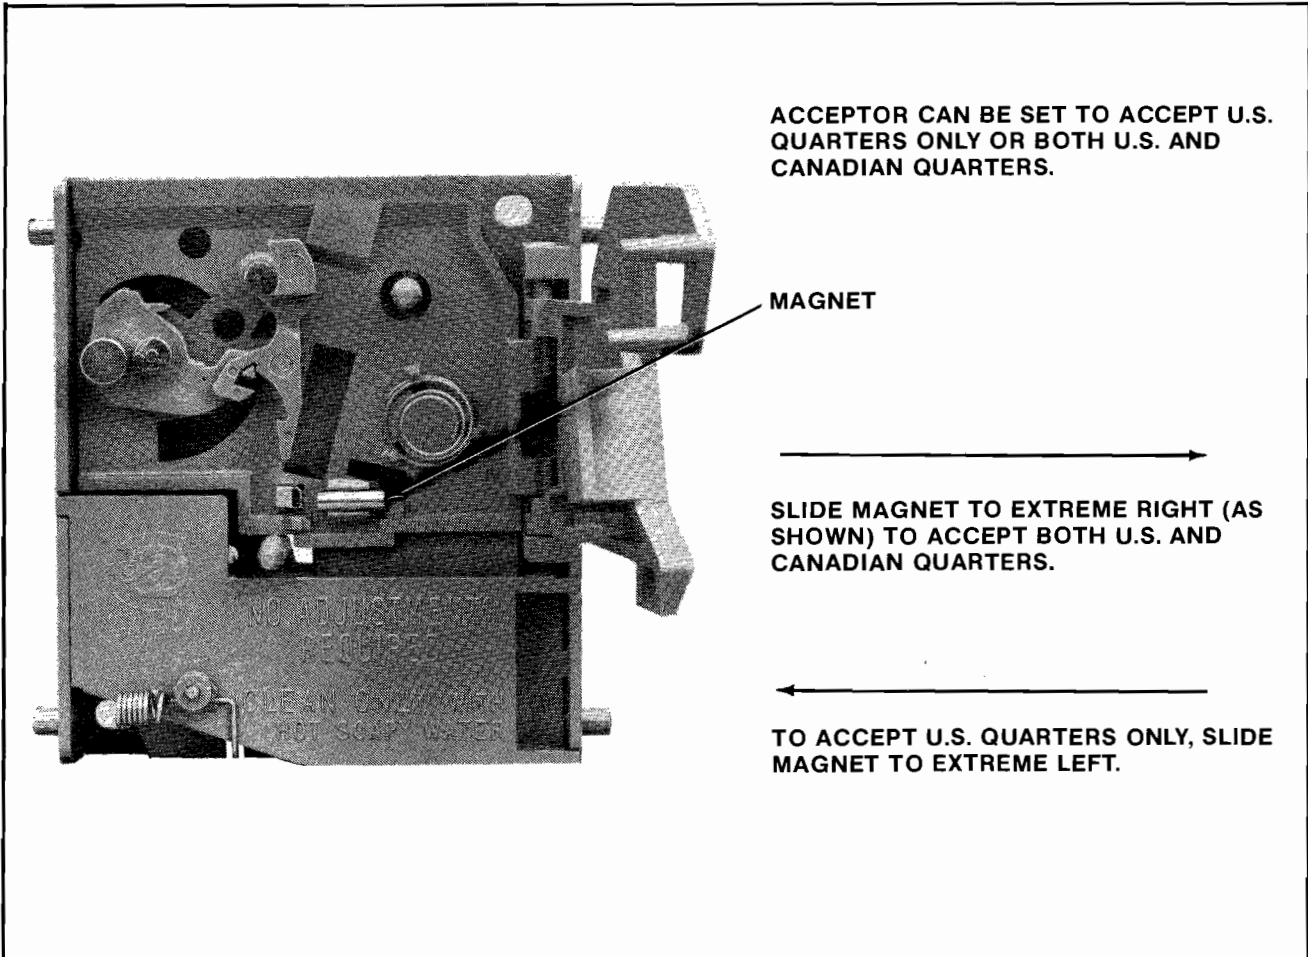

ACCEPTOR CAN BE SET TO ACCEPT U.S. QUARTERS ONLY OR BOTH U.S. AND CANADIAN QUARTERS.

MAGNET

SLIDE MAGNET TO EXTREME RIGHT (AS SHOWN) TO ACCEPT BOTH U.S. AND CANADIAN QUARTERS.

TO ACCEPT U.S. QUARTERS ONLY, SLIDE MAGNET TO EXTREME LEFT.

Figure 7-5 Changing the plastic coin acceptor to accept American or Canadian quarters.

**PLEASE NOTE:**

THE INFORMATION CONTAINED IN THIS SECTION IS TOLD IN AN EASY TO UNDERSTAND MANNER AND IS INTENDED TO AID THOSE WITHOUT AN ELECTRONICS DEGREE IN TROUBLESHOOTING AND REPAIRING THEIR GAMES T.V. MONITOR.

IF YOU READ THROUGH THIS SECTION AND STILL HAVE QUESTIONS, PLEASE CONTACT YOUR DISTRIBUTOR OR MIDWAY MANUFACTURING COMPANY AT THE TOLL FREE NUMBER PROVIDED WITH YOUR GAMES PAPERS.

**OUR STAFF AND OUR DISTRIBUTORS STAND READY TO HELP YOU!**

**THANK YOU**

**VIII T.V. Monitor Manual**

# Color T.V. Monitor

## **Introduction:** (How to use this section of your manual.)

This section has been designed to simply familiarize you with one of the more mystical components in your game — the T.V. monitor. If you are an electronics technician who is quite knowledgeable on the subject, you may decide to just go to the schematics and start troubleshooting the defective monitor. But if you are like most people, a monitor is a T.V. set, and that means a complex doo-dad that means big buck repairs. This isn't necessarily so. This section of the manual will acquaint you with the monitor and could just help you repair it if you feel adventurous enough to give it a try. If you have any knowledge of electronics, especially the use of a voltmeter, the repairs you can make are astonishing. Just keep in mind that **ELECTRICITY CAN BE VERY DANGEROUS, SO BE CAREFUL!!**

If you want to understand how a monitor works, just read the "THEORY OF OPERATION" subsection. If you wish, you can follow along with the schematics. The information is presented in a very basic manner but more complete treatment of the subject can be found in the technical sections of bookstores.

If you want to attempt to repair your monitor, it would be a good idea to read this whole section beginning to end before starting. **Pay attention to all warnings**

**and take them seriously.** The more equipment you have the better, but a low cost Volt-Ohm-Milliameter can often do the trick. Here are the steps to take:

1. Find the symptom that matches the problems your monitor has in the "SYSTEM — DIAGNOSIS" subsection. The diagnosis tells the circuit or area the problem may be in and possibly even the actual component causing it.
2. Once you have the circuit that is causing the trouble, read the "TROUBLESHOOTING" subsection to learn the procedure for finding the bad part.
3. Next, go to the schematic section and find the schematic that matches your monitor. It may be helpful to read the "DIFFERENCES BETWEEN MONITORS" subsection if you are unsure of which monitor you have. Use the schematic to see what parts are in the offending circuit.

That really is all there is to it. Just remember that there are some bizarre or rare symptoms not covered, or that a monitor may have two or more different problems that only a genius, the experienced, or an experienced genius can figure out. But be patient, follow safety precautions, and remember that there is also literature available from the monitor companies through your distributor or from Midway Manufacturing Company on request. (There is a toll free number on the back side of the front cover of this manual.)

# Symptom Diagnosis

## 1. Insufficient width or height:

- A. Horizontal line (due to VERTICAL CIRCUIT DEFECT).
  - Bad yoke.
  - Bad vertical output section.
  - Open fusible resistor in vertical section.
  - Bad height control.
  - Bad flyback.
- B. Vertical line (due to HORIZONTAL CIRCUIT DEFECT).
  - Bad yoke.
  - Open width coil.
  - Open part in horizontal output section.

## 2. Picture spread out too far or crushed in certain areas:

- A. Horizontal or vertical output transistor.
- B. Bad component in output circuitry.

## 3. Line too close with black spacing:

- A. Problem in vertical section causing poor linearity.

## 4. Poor focus and convergence:

- A. Bad high voltage transformer ("flyback") or control.
- B. Focus voltage wire not connected to neck-board terminal.

## 5. Colors missing; check:

- A. Interface color transistors.
- B. Color output transistors.
- C. Cracked printed circuit board.
- D. Color circuits.
- E. Video input jack.

## 6. Picture not bright enough:

- A. Weak emission from picture tube. (Turn horizontal sync off frequency and put brightness all the way up for about 15 minutes. Occasionally this cures the problem.)

## 7. Silvery effect in white areas; check:

- A. Beam current transistors.
- B. Weak picture tube emission.

## 8. Too much brightness with retrace lines; check:

- A. Beam limiter transistors.
- B. Brightness and/or color blanking control set too high.

## 9. Increasing brightness causes an increase in size and poor focus.

- A. Weak high voltage rectifier or regulation (high voltage unit).

## 10. Small picture and/or poor focus:

- A. Low B+ voltage (power supply trouble).

## 11. Vertical rolling:

- A. Vertical oscillator transistor, IC, or circuit.
- B. No sync from logic board.

## 12. Horizontal line across center:

- A. Vertical output circuit is dead (see symptom No. 1. A.).
- B. Vertical oscillator is not putting out the right wave form.

## 13. Picture bends:

- A. Horizontal sync needs adjusting.
- B. Magnetic or electromagnetic interference.

## 14. Flashing picture, visible retrace lines:

- A. Broken neck board.
- B. Internal short circuit in the picture tube (arcing).

## 15. Unsymmetrical picture or sides of picture:

- A. Defective yoke.

## 16. No brightness, power supply operating — No high voltage for the picture tube; check:

- A. Horizontal oscillator.
- B. Horizontal amplifier and output.
- C. Flyback transformer (high voltage unit).

## 17. No brightness, high voltage present; check:

- A. Heater voltage to the tube at the neck board.
- B. Screen-grid voltage for the tube.
- C. Focus voltage.
- D. Grid to cathode picture tube bias.

## 18. No high voltage; check:

- A. For AC input to the "flyback".
- B. Horizontal deflection stages.
- C. Flyback transformer.
- D. Yoke.
- E. Power supply.

## 19. No horizontal and vertical hold; check:

- A. Sync transistors and circuit.
- B. Wires and jack from logic board to the monitor.

## 20. Wavy picture — (power supply defect); check:

- A. Transistors, diodes, electrolytic capacitors in the power supply.

**21. Moving bars in picture:**

- A. Ground connector off between monitor and logic boards.
- B. Defect in the power supply (see wavy picture symptom).

**22. Washed out picture (see picture not bright enough):**

- A. Check video signal at the cathode pins with an oscilloscope. If there is about 80 volts peak to peak, the picture tube has weak emission.

**23. Monitor won't turn on:**

- A. Problem in the power supply: Check fuse, transistors, open fusible resistor.
- B. Shorted horizontal output transistor.

- C. Defective high voltage disabling circuit.
- D. Crack(s) somewhere on main chassis board.


**24. Can't adjust purity or convergence:**

- A. Use a degausser to demagnetize the picture tube carefully following your degausser's instructions.
- B. Picture tube defective.
- C. Metal foreign material is in picture tube shield.
- D. Nearby equipment is electromagnetically interfering.
- E. The poles of the earth are pulling off the purity.
- F. Poor focus or width of picture.


---

---

## Guide To Schematic Symbols

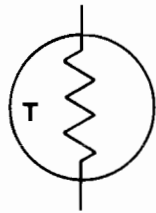

**THERMISTOR**  
(POLARITY DOESN'T MATTER)

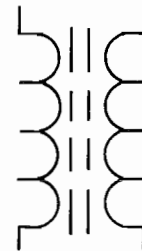

**IRON CORE TRANSFORMER**  
(SUCH AS A FLYBACK)



**INDUCTOR, COIL, CHOKE**  
(POLARITY DOESN'T MATTER)



**FUSE**  
(POLARITY DOESN'T MATTER)




(-) CATHODE  
(+) ANODE  
**ZENER DIODE**


CATHODE (-)



ANODE (+)  
**DIODE**

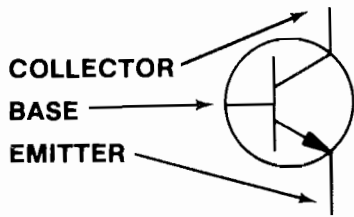

**NPN TRANSISTOR**

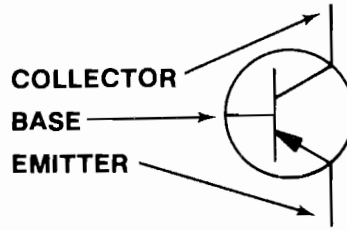


**PNP TRANSISTOR**




**VARIABLE RESISTOR, POT, CONTROL**  
(POLARITY DOESN'T MATTER)



**RESISTOR**  
(POLARITY DOESN'T MATTER)

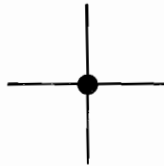

**LINES ARE CONNECTED**




**ELECTROLYTIC CAPACITOR**



**LINES ARE NOT CONNECTED**



**CAPACITOR**  
(POLARITY DOESN'T MATTER)



**OR**  
**GROUND**

# Troubleshooting

Troubleshooting monitors requires experience, patience, **and luck**. The first step is to match the symptom the monitor displays to the diagnosis next to it in the "SYMPTOM-DIAGNOSIS" subsection. This will pinpoint the circuit the problem is probably in, and often the parts to check. Next, the circuit should be visually inspected to see if there are any parts broken, burned, or if something is there that shouldn't be, like a loose screw, etc. Some parts go bad before others and should be checked first. In fact, following is the general order in which parts usually go bad:

1. Semiconductors (like transistors, diodes, and integrated circuits).
2. Fusible resistors.
3. Electrolytic capacitors.
4. Resistors.
5. Capacitors and coils.

Always remember that a monitor can bite like a snake. Even when it is turned off, capacitors hold voltage and will discharge it to you should you be touching chassis ground. The picture tube or CRT, itself, is a giant capacitor, so avoid the flyback anode plug hole. With the monitor on, the power supply circuit and/or the flyback, which puts out at least 18,000 volts, **CAN BE KILLERS!!** Avoid handling power transistors (usually output transistors), yoke terminals, and other high power components when the monitor is on.

## **WARNING: That picture tube is a bomb!**

When it breaks, first it implodes, then it explodes. Large pieces of glass have been known to fly in excess of 20 feet in all directions. **DO NOT** carry it by the long, thin neck. Discharge its voltage to ground by shorting the anode hole to ground. Use a plastic handled screwdriver, connect one end of a wire with an alligator clip at each end to chassis ground and the other end to the metal shaft of the screwdriver. Using **ONE HAND ONLY** (put the other in your pocket) and touching **ONLY** the plastic handle of the screwdriver (**DO NOT TOUCH THE METAL SHAFT**) stick the blade of the screwdriver into the anode hole. Be prepared for a fairly loud pop and a flash. The longer the monitor has been turned off, the smaller the pop and dimmer the flash. But **BE CAREFUL**, picture tubes will hold a very

healthy charge for at least **a week** if not longer. Even after you've discharged it once, it may still carry a residual charge. It's better to be too careful than dead, which is why electronic equipment always carries stickers referring servicing to qualified personnel. Handle the side with the viewing screen against your chest when changing it. **ALWAYS** wear safety goggles when handling the picture tube.

To maintain the safety and performance of the monitor, always use exact replacement parts. For instance, the wrong components in the power supply can cause a fire, or the wrong color transistor may give a funny color to the picture. Service your monitor on a nonconductive firm table like wood, **NOT METAL**, and take off all of your jewelry just in case. With all this in mind, you are ready to begin troubleshooting.

Observe the picture carefully. Try to vary the appropriate control that would most likely affect your particular symptom. For example, if there is poor brightness or no picture, try turning up the brightness or contrast control. If the controls have no effect at all, chances are there is trouble with the control itself, the circuit it controls, or a nearby circuit that may be upsetting voltages. Go to the list of symptoms and determine with the schematic where the bad circuit is.

### **CAUTION:**

**Keep in mind that capacitors hold a charge as can the picture tube (for at least a week and usually longer), and could shock you.**

First, check for obvious visual defects such as broken or frayed wires, solder where it is not supposed to be, missing components, burned components, or cracked printed circuit boards. If everything looks good up to this point, make sure that diodes, electrolytic capacitors, and transistors have their leads connected in the right polarity as shown on the schematic and the circuit board.

Turn on the power and measure the voltages at the leads of the active devices such as tubes, transistors, or integrated circuits. Any voltage that does not come within at least 10% to 15% of the voltage specified on the schematic indicates either a problem with that device or a component connected with it in the circuit. The next step is to use the ohmmeter to narrow down the field of possible offenders.

To test a transistor, one lead of the ohmmeter is placed on the base; and the other lead placed just on the emitter, then on the collector. A normal transistor will read either high resistance (infinite), or little resistance (400 to 900 ohms), depending on the polarity of this type transistor. Then the leads should be switched, one remaining on the base, and the other switched from the emitter to the collector. Now the opposite condition should result: the resistance should be infinite if it was lower when the other lead was on the base. Consistently infinite readings indicate an open, and a short is demonstrated by 0-30 ohms on most of these test readings. Finally, place one lead on the collector, then the other on the emitter. No matter which lead is used, there should be infinite resistance. Any lower reading, such as 50 ohms (which is typical on a bad transistor), indicates a short.

This all sounds pretty confusing, but a little experience on a good transistor will make you an expert in no time. Usually, the lowest ohmmeter setting is used for testing transistors. Once in a great while a transistor may check out good on this test, but may actually be "leaky" or break down only on higher voltages. If in doubt, change it. It is also wise to check the transistor out of the circuit just in case some component in the circuit is affecting the ohmmeter reading.

A diode is tested like a transistor except it only has two leads. Again, there should be high resistance one

way and little resistance the other. If it tests bad, take one lead out of the circuit in case some component is messing up the ohmmeter reading.

**NOTE: DO NOT** leave soldering equipment on the leads too long since all semiconductors, especially integrated circuits, are easily destroyed by heat.

Without special equipment, integrated circuits are checked by verifying the proper DC voltage on the pins and the correct AC wave form using an oscilloscope. **BE CAREFUL:** Shorting their pins can easily destroy them.

Resistors are checked with an ohmmeter and should usually be within ten percent of the value stated on them and on the schematic. You may have to desolder one lead from the printed circuit board. If you wreck the foil on the board, carefully solder a small wire over the break to reconnect the conductive foil.

Capacitors are tricky. Their resistance goes up when checked with an ohmmeter which shows a charging action. As they suck up current from the meter, the voltage goes up and so does the resistance. If you are sure a particular circuit is giving you a problem and everything else checks out O.K., Electrolytic capacitors are prime suspects. Substitute a new one and keep your fingers crossed.

---

## Theory of Operation

To understand what goes on inside the monitor, large general groups of circuits will be examined instead of laboriously analyzing the branches and small circuits that make up these groups. This will help avoid confusion and aid in a basic, concrete, knowledge of what makes up a monitor.

### THE POWER SUPPLY —

The AC going to the monitor from the game transformer is just like the voltage and current from your wall outlet. It jumps up and down going positive and negative sixty times a second. But a monitor needs nice, smooth DC; direct current, not alternating. So diodes chop up the AC and a big electrolytic capacitor filters it out to make it even smoother. Since the monitor is a big piece of electronic equipment, with many circuits demanding a lot of power from the power supply, there are also zener diodes and transistors to help maintain a nice, constant, smooth voltage so that the monitor circuits don't jump around. And this is what happens when you see a wavy picture. There is AC creeping

through the power supply, so it must be malfunctioning. If the voltage from the power supply is too low, the other circuits will be starved for power and you may see a small, wavy picture, or none at all.

Some circuits receive voltages that are higher than what the power supply should put out. But they come from the flyback transformer which will be discussed later.

### THE INTERFACE SECTION OF THE CHASSIS —

The interface section of the chassis is fairly easy to identify. It is right by the place where the video jack(s) from the logic board(s) plug into. There are sets of transistors that receive the separate red, green, blue, and sync information from the cables that come from the logic boards. The circuits jack up the voltage and match impedances, or in other words, prepare the logic board outputs for the circuits that will really amplify them for the output devices such as the yoke in the case of the sync, or the picture tube that shows the colors.

An interesting aside is that our sync is composite negative sync. That means two things:

1. The sync is a negative going wave form.
2. There are two pulses going at different speeds over the same wire:
  - a. Vertical wave forms at 60 times per second (or Hertz) and
  - b. Horizontal wave forms at about 15,750 times per second (Hz).

The sync is amplified by a sync amplifier transistor and sent on its way to the oscillators. The sync or timing information will be explained along with the oscillator shortly.

The color information is sent via wires to the neck board where the main amplification occurs. This will also be discussed later.

## **VERTICAL AND HORIZONTAL DEFLECTION—**

After the sync signal is amplified by the sync amp, it goes to two different sections, the vertical and horizontal circuits. Basically, the sync signals are for timing so the picture doesn't mess up since it is assembled like an orderly jigsaw puzzle, but so fast that you can't see the electron beams for each color painting the picture on the screen. This will all become clear soon. For now, we will follow the 60 cycle component of the sync as it goes on its journey to the deflection yoke.

The 60 cycle pulse goes to the vertical oscillator to make sure this circuit goes back and forth (or oscillates) at 60 times a second. Without this pulse keeping the circuit at the correct speed, it may get lazy and oscillate at 58 cycles or lower, or get ambitious and oscillate at 62 cycles or higher. At the wrong speed, the picture will start to roll up or down.

A Wells Gardner 13" (K4806) or 19" (K4906, K4956) color monitor uses an integrated circuit for its sync section. An Electrohome 13" or 19" color monitor uses an integrated circuit IC501 for its sync section. Wells Gardner uses HA11423 and Electrohome uses HA11244. **These ARE NOT interchangeable!** The idea is all the same. The output to the vertical amplifying transistors for all monitors must form a sawtooth wave form, sort of like a bunch of pyramids, racing through the yoke's vertical coils at 60 times a second.

Along the way to the output transistors, the 60 cycle pulse is shaped and amplified to do the job: the yoke magnetically pushes the electron beam to fill the screen out sideways looking at the screen with the greatest length going up and down. Or viewing the screen sitting like a home television set, the amplified vertical output fills the screen up and down. Watching a monitor like this, seeing only a horizontal line means a problem with the vertical coils of the yoke or anything from the vertical output section on back to the oscillator.

The horizontal section is very similar with a few exceptions. The horizontal wave shape is more like a square and has a frequency of 15,750 cycles a second. Both Wells Gardner and Electrohome use the other side of their respective integrated circuits for the horizontal circuitry. If the oscillator isn't going at the correct speed, the picture may move sideways, start to slant, or tear up with slanted thin figures. With both the vertical and horizontal of all monitors, there are variable resistors that change the speed of the oscillators up and down. This way you have controls that can make the correct frequencies to keep the electronic jigsaw puzzle nicely locked in place. If you're driving in a car and next to you someone else is driving their car at exactly the same speed, it will appear that they are not moving. And this is why the sync frequency and the oscillator's frequency must match, so the picture doesn't appear to move.

The correct wave form is shaped and amplified in the circuitry just like in the vertical section. But the horizontal output transistor is a large power transistor and not only serves to give current to the horizontal yoke windings, it also feeds the flyback transformer.

## **THE FLYBACK TRANSFORMER (OR HIGH VOLTAGE UNIT) —**

The picture tube needs high voltage to light up, and the power supply can't meet this demand. The flyback transformer receives current alternating at about 15,750 times per second from the horizontal output transistor. The "flyback" jacks up its input voltage and puts out a higher voltage alternating at the same speed. But, in your "flyback" there are diodes that chop up the alternating voltage to make it a smooth DC output just like in the power supply. This is what goes through that thick red wire to your picture tube. **THIS AREA HAS ABOUT 18,000 VOLTS ON IT AND IT CAN KILL YOU!!**

The "flyback" may be dangerous, but it is also generous. It has extra output windings which give voltage to the heater pins of the picture tube, voltage for the vertical deflection circuits, and picture tube screen-grid voltage. So in a way, the high voltage "flyback" is like a second power supply.

## **COLOR CIRCUITS —**

The color circuits are pretty straight forward. The signals go into the interface section where some amplification and impedance matching occurs. These circuits are pretty sparse and simple. Each color just has two transistors and a diode with some resistors and capacitors. From here, the AC color signal is sent by wires to the neck board.

The color output circuits are on the neck board. The color signals going to the transistors are controlled by two variable resistors called drive controls. There are only two, one for the red and one for the green.

The blue doesn't have one. In the emitter part of each transistor is another variable resistor that is the cut off control. These controls vary the amount of amplified AC signal that goes to the cathodes of the picture tube. The more signal, the more color. The bases of each of these transistors are connected together and are all connected to the blanking and beam limiting transistors which are in the interface section.

The beam limiter helps control the brightness level, and the blanking transistor rapidly turns the picture tube on and off so that retrace lines don't show up on the screen. By turning up the brightness on a good monitor, these four to six retrace lines can be seen slanting diagonally across the picture.

### PROTECTION CIRCUIT —

To protect the high voltage section against voltages that are too high coming from the power supply which could cause X-rays to be emitted from the "flyback", a circuit senses the higher power supply voltage, and using a transistor, turns off the horizontal oscillator. Since the horizontal oscillator doesn't work, the horizontal output transistor has nothing to feed the "flyback" which in turn has nothing to feed the picture tube. The monitor will be silent, have no picture, and will appear to be off. **But don't be fooled.** There is still that excessive amount of voltage coming from the power supply. To find out, check at pin two of Wells Gardner's IC501 and emitter of X04 for the Electrohome monitor. Here are the voltages you should receive:

Wells Gardner = 130VDC  
Electrohome = 120VDC

The best place to measure this voltage on an Electrohome monitor is at a pin marked B1 on the chassis. This is because a 13 inch color Electrohome monitor,

The G07-FB0 or G07-902, has an integrated circuit and very little else in the power supply. Still, there should be 120VDC at B1.

### THE PICTURE TUBE (OR CRT) —

The picture tube or CRT is an output device. In other words, the end result of the circuit's work is displayed by this part. Actually, the output of other circuits is in the neck of the picture tube.

First, there is the heater. The heater boils off electrons from the cathodes so that they (the electrons) shoot up to the screen to excite the phosphors so that the three phosphors emit three colors of light.

The cathodes are next, and again they emit electrons to turn on the tube phosphors, making it glow. The cathode can arc or short to the heater resulting in no picture and a defective picture tube.

Next come the grids. The first grid is grounded. The following grid is the screen grid which receives about 300VDC depending on the brightness setting. The next grid closest to the picture tube screen is the focus grid which gets about one fifth the amount of voltage that is applied to the picture tube anode.

After jetting from the cathode through all these grids, the electrons speed through a mask, a sheet of material with tiny holes, and then excite the tiny dots of phosphor in the inside surface of the picture tube screen. The green electron gun (or cathode and circuitry) spits out electrons which head for the green phosphors only. The same goes for the red and blue guns. The way the phosphor light blends determines the color seen. Should these electron beams become too intense, they may burn the phosphor. With the monitor off, this can be seen as a dark permanent image of the video information on the tube screen.

---

## Differences Between Monitors

The easiest way to identify the brand of monitor you are working with, assuming you can't find the brand name written on it anywhere, is to check the color of the suction cup type insulator that houses that dangerous anode plug on the CRT. Both monitors use a red wire but the Wells Gardner anode cup is BLACK while the Electrohome anode cup is LIGHT GRAY. Unfortunately, "call-out-numbers" for parts, circuit layout, and even circuit design are similar enough to confuse the average observer.

Let's say you have an Electrohome that isn't working. No problem. You can scavenge parts from an old broken up one that you may have around.

Now let's say you have a Wells Gardner that isn't working. **STOP!!** This could be a problem. There are 3

different types of Wells Gardner K4900 **SERIES** monitors in the games. Here are ways to identify them.

**K4906 (1st TYPE)** — This monitor's identifying tags have **BLACK** ink printed on a white background. There is **NO** Vertical Damping Control. (This Control would be next to the Vertical Hold Control but this area is jumpered with a small wire instead.

**K4906 (2nd TYPE)** — This monitor's identifying tags have **RED** ink printed on a white background. There **IS** a Vertical Damping Control next to the Vertical Hold Control. The Damping Control provides a few more lines on the top of the monitor screen (monitor viewed as a normal T.V. would be) for any video game that may need these lines to fit the picture on the

screen. Moving the Control may distort the top part of your picture (or the side, depending on the game and how the monitor is mounted) so go ahead and move it if you are having this type of problem. To accommodate this new feature, there are a few circuit changes.

ONE MAJOR DIFFERENCE BETWEEN THESE TWO VERSIONS OF THE K4906 IS THE YOKE. They look the same but notice the part numbers:

K4906 **WITHOUT** the Damper Control: 2021111201

K4906 **WITH** the Damper Control: 2021111258

Since the companies like to change part numbers at the drop of a hat, the best thing to do is to request whatever part number is written on your yoke. If you should get the wrong yoke, the results will be:

Picture distortion.

Excessive brightness.

Too much or too little vertical picture size.

**K4956 (3rd TYPE)** — This monitor is identical to the K4906 **WITHOUT** the Damper Control **EXCEPT** the picture tube is vertically mounted and there is an additional small P.C. Board mounted on the monitor where the yoke plugs in. This monitor is used on some Cocktail Table games where the picture has to flip for the second player.

Generally speaking, some games flip the picture image via the logic board programming but this monitor is used in games that flip the picture image via generation of a small signal voltage which is sent to the extra P.C. Board on this monitor. This signal voltage causes relays on this extra P.C. Board to flip the picture by reversing the horizontal and vertical signals to the yoke pins.

What kind of problems can this extra P.C. Board cause? If the relays become defective, the picture won't flip. If the P.C. Board gets cracked you may have a horizontal line on the screen, a vertical line on the screen, or maybe just a dot in the center of the screen. Of course, the logic board could be defective and not sending the signal to flip the picture. In any case, some people feel that using relays is cheaper, simpler, and more reliable, so this is an advantage.

## CONTROLS YOU MAY NOT TOUCH

Basically, on the Electrohome monitor, you can move any control you want **EXCEPT** for the B1 control. This sets the power supply voltage (ideally at 120 VDC) and is located right behind VERTICAL HOLD. The 13" Electrohome **DOES NOT** have this control. It may also be wise not to move the VERTICAL LINEARITY since this distorts the picture and is hard to reset perfectly. If you do move it, turn on the Cross Hatch Test Pattern of your game and try to get the squares to the point where they are equal in size by readjusting this Linearity Control.

On the Wells Gardner monitor, brightness is adjusted by the "BLACK LEVEL" Control which is right next to the Horizontal Frequency Control. Under the Focus Control is the "SCREEN" Control which you **DO NOT** touch. Yes, this control does adjust the brightness, but it is used to set the CRT bias and is adjusted at the factory. When Wells Gardner sets it, they mark the position with a black mark on the knob. If you move it, be sure to realign the mark and THEN set the BLACK LEVEL Control to the brightness you desire. So, other than the SCREEN control, you may adjust any of the controls.

---

## Parts Interchangeability

Some parts can be interchanged on all of the monitors. Here are the rules:

1. You **CAN** swap any resistor between monitors that has the same resistance, wattage rating, and tolerance.
2. You **CAN** swap any capacitor between monitors that has the same capacitance and voltage rating.
3. You **CAN** swap many of the parts between the 19" and the 13" versions of each manufacturer's monitor. **BUT**, be certain to compare the manufacturers' part numbers to be positive the parts you want to interchange are identical. **BE SURE** you have read the section DIFFERENCES BETWEEN MONITORS which was covered earlier.
4. You **CANNOT** swap any picture tubes between monitors!! In the past you could, but Wells Gardner is now using a new monitor. When

ordering a replacement picture tube, **ALWAYS SPECIFY THE PICTURE TUBE NUMBER!**

5. You **CANNOT** change any part that is a **safety part**, one that is shaded in gray on the schematic; it **MUST** be **IDENTICAL** to the original. **To do otherwise IS DANGEROUS.** For instance, the 13 inch Electrohome (G07-902) monitor "flyback" looks identical to the 19 inch Electrohome (G07-904) monitor "flyback". In fact, there is even a 19 inch Electrohome (G07-905) monitor (which is an obsolete model) with a similar looking "flyback". **NONE OF THESE ARE INTERCHANGEABLE!!**
6. You **CAN** change any of the parts between the G07-904 and G07-907. They're essentially the same monitor except that the G07-907 has a vertically mounted picture tube.

If there is any doubt about what parts can be swapped between each manufacturer's 19 inch and 13 inch models, compare the manufacturer's part number between each one. If they match up, they are the same part.

# 19" COLOR MONITOR SCHEMATIC DIAGRAM

## MODELS 19K4901, 19K4906, 19K4951, 19K4956

Power Supply Voltage and Symbols

Symbol	Voltage	Operating Circuit
	15V	Vert. Osc. Sync Blanking CRT Cut-Off
	130V	Horiz. Osc. Horz. Drive Horz. Output Vert. Output
	175V	Video Output

★

**SERVICE TECHNICIAN WARNING**  
**X-RAY RADIATION PRECAUTION:**

THIS PRODUCT CONTAINS CRITICAL ELECTRICAL AND MECHANICAL PARTS ESSENTIAL FOR X-RAY RADIATION PROTECTION. FOR REPLACEMENT PURPOSES, USE ONLY TYPE PARTS SHOWN IN THE PARTS LIST.



⚠

**CAUTION: FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.**  
**AVERTISSEMENT: POUR MAINTENIR LE DEGRE DE SECURITE DE L'APPAREIL NE REMPLACER LES COMPOSANTS DONT LE FONCTIONNEMENT EST CRITIQUE POUR LA SECURITE QUE PAR DES PIECES RECOMMANDEES PAR LE FABRICANT.**

**OSCILLOSCOPE WAVEFORM PATTERN**

The waveforms shown are as observed on the wide band oscilloscope with the monitor turned to a reasonably strong signal and a normal picture. The voltages shown on each waveform are the approximate peak amplitudes.

If the waveforms are observed on the oscilloscope with a poor high frequency response, the corner of the pulses will tend to be more rounded than those shown and the amplitude of any high frequency pulse will tend to be less.

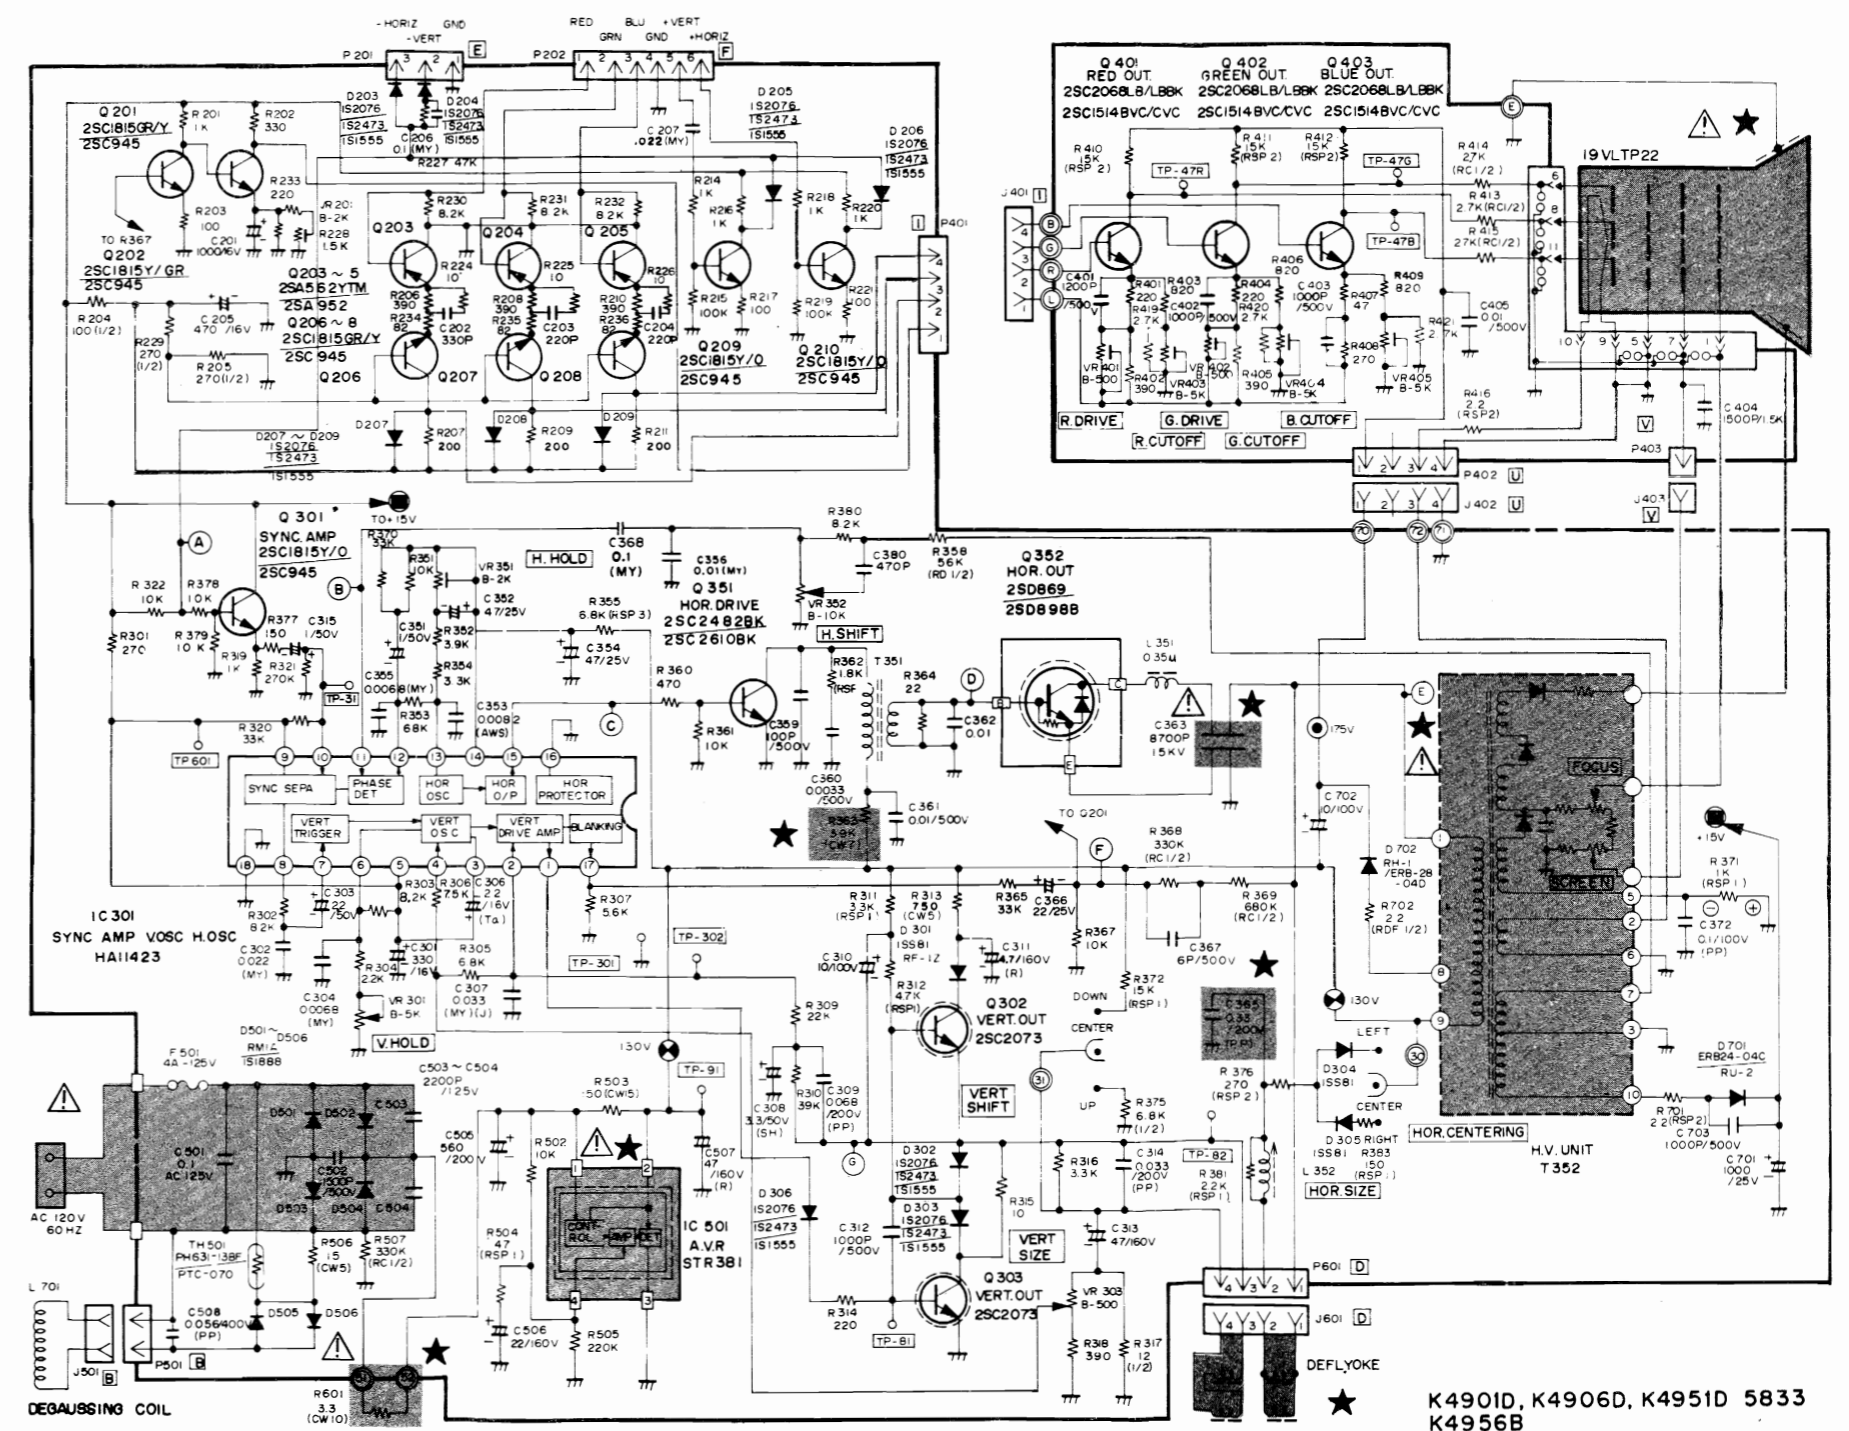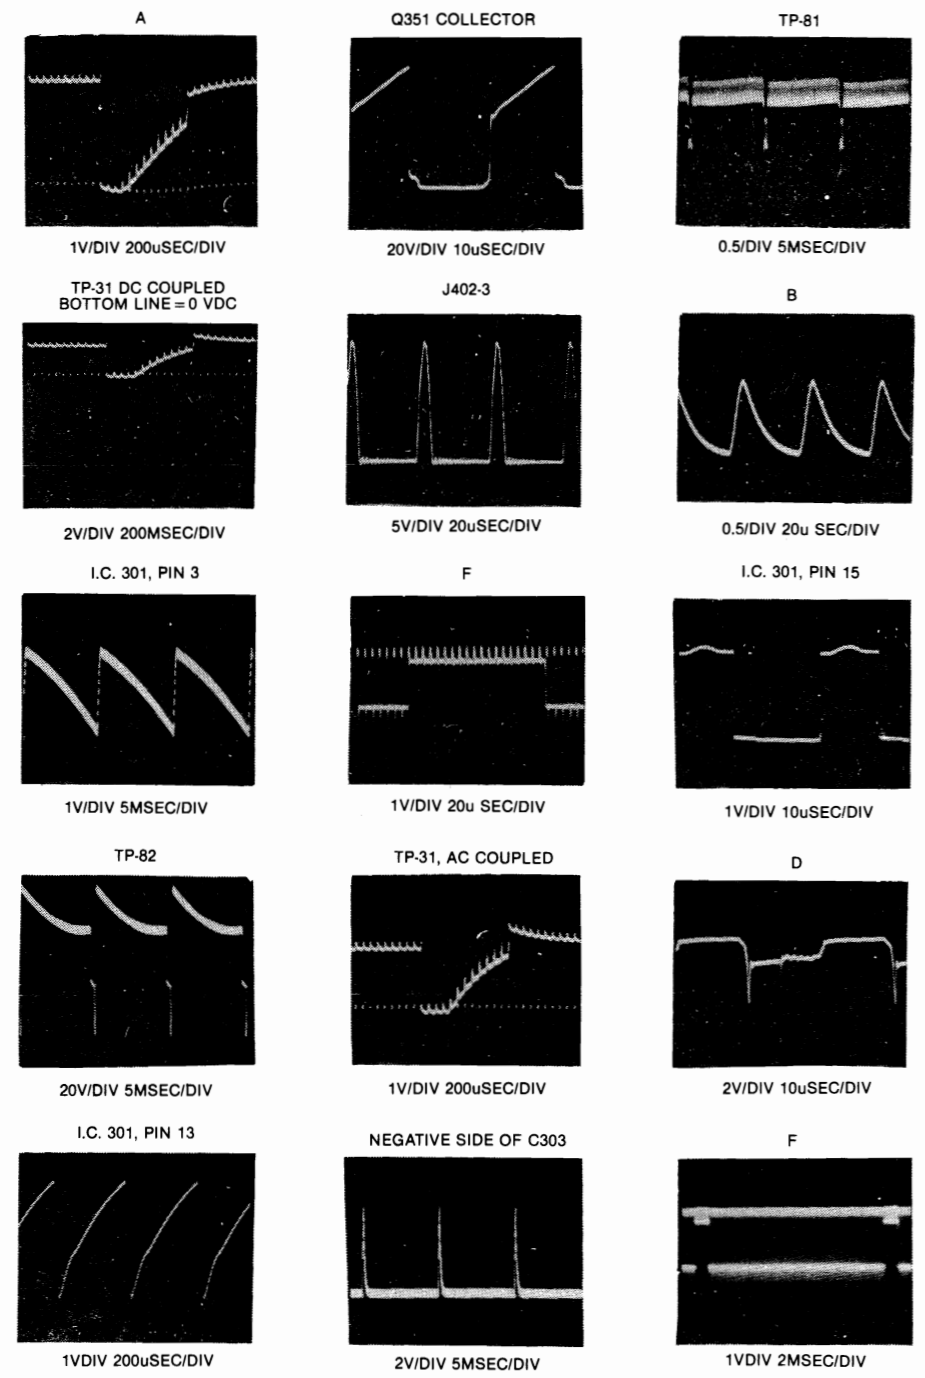

K4901D, K4906D, K4951D 5833  
K4956B

# REPLACEMENT PARTS LIST

This monitor contains circuits and components included specifically for safety purposes.

For continued protection no changes should be made to the original design, and components shown in shaded areas of schematic, or  $\Delta$   $\star$  on parts list should be replaced with exact factory replacement parts.

The use of substitute parts may create a shock, fire, radiation or other hazard. Service should be performed by qualified personnel only.

## MAIN BOARD

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
<b>RESISTORS</b>			<b>RESISTORS (CONT.)</b>		
R201	203X6500-645	1K Ohm, 5%, 1/4W Carbon	R369	203X5602-329	680K Ohm, 5%, 1/2W Comp.
R202	203X6500-523	30 Ohm, 5%, 1/4W Carbon	R370	203X6501-002	33K Ohm, 5%, 1/4W Carbon
R203	203X6500-405	100 Ohm, 5%, 1/4W Carbon	R371	203X9014-584	1K Ohm, 5%, 1W Metal Oxide
R204	203X6700-327	100 Ohm, 5%, 1/2W Carbon	R372	203X9101-119	12K Ohm, 5%, 1W Metal Oxide
R205	203X6700-421	270 Ohm, 5%, 1/2W Carbon	R375	203X6700-763	6.8K Ohm, 5%, 1/2W Carbon
R206	203X6500-540	390 Ohm, 5%, 1/4W Carbon	R376	203X9104-404	270 Ohm, 5%, 2W Metal Oxide
R207	340X2201-934	200 Ohm, 5%, 1/4W Carbon	R377	203X6500-447	150 Ohm, 5%, 1/4W Carbon
R208	203X6500-540	390 Ohm, 5%, 1/4W Carbon	R378	203X6500-886	10K Ohm, 5%, 1/4W Carbon
R209	340X2201-934	200 Ohm, 5%, 1/4W Carbon	R379	203X6500-886	10K Ohm, 5%, 1/4W Carbon
R210	203X6500-540	390 Ohm, 5%, 1/4W Carbon	R380	203X6500-865	8.2K Ohm, 5%, 1/4W Carbon
R211	340X2201-934	200 Ohm, 5%, 1/4W Carbon	R381	203X6500-724	2.2K Ohm, 5%, 1W Metal Oxide
R214	203X6500-645	1K Ohm, 5%, 1/4W Carbon	R383	203X9014-387	150 Ohm, 5%, 1W Metal Oxide
R215	203X6501-126	100K Ohm, 5%, 1/4W Carbon	R502	203X6500-886	10K Ohm, 5%, 1/4W Carbon
R216	203X6500-645	1K Ohm, 5%, 1/4W Carbon	R503	204X1700-535	150 Ohm, 5%, 2W Metal Oxide
R217	203X6500-405	100 Ohm, 5%, 1/4W Carbon	R504	203X9014-267	47 Ohm, 5%, 1W Metal Oxide
R218	203X6500-645	1K Ohm, 5%, 1/4W Carbon	R505	203X6501-209	2.2K Ohm, 5%, 1/4W Carbon
R219	203X6501-126	100K Ohm, 5%, 1/4W Carbon	R506	203X9104-105	15 Ohm, 5%, 2W Metal Oxide
R220	203X6500-645	1K Ohm, 5%, 1/4W Carbon	R507	203X5602-185	330K Ohm, 5%, 1/2W Comp.
R221	203X6500-405	100 Ohm, 5%, 1/4W Carbon	$\Delta$ $\star$ R601	204X1625-058	3.3 Ohm, 5%, 10W WW
R222	203X6500-762	3.3 Ohm, 5%, 1/4W Carbon	R701	203X9105-141	2.2 Ohm, 5%, 2W Metal Oxide
R224	203X6500-169	10 Ohm, 5%, 1/4W Carbon	R702	203X6206-441	2.2 Ohm, 5%, 1/2W Carbon
R225	203X6500-169	10 Ohm, 5%, 1/4W Carbon	VR201	204X2070-072	2K Ohm-B Semi-Fixed
R226	203X6500-169	10 Ohm, 5%, 1/4W Carbon	VR301	204X2070-084	5K Ohm-B Semi-Fixed
R227	203X6501-044	47K Ohm, 5%, 1/4W Carbon	VR303	204X2070-055	500 Ohm-B Semi-Fixed
R228	203X6500-645	1K Ohm, 5%, 1/4W Carbon	VR351	204X2070-072	2K Ohm-B Semi-Fixed
R229	203X6700-421	270 Ohm, 5%, 1/2W Carbon	VR352	204X2070-072	2K Ohm-B Semi-Fixed
R230	203X6500-863	8.2K Ohm, 5%, 1/2W Comp.			
R231	203X6500-863	8.2K Ohm, 5%, 1/2W Comp.			
R232	203X6500-863	8.2K Ohm, 5%, 1/2W Comp.			
R233	203X6500-468	180 Ohm, 5%, 1/4W Carbon			
R234	340X2820-934	82 Ohm, 5%, 1/4W Carbon			
R235	340X2820-934	82 Ohm, 5%, 1/4W Carbon			
R236	340X2820-934	82 Ohm, 5%, 1/4W Carbon			
R301	203X6500-508	270 Ohm, 5%, 1/4W Carbon	C201	203X0014-088	1000 uF, 16V, Electrolytic
R302	203X6500-863	8.2K Ohm, 5%, 1/4W Carbon	C202	202X7200-064	330 pF, 500V, Ceramic
R303	203X6500-863	8.2K Ohm, 5%, 1/4W Carbon	C203	202X7200-043	220 pF, 500V, Ceramic
R304	203X6500-724	2.2K Ohm, 5%, 1/4W Carbon	C204	202X7200-043	220 pF, 500V, Ceramic
R305	203X6500-842	6.8K Ohm, 5%, 1/4W Carbon	C205	203X0014-076	470 uF, 16V, Electrolytic
R306	203X6003-201	7.5K Ohm, 2%, 1/4W Carbon	C206	203X1810-149	0.1 uF, 125V Mylar
R307	203X6500-825	5.6K Ohm, 5%, 1/4W Carbon	C207	349X2232-109	.022 uF, 100V Mylar
R309	203X6500-965	22K Ohm, 5%, 1/4W Carbon	C301	203X0014-065	330 uF, 50V Electrolytic
R310	203X6500-988	39K Ohm, 5%, 1/4W Carbon	C302	203X1600-563	0.033 uF, 50V Mylar
R311	203X6500-762	3.3K Ohm, 5%, 1/4W Carbon	C303	203X0629-037	3.3 uF, 50V Electrolytic
R312	203X9014-741	4.7K Ohm, 5%, 1/4W Carbon	C304	203X1600-366	0.068 pF, 50V Mylar
R313	204X1450-537	1K Ohm, 5%, 5W Carbon	C306	203X0412-012	2.2 uF, 16V Tantal
R314	203X6500-481	220 Ohm, 5%, 1/4W Carbon	C307	203X1600-634	0.033 uF, 50V Mylar
R315	203X6500-169	10 Ohm, 5%, 1/4W Carbon	C308	203X0025-174	3.3 uF, 50V Electrolytic
R316	203X6500-762	3.3K Ohm, 5%, 1/4W Carbon	C309	203X1207-100	0.068 uF, 100V PP
R317	203X6700-107	12 Ohm, 5%, 1/2W Carbon	C310	203X0629-061	10 uF, 100V Electrolytic
R318	203X6500-540	390 Ohm, 5%, 1/4W Carbon	C311	203X0041-025	10 uF, 160V Electrolytic
R319	203X6500-645	1K Ohm, 5%, 1/4W Carbon	C312	202X7050-248	1000 pF, 500V Ceramic
R320	203X6501-002	33K Ohm, 5%, 1/4W Carbon	C313	203X0040-052	47 uF, 160V Electrolytic
R321	203X6501-224	270K Ohm, 5%, 1/2W Carbon	C314	203X1201-265	0.033 uF, 200V PP
R322	203X6500-886	10K Ohm, 5%, 1/4W Carbon	C315	203X0629-023	1 uF, 50V Electrolytic
R351	203X6500-886	10K Ohm, 5%, 1/4W Carbon	C351	203X0629-023	1 uF, 50V Electrolytic
R352	203X6500-785	3.9K Ohm, 5%, 1/4W Carbon	C352	203X0619-045	47 uF, 25V Electrolytic
R353	203X6501-086	68K Ohm, 5%, 1/4W Carbon	C353	203X1190-015	0.0082 pF, 50V Mylar-PP
R354	203X6500-762	3.3K Ohm, 5%, 1/4W Carbon	C354	203X0619-045	47 uF, 25V Electrolytic
R355	203X9205-143	6.8K Ohm, 5%, 3W Metal Oxide	C355	203X1600-366	0.0068 pF, 50V Mylar
R358	203X5601-878	56K Ohm, 5%, 1/2W Carbon	C356	202X7050-483	0.01 uF, 500V Ceramic
R360	203X6500-561	470 Ohm, 5%, 1/4W Carbon	C359	202X8065-606	100 pF, 500V Ceramic
R361	203X6500-886	10K Ohm, 5%, 1/4W Carbon	C360	202X7050-366	0.0033 pF, 500V Ceramic
R362	203X9014-645	1.8K Ohm, 5%, 1W Metal Oxide	C361	202X7050-483	0.01 uF, 500V Ceramic
$\star$ R363	204X1527-751	3.9K Ohm, 5%, 7W Metal Oxide	C362	202X7203-032	0.01 uF, 50V Ceramic
R364	203X6500-246	22 Ohm, 5%, 1/4W Carbon	$\Delta$ $\star$ C363	203X1270-911	8700 pF, 1.5 KV PP
R365	203X6501-002	33K Ohm, 5%, 1/4W Carbon	$\star$ C365	203X1201-265	0.33 uF, 200V PP
R367	203X6500-886	10K Ohm, 5%, 1/4W Carbon	C366	203X0019-026	22 uF, 25V Electrolytic
R368	203X5602-185	330K Ohm, 5%, 1/2W Comp.	C367	202X8065-162	6 pF, 500V Ceramic
			C368	202X7203-032	0.01 uF, 50V Ceramic
			C372	203X1207-125	0.1 uF, 100V PP

## MAIN BOARD (CONT.)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
<b>CAPACITORS (CONT.)</b>					
C380	202X7200-087	470 uF, 500V Ceramic	Q206	200X3181-523	Transistor (NPN) 2SC1815GR
△ C501	203X1810-149	0.1 uF, 125V Mylar	Q207	200X3181-523	Transistor (NPN) 2SC1815GR
△ C502	202X7050-282	1500 pF, 500V Ceramic	Q208	200X3181-523	Transistor (NPN) 2SC1815GR
△ C503	202X7810-214	2200 pF, 125V Ceramic	Q209	200X3181-523	Transistor (NPN) 2SC1815GR
△ C504	202X7810-214	2200 pF, 125V Ceramic	Q210	200X3181-523	Transistor (NPN) 2SC1815GR
C505	203X0220-075	560 uF, 200V Electrolytic	Q301	200X3181-523	Transistor (NPN) 2SC1815GR
C506	203X0040-034	22 uF, 160V Electrolytic	Q302	200X3207-306	Transistor (NPN) 2SC2073LBGL2
C507	203X0041-057	47 uF, 160V Electrolytic	Q303	200X3207-306	Transistor (NPN) 2SC2073LBGL2
C701	203X0019-092	1000 uF, 25V Electrolytic	Q351	200X3248-217	Transistor (NPN) 2SC2482BK
C702	203X0634-061	10 uF, 100V Electrolytic	Q352	200X4589-802	Transistor (NPN) 2SD898B
C703	202X7050-248	1000 pF, 500V Ceramic	IC301	200X2300-033	IC HA11423
<b>SEMICONDUCTORS</b>					
D203	201X2010-159	Diode, IS2076-27	△ ★ IC501	200X2600-183	IC STR381
D204	201X2010-159	Diode, IS2076-27	L351	201X4710-134	Coil, (RF Choke)
D205	201X2010-159	Diode, IS2076-27	L352	201X5000-083	Coil, Horiz. Size
D206	201X2010-159	Diode, IS2076-27	L701	611X0004-007	Coil, Adg.
D207	201X2010-159	Diode, IS2076-27	T351	202X1300-080	Transformer, Hor. Drive
D208	201X2010-159	Diode, IS2076-27	△ ★ T352	200X9720-301	HV-Unit M-11
D209	201X2010-159	Diode, IS2076-27	△ F501	204X7120-073	Fuse, 4 Amp. 125V
D301	201X2010-165	Diode, ISS81	J402	206X5008-632	Recep W Wire 3P-M-BG
D302	201X2010-159	Diode, IS2076-27	P201	204X9600-466	Plug, PWB 3P-J
D303	201X2010-159	Diode, IS2076-27	P202	204X9601-477	Plug, PWB 6P-Q
D304	201X2120-009	Diode, RH-IV	P401	204X9600-298	Plug, PWB 4P-B
D305	201X2120-009	Diode, RH-IV	P501	204X9600-249	Plug, PWB 2P-B
D306	201X2010-159	Diode, IS2076-27	P601	204X9600-304	Plug, PWB 4P-C
△ D501	201X3120-216	Diode, RM-1AV	TH501	201X0100-112	Thermistor
△ D502	201X3120-216	Diode, RM-1AV			
△ D503	201X3120-216	Diode, RM-1AV			
△ D504	201X3120-216	Diode, RM-1AV			
D505	201X3120-216	Diode, RM-1AV			
D506	201X3120-216	Diode, RM-1AV			
D701	201X2130-234	Diode, RU-2V			
D702	201X2120-009	Diode, RH-1V			
Q201	200X3181-523	Transistor (NPN) 2SC1815GR			
Q202	200X3181-523	Transistor (NPN) 2SC1815GR			
Q203	200X4056-260	Transistor (PNP) 2SA562-Y-TM			
Q204	200X4056-260	Transistor (PNP) 2SA562-Y-TM			
Q205	200X4056-260	Transistor (PNP) 2SA562-Y-TM			

## SEMICONDUCTORS (CONT.)

## TRANSFORMERS & COILS

## MISCELLANEOUS

## FINAL ASSEMBLY PARTS

## NECK BOARD

### RESISTORS

R401	203X6000-729	220 Ohm, 5% 1/4W Carbon
R402	203X6500-540	390 Ohm, 5% 1/4W Carbon
R403	203X6000-661	820 Ohm, 5% 1/4W Carbon
R404	203X6000-729	220 Ohm, 5% 1/4W Carbon
R405	203X6500-540	390 Ohm, 5% 1/4W Carbon
R406	203X6000-661	820 Ohm, 5% 1/4W Carbon
R407	203X6000-729	470 Ohm, 5% 1/4W Carbon
R408	203X6000-998	270 Ohm, 5% 1/4W Carbon
R409	203X6000-661	820 Ohm, 5% 1/4W Carbon
R410	203X9104-824	15K Ohm, 5% 2W M.O. Forming
R411	203X9104-824	15K Ohm, 5% 2W M.O. Forming
R412	203X9104-824	15K Ohm, 5% 2W M.O. Forming
R413	203X6000-998	2.7K Ohm, 5% 1/2W Comp.
R414	203X6000-998	2.7K Ohm, 5% 1/2W Comp.
R415	203X6000-998	2.7K Ohm, 5% 1/2W Comp.
R416	203X9105-154	2.2 Ohm, 5% 2W Metal Oxide
R419	203X6500-741	2.7K Ohm, 5% 1/4W Carbon
R420	203X6500-741	2.7K Ohm, 5% 1/4W Carbon
R421	203X6500-741	2.7K Ohm, 5% 1/4W Carbon
VR401	204X2115-014	500 Ohm, -B Semi-Fixed
VR402	204X2115-014	500 Ohm, -B Semi-Fixed
VR403	204X2115-006	5K Ohm, -B Semi-Fixed
VR404	204X2115-006	5K Ohm, -B Semi-Fixed
VR405	204X2115-006	5K Ohm, -B Semi-Fixed

### CAPACITORS


C401	202X7050-269	1200 pF, 500V Ceramic
C402	202X7050-248	1000 pF, 500V Ceramic
C403	202X7050-248	1000 pF, 500V Ceramic
C404	202X7050-282	1500 pF, 1.5KV Ceramic
C405	202X7050-483	0.01 uF, 500V Ceramic

### SEMICONDUCTORS

Q401	200X3206-800	Transistor (NPN) 2SC2068LB
Q402	200X3206-800	Transistor (NPN) 2SC2068LB
Q403	200X3206-800	Transistor (NPN) 2SC2068LB

### MISCELLANEOUS

J401	206X5009-296	RECEP W Wire 4P-E
P402	204X9600-254	Plug, PWB 3P-A
P403	204X9600-981	Plug, Pin 1P-D
P701	204X9601-020	Plug, PWB 4P-E

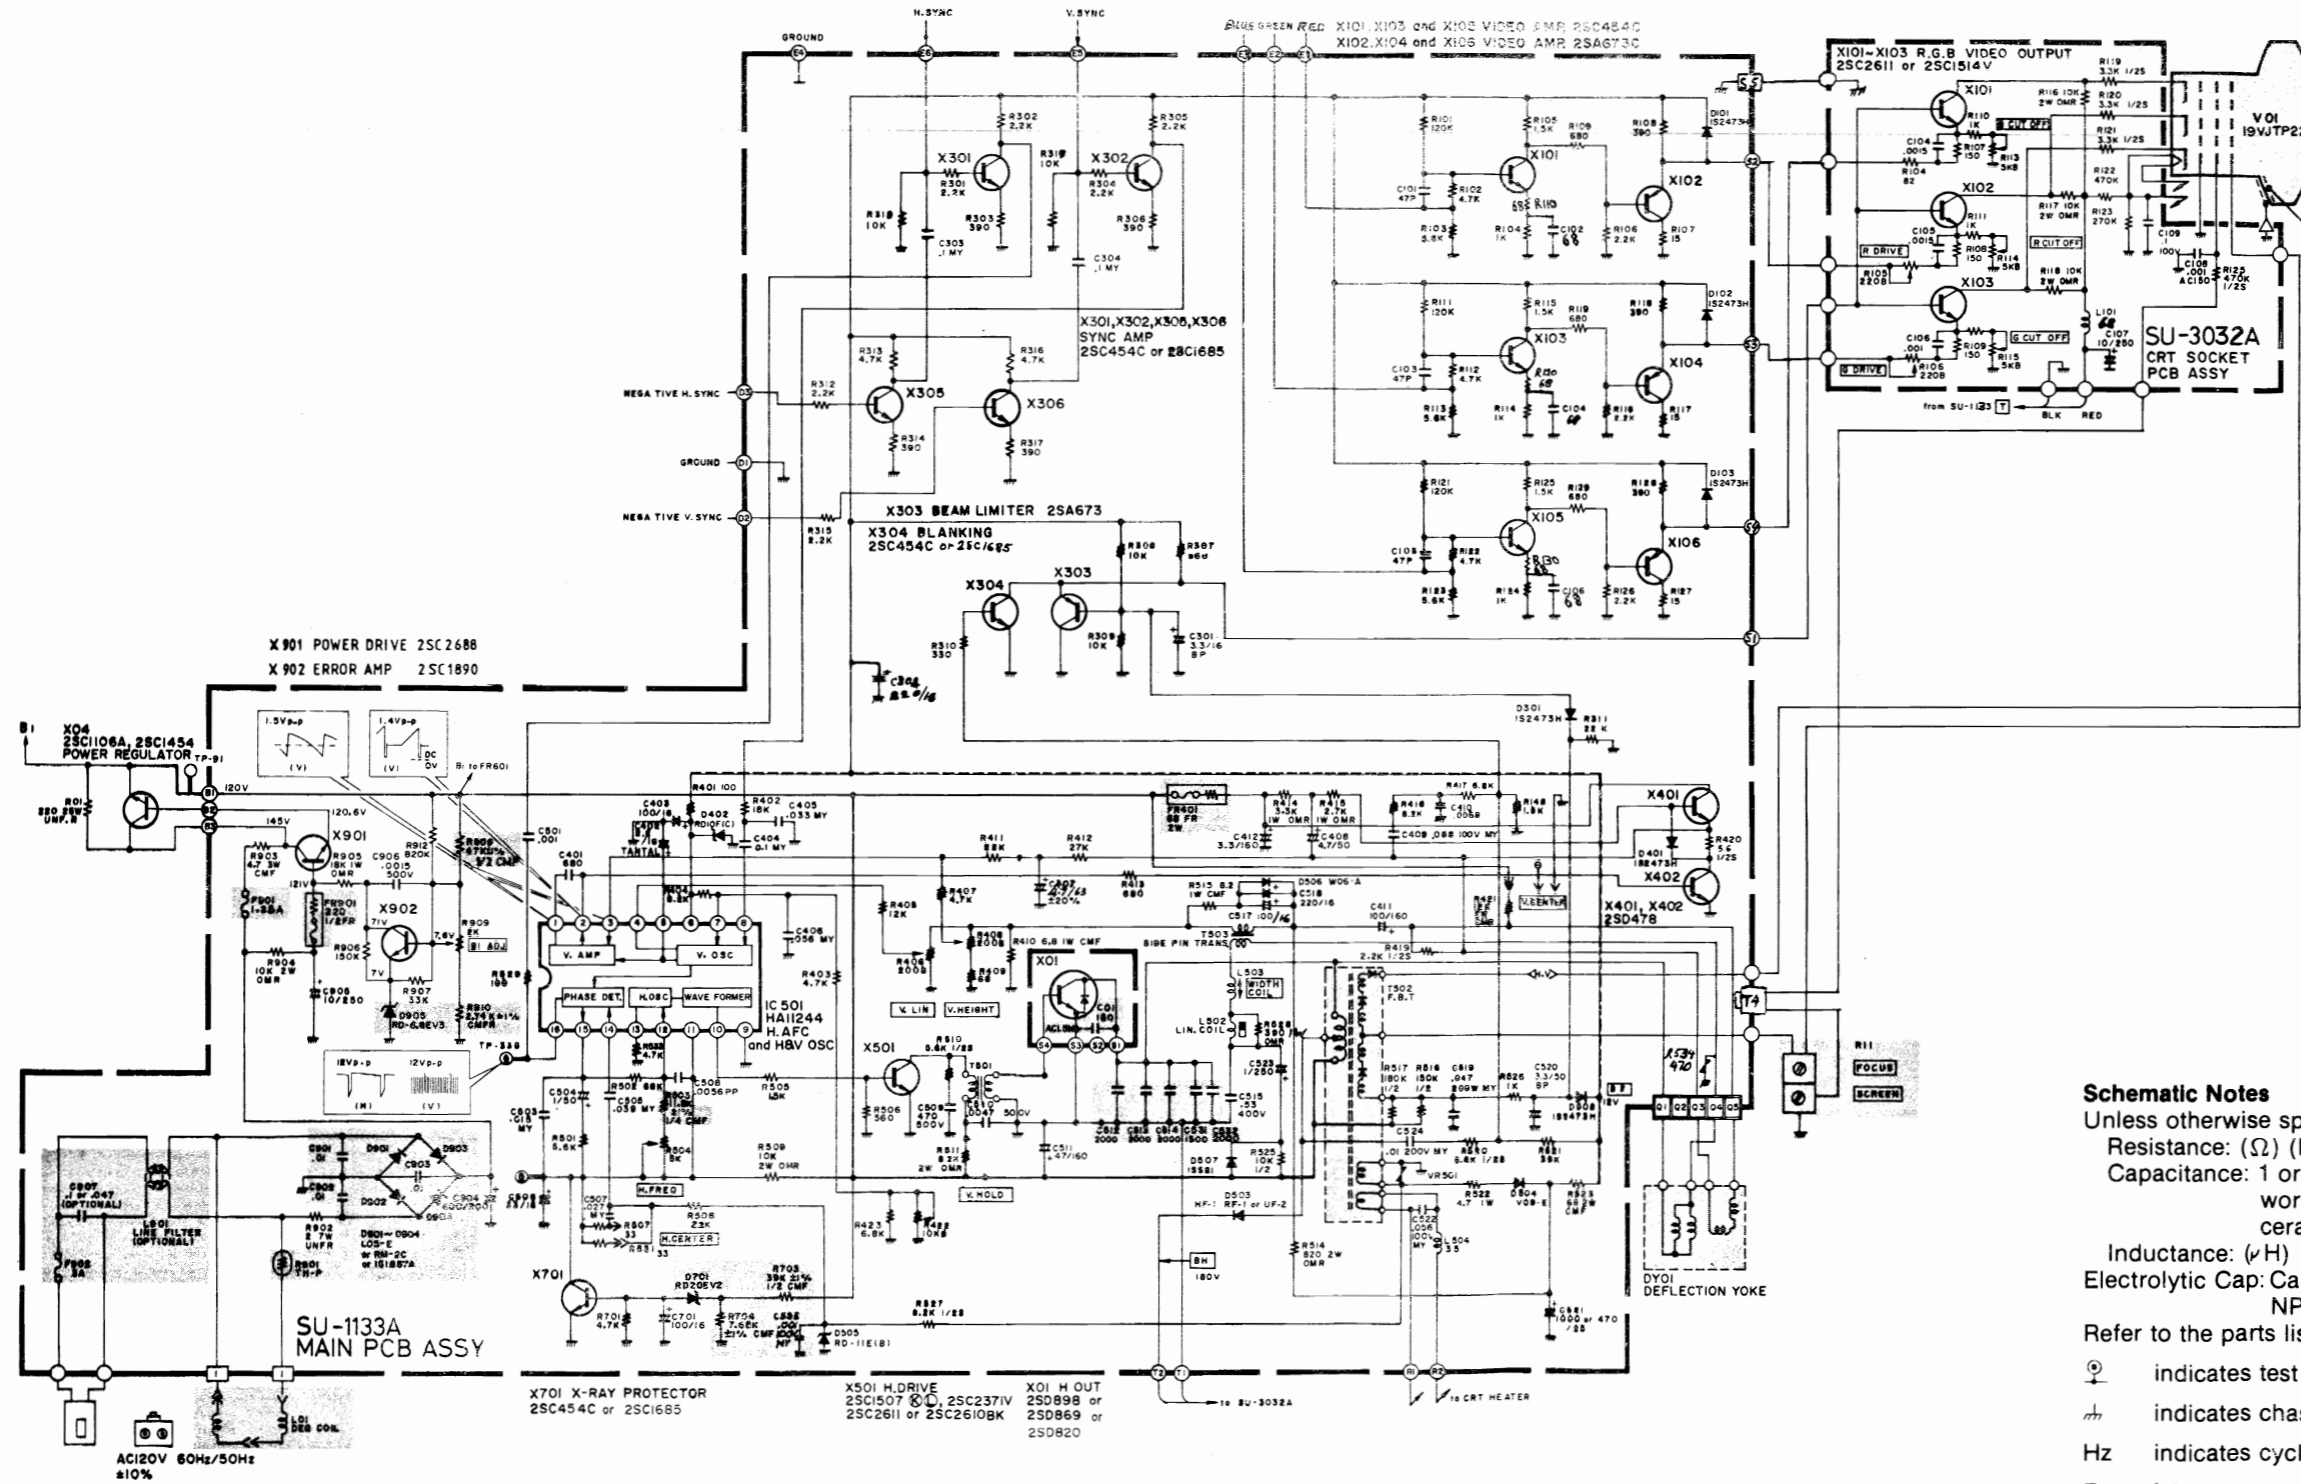

**Schematic Notes**  
 Unless otherwise specified  
 Resistance: ( $\Omega$ ) (K $\rightarrow$ K $\Omega$ , M $\rightarrow$ M $\Omega$ ), 1/4 (W) carbon resistor  
 Capacitance: 1 or higher  $\rightarrow$  (pF), less than 1  $\rightarrow$  ( $\mu$ F)  
 working voltage  $\rightarrow$  50 (V)  
 ceramic capacitor  
 Inductance: ( $\mu$ H)  
 Electrolytic Cap: Capacitance Value ( $\mu$ F)/working voltage (V),  
 NP  $\rightarrow$  non-polar (or bipolar) electrolytic cap.  
 Refer to the parts list for additional component information.

$\odot$  indicates test point connection  
 $\perp$  indicates chassis ground unless otherwise specified  
 Hz indicates cycles per second

For **safety** purposes (and continuing reliability)  
 $\triangle$  replace all components marked with safety symbol with identical type.  
 NOTE: FR  $\rightarrow$  fusible resistor

00-4147-04  
 G07-CB0

Parts identification on circuit boards:  
 e.g. SU1126A (R107 = R1107)  
 SU3030A (R113 = R3113)

## REPLACEMENT PARTS LIST - ELECTROHOME 19" MONITOR

Components identified by the  $\triangle$  symbol in the PARTS LIST and on the Schematic have special characteristics important to safety.

DO NOT degrade the safety of the set through improper servicing.

### Abbreviations for Resistors and Capacitors

#### Resistor

C R	: Carbon Resistor
Comp. R	: Composition Resistor
OM R	: Oxide Metal Film Resistor
V R	: Variable Resistor
MF R	: Metal Film Resistor
CMF R	: Coating Metal Film Resistor
UNF R	: Nonflammable Resistor
F R	: Fusible Resistor

#### Capacitor

C Cap.	: Ceramic Capacitor
M Cap.	: Mylar Capacitor
E Cap.	: Electrolytic Capacitor
BP E Cap.	: Bi-Polar (or Non-Polar) Electrolytic Capacitor
MM Cap.	: Metalized Mylar Capacitor
PP Cap.	: Polypropylene Capacitor
MPP Cap.	: Metalized PP Capacitor
PS Cap.	: Polystyrol Capacitor
Tan. Cap.	: Tantal Capacitor

NOTE: When ordering replacement parts please specify the part number as shown in this list including part name, and model number. Complete information will help expedite the order.

Use of substitute replacement parts which do not have the same safety characteristics as specified, may create shock, fire or other hazards. For maximum reliability and performance, all parts should be replaced by those having identical specifications.

### SERVICE REPLACEMENT PARTS LIST

Symbol	Description	Part Number
	Main P.C.B. Ass'y	SU-1133A
	CRT Socket P.C.B. Ass'y	SU-3032A
	Purity Shield Ass'y	07-220083-03

**Outside of the P.C.B. Ass'y**

Symbol	Description	Part Number
	Picture Tube 19"	17-7198-03
	△ Deflection Yoke	A29779-D = 21-141-01
	PC Magnet	A75034-B = 29-32-01
	△ Flyback Transf.	A29951-B
	△ HVR	A46600-A
	UNF Resistor 220Ω, 25W K	QRF258K-221
	C Capacitor 150pF, AC1.5KV	QCZ0101-005
	Si. Transistor	2SD870
	Si. Transistor	2SC1106A
	Screw #8-3/8	31-610818-06
	Screw 1/4 x 3/4 Pix Tube Mtg. (4)	31-601418-12
	Pyramidal Lock Washer (4)	33-255-01
	Nut Retainer, Pix Tube Mtg. (4)	33-494-01
	Clip — P.C.B. Support	33-629-02
	Standoff	33-670-010R-02
	Wire Terminal (Gnd. Strap)	34-228-03
	Terminal Lug (Gnd.)	34-33-04
	Groundstrap Assy.	34-574-02
	Grounding Spring	35-212-03
	Wire Hook (Gnd. Strap)	35-3053-02
	Purity Shield Holddown Clamp	35-2348-01
	Support Brkt. RH	35-3890-01
	Support Brkt. LH	35-3890-02
	Chassis Base	38-449-02
	Yoke Wedge (3)	39-1233-01

**Purity Shield Ass'y. Parts List**

Symbol	Description	Part Number
	Degaussing Coil	21-1007-30
911, D912	Rectifier 1 Amp 600V (2)	28-22-27
	Pin Terminal (2)	34-708-01
	Pin Terminal Housing	34-709-01
	Purity Shield (2 pcs.)	35-3847-01
	Purity Shield (2 pcs.)	35-3847-02
911	Capacitor 100nF 10% 400V	48-171544-62
921	Resistor, Wirewound 33Ω, 4W	42-113301-03
	Fire Retardent Term. Strip 4 Lug	34-492-09

**RT Socket P.C.B. Ass'y (SU-3032A) Parts List**

Resistors	Description	Part Number
3105	V R 200	QVZ3234-022
3106	V R 200	QVZ3234-022
3113	V R 5K	QVZ3234-053
3114	V R 5K	QVZ3234-053
3115	V R 5K	QVZ3234-053
3116	OM R 10KΩ2W J	QRG029J-103
3117	OM R 10KΩ2W J	QRG029J-103
3118	OM R 10KΩ2W J	QRG029J-103
3119	Comp. R 3.3KΩ½W K	QRZ0039-332
3120	Comp. R 3.3KΩ½W K	QRZ0039-332
3121	Comp. R 3.3KΩ½W K	QRZ0039-332

Capacitors	Description	Part Number
3107	E Cap. 10uF 250V A	QEW53EA-106
3108	C Cap. 1000pF DC1400V P	QCZ9001-102M

Coils	Description	Part Number
3101	Peaking Coil	QQL043K-101

**Semiconductors**

Symbol	Description	Part Number
X3101	Si. Transistor	2SC1514VC
X3102	Si. Transistor	2SC1514VC
X3103	Si. Transistor	2SC1514VC

**Miscellaneous**

Symbol	Description	Part Number
△	△CRT Socket	A76068


**Main PCB Ass'y (SU-1133A) Parts List****Resistors**

Symbol	Description	Part Number
R1406	V R 200Ω	QVZ3230-002
R1408	V R 200Ω	QVZ3230-002
R1410	CMF R 6.8Ω1W J	QRX019J-6R8
R1414	OM R 3.3KΩ1W J	QRG019J-332
R1415	OM R 2.7KΩ1W J	QRG019J-272
R1421	OM R 12KΩ2W J	QRG026J-123Z
R1422	V R 10KΩ	QVZ3230-014
△FR1401	△F R 68Ω2W K	QRH024K-680M
△R1503	△CMF R 11.8KΩ¼W +1%	QRV142F-1182
R1504	V R 5KΩ	QVZ3230-053
R1509	OM R 10KΩ2W J	QRG026J-103Z
R1512	OM R 8.2KΩ2W J	QRG026J-822Z
R1514	OM R 820Ω2W J	QRG026J-821Z
R1515	CMF R 8.2Ω1W J	QRX019J-8R2
R1522	CMF R 4.7Ω1W J	QRX019J-4R7
R1523	OM R 68Ω2W J	QRG026J-680Z
R1528	OM R 390Ω1W J	QRG019J-391
R1534	ZN R	ERZ-C05ZK471
VR1501	ZN R	ERZ-C05DK271
△R1703	△CMF R 39Ω½W +1%	QRV122F-3902
△R1704	△CMF R 7.68KΩ¼W +1%	QRV142F-7681
△R1901	△Posistor	A75414
R1902	UNF R 2Ω7W K	QRF076K-2R0
R1903	CMF R 4.7Ω3W J	QRX039J-4R7
R1904	OM R 10KΩ2W J	QRG026J-103Z
R1905	OM R 18KΩ1W J	QRG019J-183
△Q1908	△CMF R 47Ω½W +1%	QRV122F-470Z
△R1909	V R 2KΩ	QVP5A0B-023E
R1910	△CMF R 2.74KΩ¼W +1%	QRV142F-274I
△FR1901	△F R 220Ω½W K	QRH124K-221M

**Capacitors**

Symbol	Description	Part Number
C1301	BPE Cap. 3.3uF 50V A	QEN61HA-335Z
C1402	Tan. Cap. 2.2uF 16V K	QEE51CK-225B
C1407	E Cap. 4.7uF 6.3V A	QEW51JA-475
C1411	E Cap. 100uF 160V A	QEW52CA-107
C1412	E Cap. 3.3uF 160V A	QEW52CA-335
C1508	PP Cap. 5600uF 50V J	QFP31HJ-562
△C1512	△PP Cap. 2000pF DC1500V J	QFZ0082-202
△C1513	△PP Cap. 2000pF DC1500V J	QFZ0082-202
△C1514	△PP Cap. 2000pF DC1500V J	QFZ0082-202
C1515	PP Cap. 0.53uF DC1200V J	QFZ0067-534
C1520	BPE Cap. 3.3uF 50V A	QEN61HA-335Z
C1523	E Cap. 1uF 160V A	QEW62CA-105Z
C1524	M Cap. 0.1uF 200V K	QFM720K-104M
△C1531	△PP Cap. 2000pF DC1500V J	QFZ0082-202
△C1532	△PP Cap. 1500pF DC1500V J	QFZ0082-152
C1904	E Cap.	QEY0034-001
C1905	E Cap. 10uF 250V A	QEW52EA-106

<b>Coils</b>		
<b>Symbol</b>	<b>Description</b>	<b>Part Number</b>
L1502	Linearity Coil	A39835
L1503	Width Coil	C30380-A
L1504	Heater Choke	C30445-A
<b>Transformers</b>		
<b>Symbol</b>	<b>Description</b>	<b>Part Number</b>
T1501	Hor. Drive Transf.	A46022-BM
T1503	Side Pin Transf.	C39050-A
<b>Semiconductors</b>		
<b>Symbol</b>	<b>Description</b>	<b>Part Number</b>
IC1501	IC	HA11244
X1101	Si. Transistor	2SC1685(R)
X1102	Si. Transistor	2SA673(C)
X1103	Si. Transistor	2SC1685(R)
X1104	Si. Transistor	2SA673(C)
X1105	Si. Transistor	2SC1685(R)
X1106	Si. Transistor	2SA673(C)
X1301	Si. Transistor	2SC1685(R)
X1302	Si. Transistor	2SC1685(R)
X1303	Si. Transistor	2SA673(C)
X1304	Si. Transistor	2SC1685(R)
X1305	Si. Transistor	2SC1685(R)
X1401	Si. Transistor	2SD478
X1402	Si. Transistor	2SD478
X1501	Si. Transistor	2SC2610BK
X1901	Si. Transistor	2SC2688 (K.L.M.)
X1902	Si. Transistor	2SC1890A (E.F.)
D1101	Si. Diode	W06A
D1102	Si. Diode	W06A
D1103	Si. Diode	W06A
D1301	Si. Diode	1SZ473H
D1401	Si. Diode	1SZ473H
D1402	Zener Diode	RD10F(C)
D1503	Si. Diode	HF-1
D1504	Si. Diode	V09E
D1505	Zener Diode	RD11E(B)
D1506	Si. Diode	W06A
D1507	Si. Diode	1SS81
D1508	Si. Diode	1SZ473H
△D1701	△Zener Diode	RD20EV2
△D1901	△Si. Diode	1S1887A
△D1902	△Si. Diode	1S1887A
△D1903	△Si. Diode	1S1887A
△D1904	△Si. Diode	1S1887A
△D1905	△Zener Diode	RD6.8EV3
<b>Miscellaneous</b>		
<b>Symbol</b>	<b>Description</b>	<b>Part Number</b>
△F1901	△Fuse 1.25A	QMF53U1-1R25S
△F1902	△UL Fuse 3A	QMF66U1-3R0S

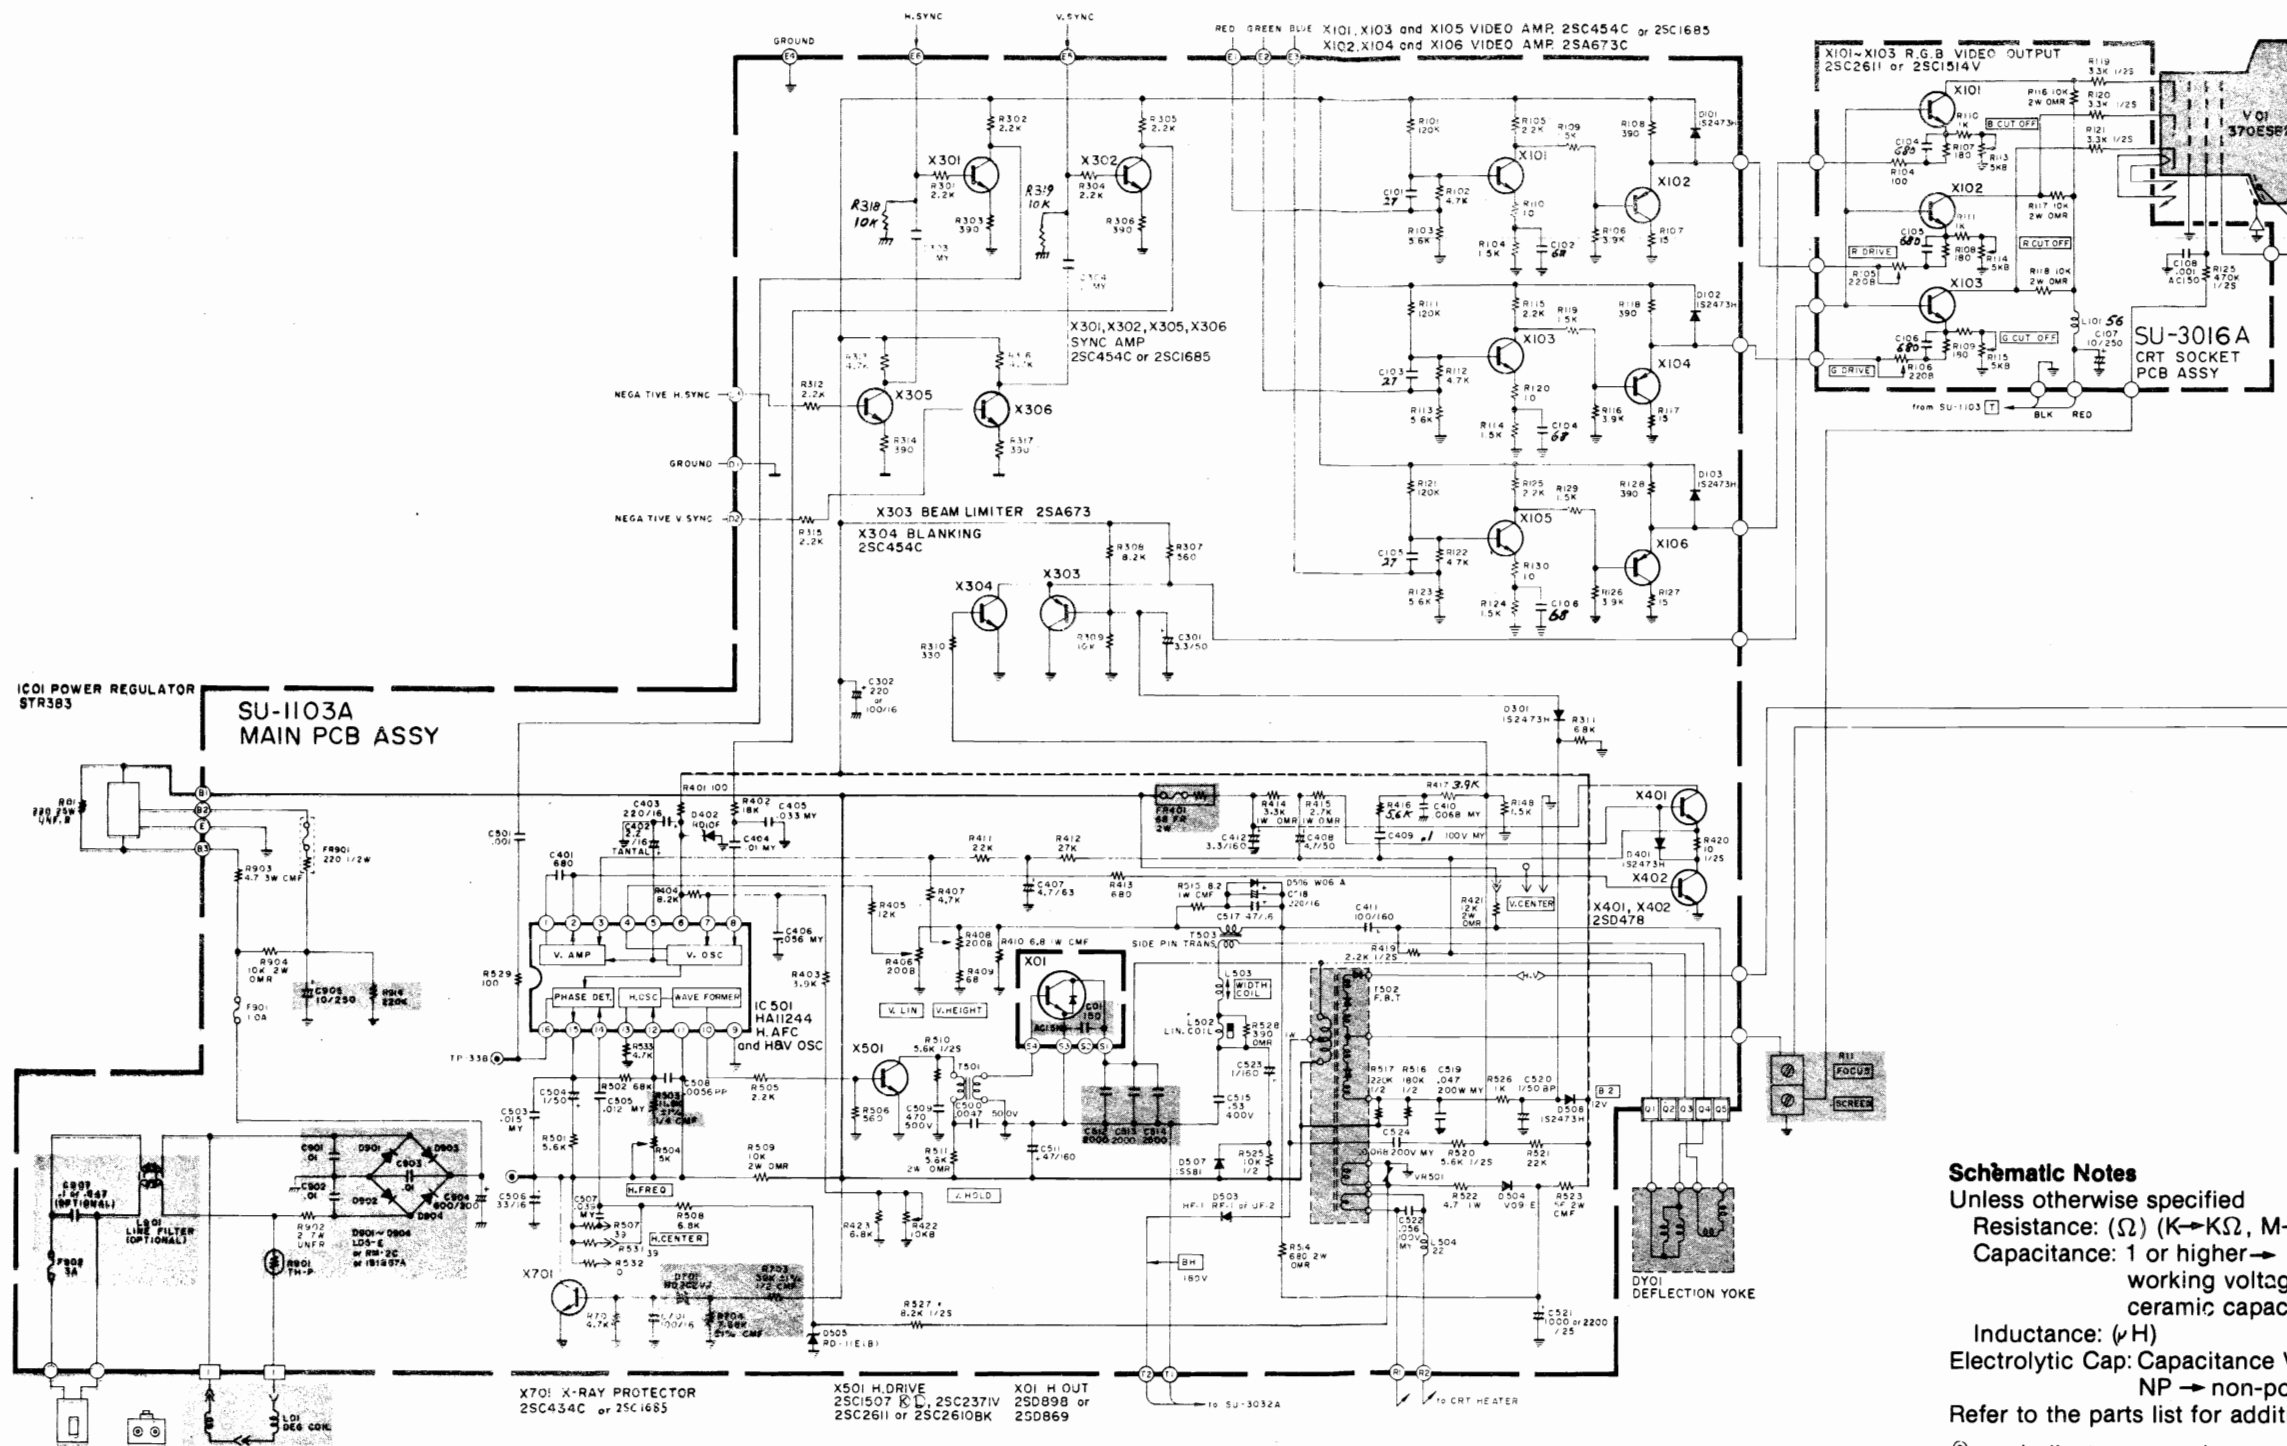

**Schematic Notes**  
 Unless otherwise specified  
 Resistance: (Ω) (K→KΩ, M→MΩ), 1/4 (W) carbon resistor  
 Capacitance: 1 or higher → (pF), less than 1 → (μF)  
 working voltage → 50 (V)  
 ceramic capacitor  
 Inductance: (μH)  
 Electrolytic Cap: Capacitance Value (μF)/working voltage (V),  
 NP → non-polar (or bipolar) electrolytic cap.  
 Refer to the parts list for additional component information.

⊙ indicates test point connection  
 ⏏ indicates chassis ground unless otherwise specified  
 Hz indicates cycles per second

For **safety** purposes (and continuing reliability)  
 ⚠ replace all components marked with safety symbol with identical type.  
 NOTE: FR → fusible resistor (—/—)

G07-FBO  
 00-4147-03

## REPLACEMENT PARTS LIST - ELECTROHOME 13" MONITOR

Components identified by the  $\Delta$  symbol in the PARTS LIST and on the Schematic have special characteristics important to safety.

DO NOT degrade the safety of the set through improper servicing.

### Abbreviations for Resistors and Capacitors

#### Resistor

C R	: Carbon Resistor
Comp. R	: Composition Resistor
OM R	: Oxide Metal Film Resistor
V R	: Variable Resistor
MF R	: Metal Film Resistor
CMF R	: Coating Metal Film Resistor
UNF R	: Nonflammable Resistor
F R	: Fusible Resistor

#### Capacitor

C Cap.	: Ceramic Capacitor
M Cap	: Mylar Capacitor
E Cap.	: Electrolytic Capacitor
BP E Cap.	: Bi-Polar (or Non-Polar) Electrolytic Capacitor
MM Cap.	: Metalized Mylar Capacitor
PP Cap.	: Polypropylene Capacitor
MPP Cap.	: Metalized PP Capacitor
PS Cap	: Polystyrol Capacitor
Tan. Cap.	: Tantal Capacitor

NOTE: When ordering replacement parts please specify the part number as shown in this list including part name, and model number. Complete information will help expedite the order.

Use of substitute replacement parts which do not have the same safety characteristics as specified, may create shock, fire or other hazards. For maximum reliability and performance, all parts should be replaced by those having identical specifications.

Symbol	Description	Part Number
	Main P.C.B. Ass'y	SU-1103A
	CRT Socket P.C.B. Ass'y	SU-3016A
<b>Outside of the P.C.B. Ass'y</b>		
Symbol	Description	Part Number
$\Delta$ V01	$\Delta$ Picture Tube	370ESB22(E)
$\Delta$ DY01	$\Delta$ Deflection Yoke	C29123-V
	PC Magnet	A76366-A
	Wedge	C30006
	$\Delta$ Flyback Transf.	A19183-A
$\Delta$ R11	$\Delta$ Focus V R	A46606-A
$\Delta$ R05	UNF Resistor 220 $\Omega$ , 25W. K	QRF258K-221
$\Delta$ C04	$\Delta$ C Capacitor 150 pF, AC1.5KV	QCZ0101-005
X01	Si. Transistor	2SD869
IC01	IC Regulator	STR383
L01	Degaussing Coil	21-1007-31
	Degaussing Coil Pin Terminal (2)	34-708-01
	Degaussing Coil Pin Terminal Housing	34-709-01
	Groundstrap Ass'y.	34-697-04
	Groundstrap Wire Terminal	34-228-03
	Groundstrap Spring (2)	35-3560-01
BR	Support Bracket RH	35-3919-01
BR	Support Bracket LH	35-3919-02
SC	SCREW 10- $\frac{1}{2}$ Pix Tube Mtg. (4)	31-631018-08
WA	Pyramidal Lockwasher (4)	33-255-01
	Clip P.C.B. Support (2)	33-629-02
	Ground Lug	34-33-04
CH	Chassis Base	38-452-01

## Main P.C.B. Ass'y (SU-1103A) Parts List

### Resistors

Symbol	Description	Part Number
R1406	V R 200Ω	QVZ3230-022
R1408	V R 200Ω	QVZ3230-022
R1410	CMF R 6.8Ω1W J	QRX019J-6R8
R1414	OM R 3.3KΩ1W J	QRG019J-332
R1415	OM R 2.7KΩ1W J	QRG019J-272
R1421	OM R 12KΩ2W J	QRG029J-123
R1422	V R 10KΩ	QVZ3224-014H
△FR1401	△F R 68Ω2W K	QRH024K-680M
△R1503	△CMF R 11.8KΩ¼W +1%	QRV142F-1182
R1504	V R 5KΩ	QVZ3230-053
R1509	OM R 10KΩ2W J	QRG029J-103
R1511	OM R 5.6KΩ2W J	QRG029J-562
R1514	OM R 680Ω2W J	QRG029J-681
R1515	CMF R 8.2Ω1W J	QRX019J-8R2
R1522	CMF R 4.7Ω1W J	QRX019J-4R7
R1523	OM R 56Ω2W J	ORG029J-560
R1528	OM R 390Ω1W J	ORG019J-391
R1534	ZN R	ERZ-C05ZK471
VR1501	ZN R	ERZ-C05DK271
△R1703	△CMF R 39KΩ½W +1%	QRV122F-3902
△R1704	△CMF R 7.68KΩ¼W +1%	QRV142F-7681
△R1901	△Posistor	A75414
R1902	UNF R 2Ω27W K	QRF076K-2R0
R1903	CMF R 5.6Ω3W J	QRX039J-5R6
R1904	OM R 10KΩ2W J	QRG026J-103Z
△FR1901	△F R 220Ω½W K	QRH124K-221M

### Capacitors

Symbol	Description	Part Number
C1402	Tan. Cap. 2.2uF 16V K	QEE51CK-225B
C1411	E Cap. 100uF 160V A	QEW52CA-107
C1412	E Cap. 3.3uF 160V A	QEW52CA-335
C1508	PP Cap. 5600pF 50V J	QFP31HJ-562
C1511	E Cap. 47uF 160V A	QEW52CA-476S
△C1512	△PP Cap. 2000pF DC1500V J	QFZ0082-202
△C1513	△PP Cap. 2000pF DC1500V J	QFZ0082-202
△C1514	△PP Cap. 2500pF DC1500V J	QFZ0082-252
C1515	PP Cap. 0.53uF DC1200V K	QFZ0067-534
C1520	BPE Cap. 1uF 50V A	QEN61HA-105Z
C1524	M Cap. 0.1uF 200V K	QFM72DK-682M
C1904	E Cap.	QEY0034-001
C1905	E Cap. 10uF 250V A	QEW52EA-106
△C1907	△MM Cap. 0.1uF AC150V Z	QFZ9008-104

### Coils

Symbol	Description	Part Number
L1501	Peaking Coil	A75360-6
L1502	Linearty Coil	A39934
L1503	Width Coil	C30380-A
L1504	Heater Choke	C30333-A
L1901	Line Filter	A39475-J

### Transformers

Symbol	Description	Part Number
T1501	Hor. Drive Transf.	A46022-BM
T1503	Side Pin Transf.	C39050-A

**Semiconductors**

<b>Symbol</b>	<b>Description</b>	<b>Part Number</b>
IC1501	I.C.	HA11244
X1101	Si. Transistor	2SC1685(R)
X1102	Si. Transistor	2SA673(C)
X1103	Si. Transistor	2SC1685(R)
X1104	Si. Transistor	2SA673(C)
X1105	Si. Transistor	2SC1685(R)
X1106	Si. Transistor	2SA673(C)
X1301	Si. Transistor	2SC1685(R)
X1302	Si. Transistor	2SC1685(R)
X1303	Si. Transistor	2SA673(C)
X1304	Si. Transistor	2SC1685(R)
X1305	Si. Transistor	2SC1685(R)
X1401	Si. Transistor	2SD478
X1402	Si. Transistor	2SD478
X1501	Si. Transistor	2SC2610BK
X1701	Si. Transistor	2SC1685(P-S)
D1101	Si. Diode	W06A
D1102	Si. Diode	W06A
D1103	Si. Diode	W06A
D1301	Si. Diode	1S2473H
D1401	Si. Diode	1S2473H
D1402	Zener Diode	RD10F(C)
D1503	Si. Diode	HF-1
D1504	Si. Diode	V09E
D1505	Zener Diode	RD11E(B)
D1506	Si. Diode	W06A
D1507	Si. Diode	1SS81
D1508	Si. Diode	1S2473H
△D1701	△Zener Diode	RD20EV2
△D1901	△Si. Diode	1S1887A
△D1902	△Si. Diode	1S1887A
△D1903	△Si. Diode	1S1887A
△D1904	△Si. Diode	1S1887A
<b>Miscellaneous</b>		
<b>Symbol</b>	<b>Description</b>	<b>Part Number</b>
△F1901	△Fuse 1A	QMF53U1-1R0S
△F1902	△UL Fuse 3A	QMF66U1-3R0S

## CRT Socket P.C.B. Ass'y (SU-3016A) Parts List

### Resistors

Symbol	Description	Part Number
R3105	V R 200 $\Omega$	QVZ3234-022
R3106	V R 200 $\Omega$	QVZ3234-022
R3113	V R 5K $\Omega$	QVZ3234-053
R3114	V R 5K $\Omega$	QVZ3234-053
R3115	V R 5K $\Omega$	QVZ3234-053
R3116	OM R 10K $\Omega$ 2W J	QRG029J-103
R3117	OM R 10K $\Omega$ 2W J	QRG029J-103
R3118	OM R 10K $\Omega$ 2W J	QRG029J-103
R3119	Comp. R 3.3K $\Omega$ 1/2W K	QRZ0039-332
R3120	Comp. R 3.3K $\Omega$ 1/2W K	QRZ0039-332
R3121	Comp. R 3.3K $\Omega$ 1/2W K	QRZ0039-332

### Capacitors

Symbol	Description	Part Number
C3107	E Cap. 10uF 250V A	QEW52EA-106
C3108	C Cap. 1000pF DC1400V P	QCZ9001-102M

### Coils

Symbol	Description	Part Number
L3101	Peaking coil	QQL043K-101


### Semiconductors

Symbol	Description	Part Number
X3101	Si. Transistor	2SC2611
X3102	Si. Transistor	2SC2611
X3103	Si. Transistor	2SC2611

### Miscellaneous

Symbol	Description	Part Number
$\Delta$	$\Delta$ CRT Socket	A75522

## **IX Schematics and Wiring Diagrams**

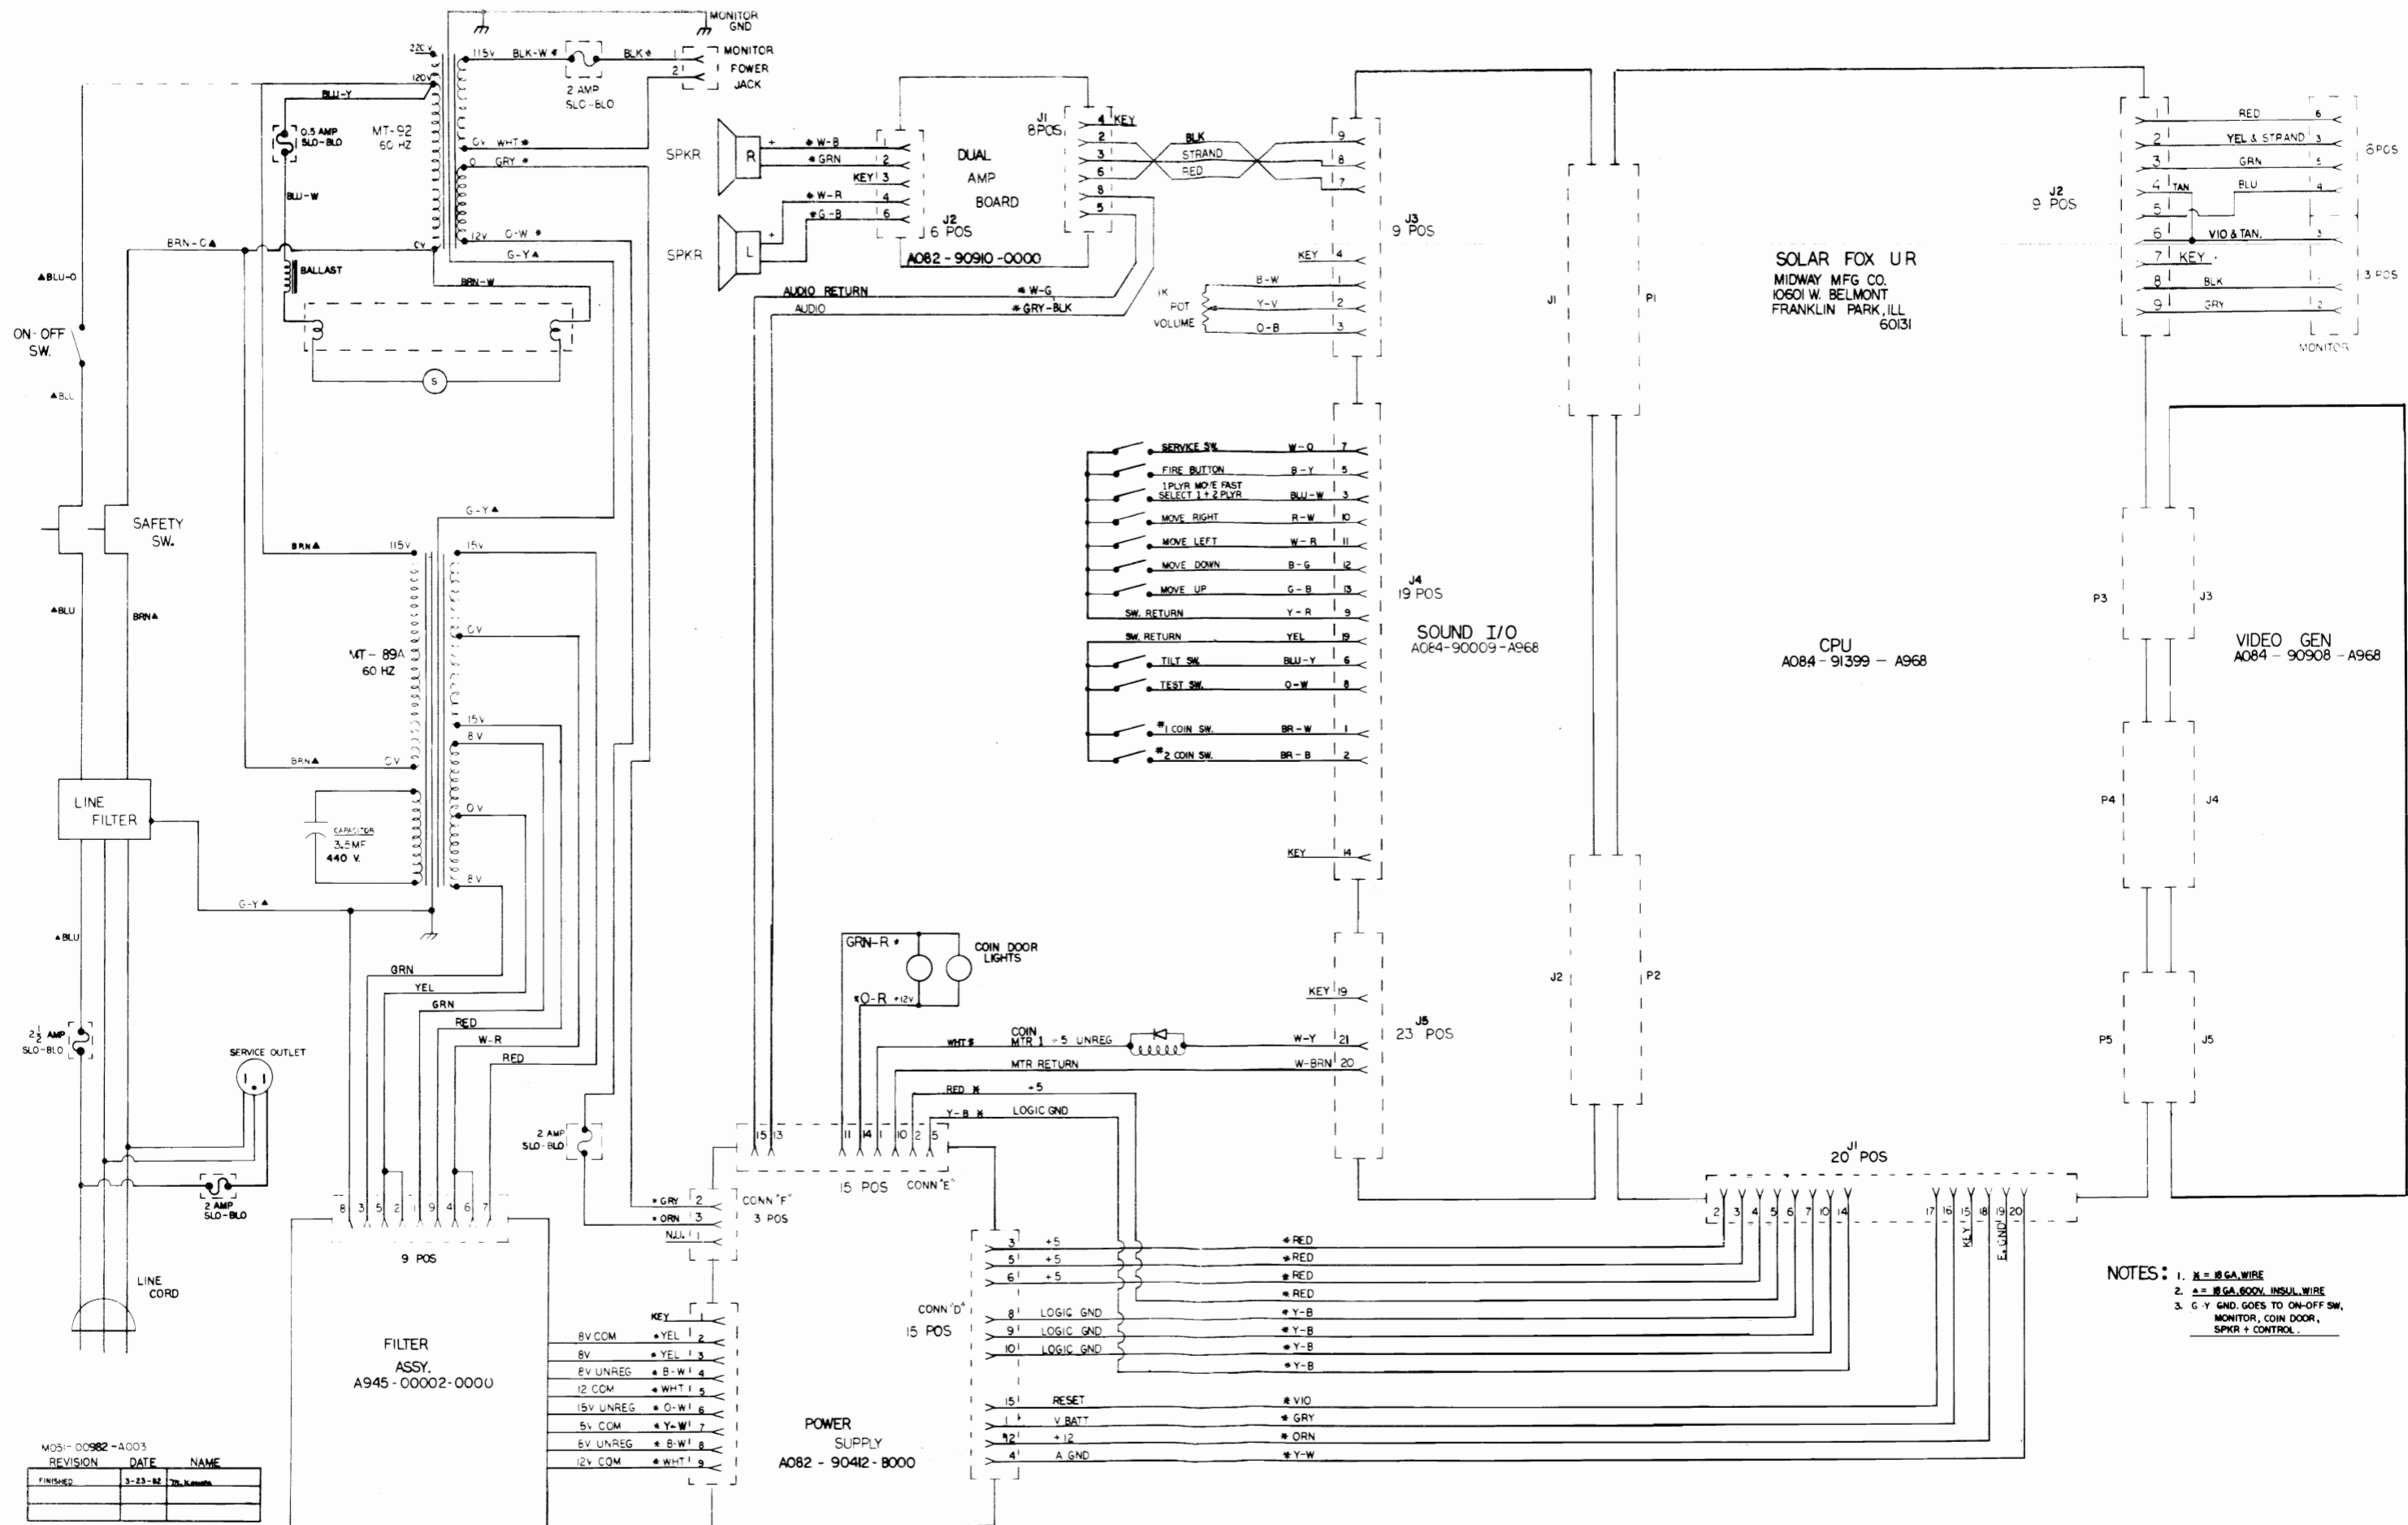

SOLAR FOX U/R  
MIDWAY MFG CO.  
10601 W. BELMONT  
FRANKLIN PARK, ILL  
60131

CPU  
A084-91399 - A968

VIDEO GEN  
A084-90908 - A968

SOUND I/O  
A084-90009 - A968


POWER SUPPLY  
A082-90412-8000

FILTER ASSY.  
A945-00002-0000

M051-00582-A003

REVISION	DATE	NAME
FINISHED	3-23-82	J.K. KENNEDY

- NOTES:
1. X = 18 GA. WIRE
  2. Δ = 18 GA. 600V. INSUL. WIRE
  3. G-Y GND. GOES TO ON-OFF SW, MONITOR, COIN DOOR, SPKR + CONTROL.

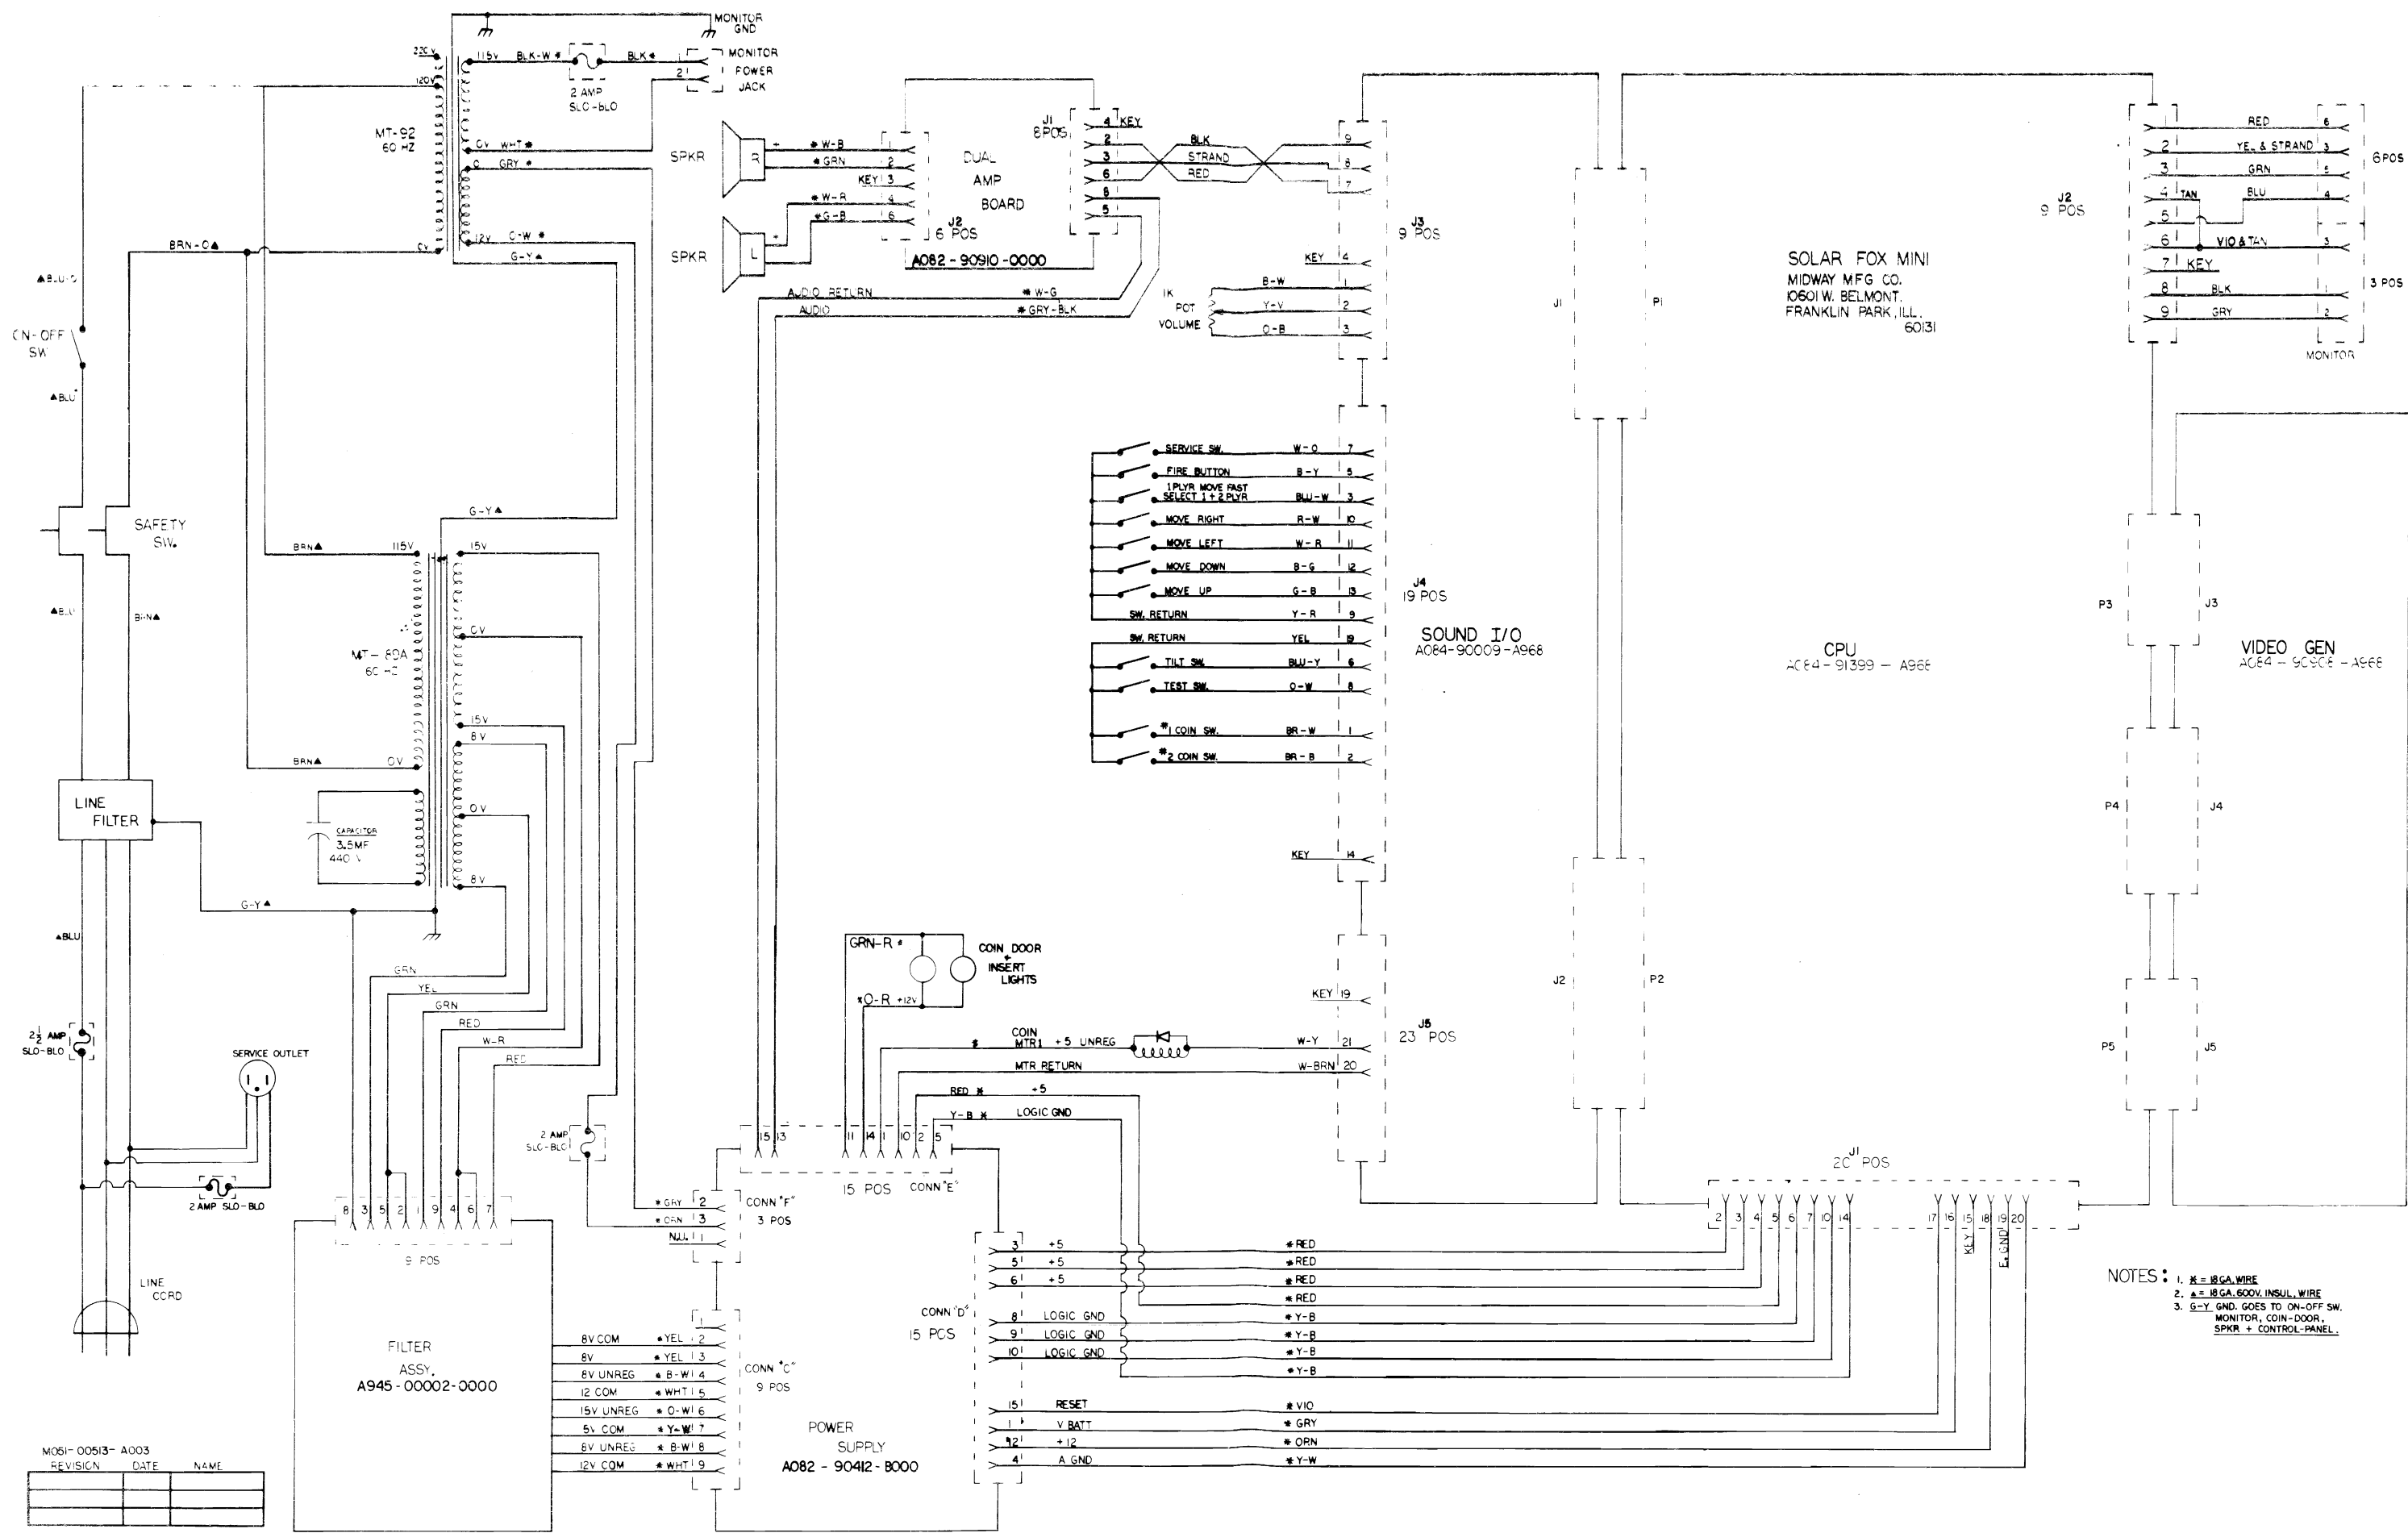

SOLAR FOX MINI  
MIDWAY MFG CO.  
10601 W. BELMONT,  
FRANKLIN PARK, ILL.  
60131

CPU  
A064-91399 - A966

VIDEO GEN  
A064-90906 - A966


SOUND I/O  
A064-90009-A966

POWER SUPPLY  
A082-90412-0000

FILTER ASSY.  
A945-00002-0000

- NOTES:
1. \* = 18 GA. WIRE
  2. ▲ = 18 GA. 600V. INSUL. WIRE
  3. G-Y. GND. GOES TO ON-OFF SW. MONITOR, COIN-DOOR SW. SPKR + CONTROL-PANEL.

MO51-00513- A003	REVISION	DATE	NAME

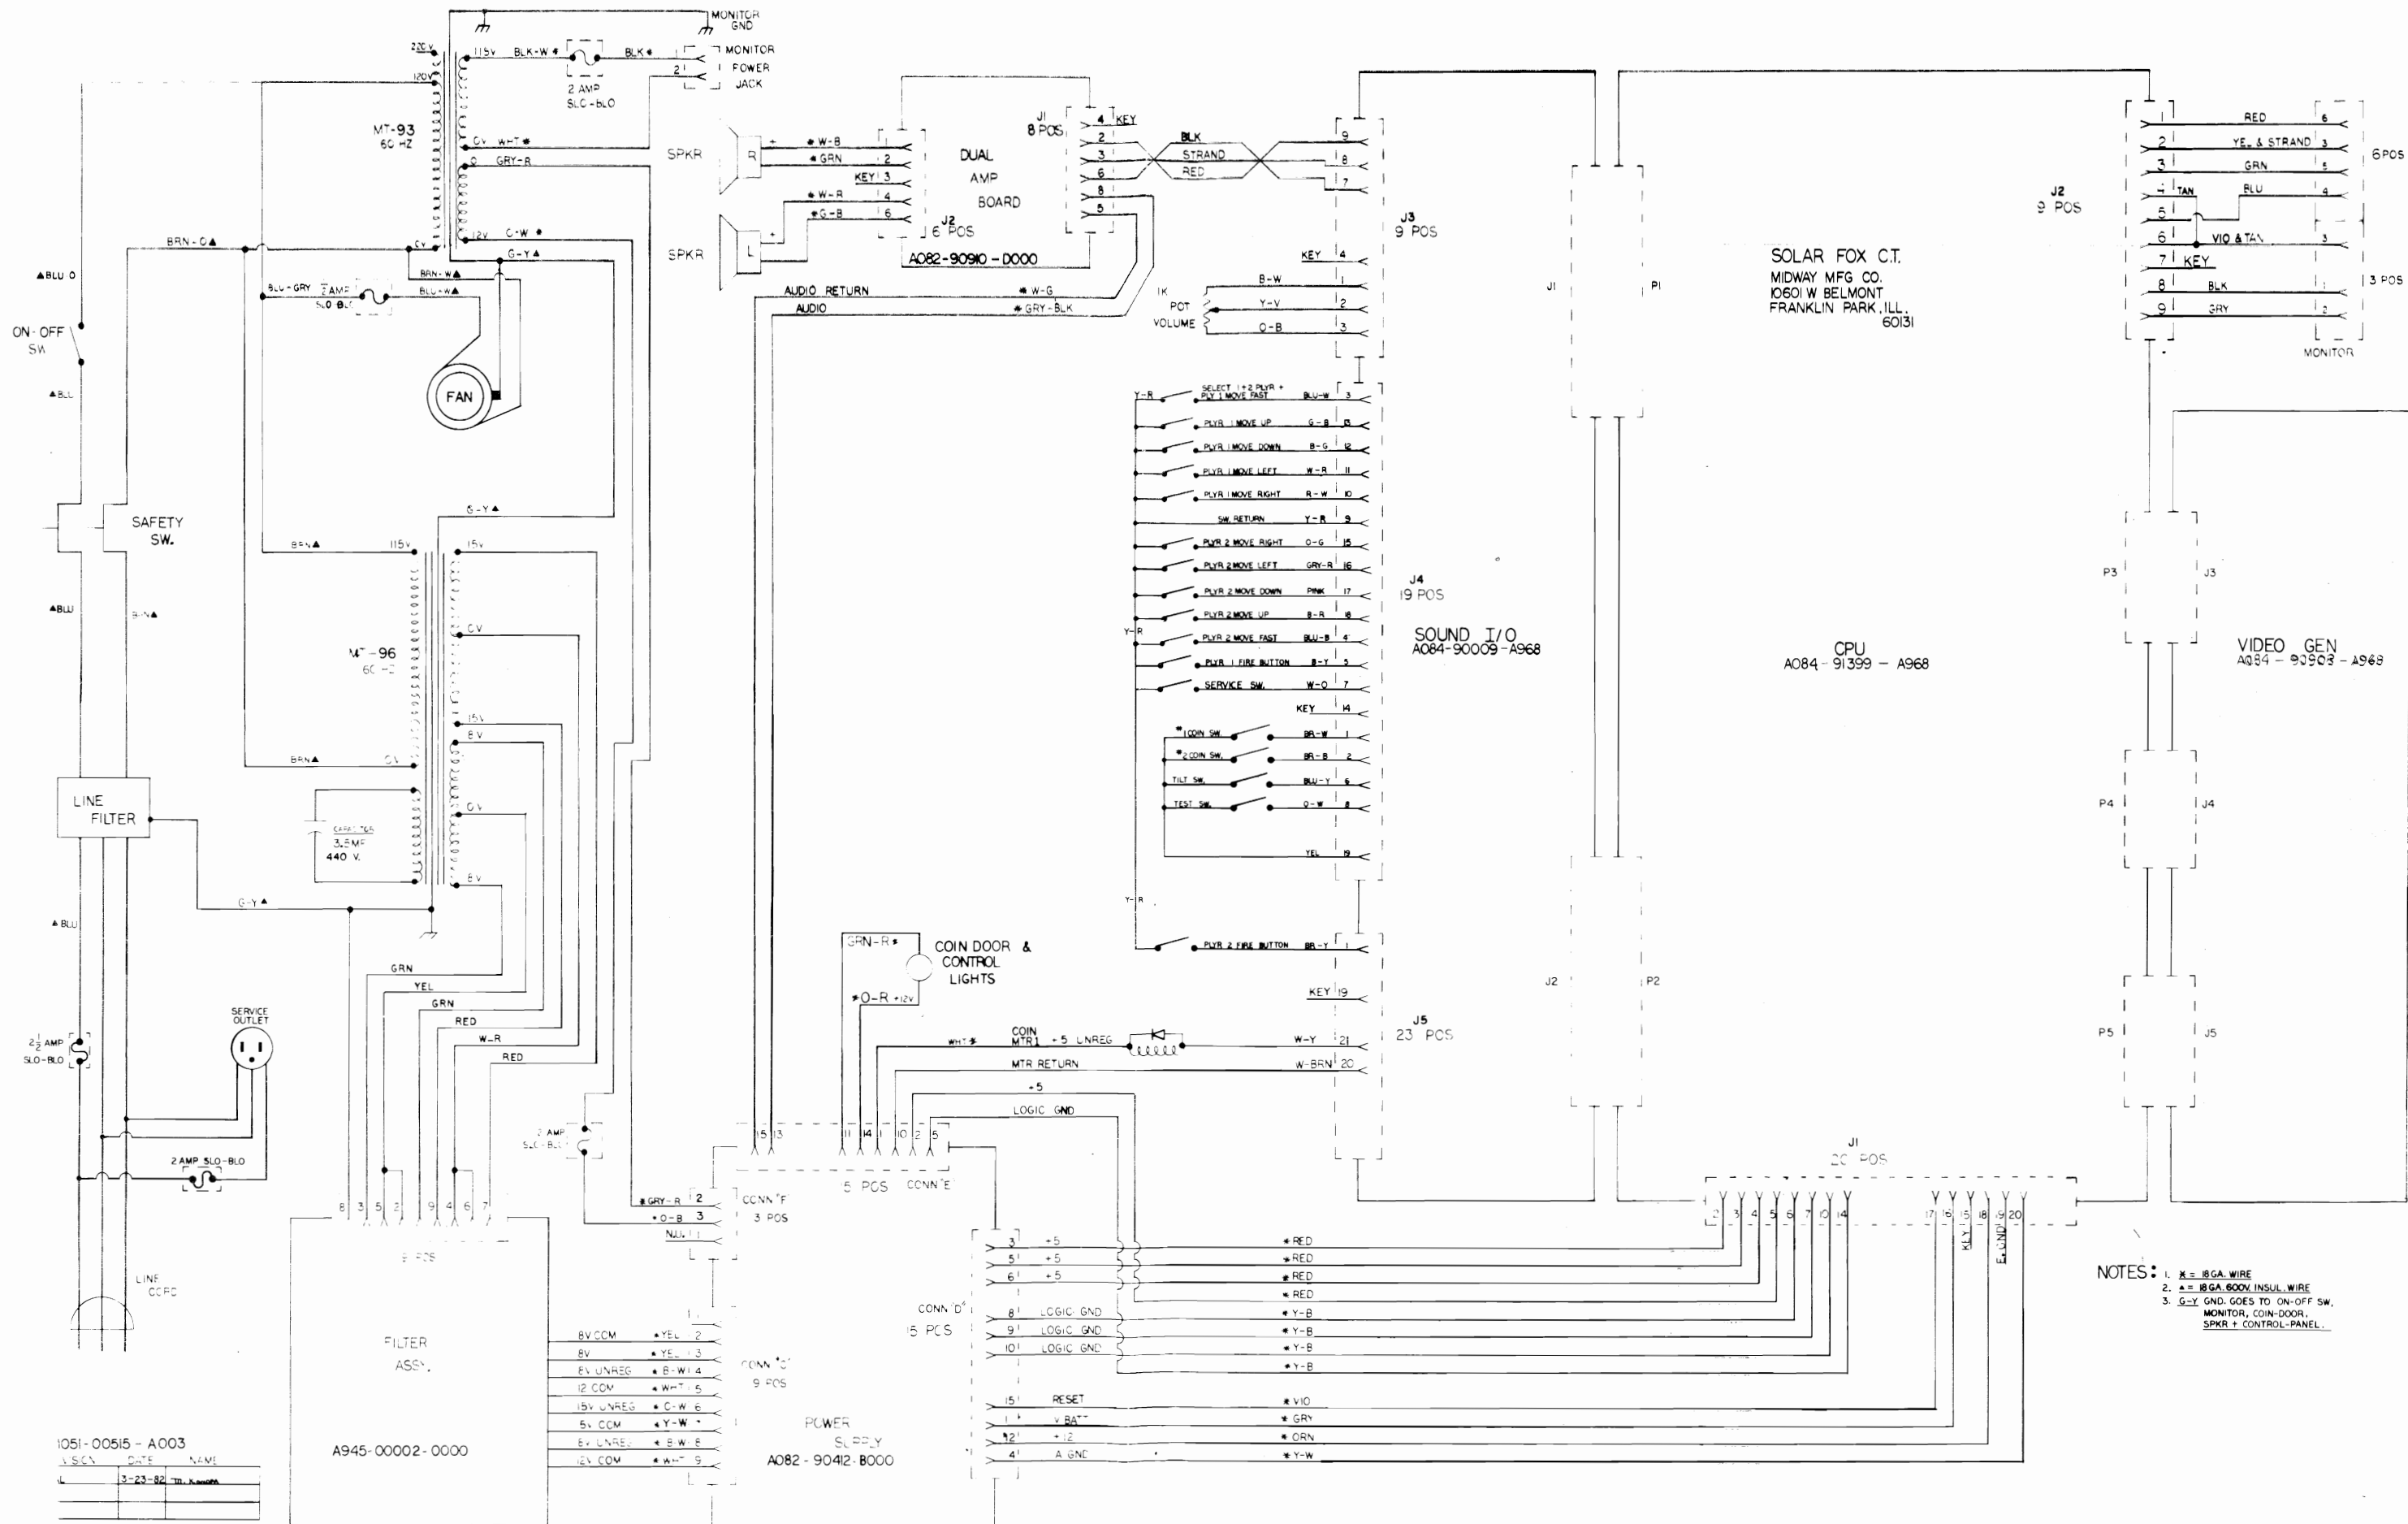

SOLAR FOX C.T.  
MIDWAY MFG CO.  
10601 W BELMONT  
FRANKLIN PARK, ILL.  
60131

CPU  
A084-91399 - A968

VIDEO GEN  
A084-90903 - A968

POWER SUPPLY  
A082-90412-0000

A945-00002-0000

- NOTES:
1. \* = IBGA WIRE
  2. Δ = IBGA 600V INSUL WIRE
  3. G-Y GND. GOES TO ON-OFF SW, MONITOR, COIN-DOOR, SPKR + CONTROL-PANEL.


1051-00515 - A003

REV	DATE	NAME
1	3-23-82	M. K...

DESIGNATION LIST

CROSS REFERENCE LIST

DESIGNATION #	DESCRIPTION	DESIGNATION #	DESCRIPTION
C101	4700uf AX. ELECT.	Q102	2N2905
C102	470uf AX. ELECT.	Q105	2N2905
C103	.1uf AX. CER.	Q201	2N4401
C104	.1uf AX. CER.		
C105	47pf AX. CER.		
C106	470uf AX. ELECT.		
C107	100uf RD. TANT.		
C108	1uf RD. TANT.	U1	LM305 REG.
C109	4.7uf RD. TANT.	U2	LM305 REG.
C110	.1uf AX. CER.	U3	LM3900
C111	.1uf AX. CER.	U4	4N28
C201	.01uf MYLAR	L101	.22uH INDUCTOR
C202	.033uf MYLAR	B101	BATTERY 3.6VDC 60DEG-C
C203	.01uf MYLAR	F1	3/8A S-BLO FUSE
C204	.047uf MYLAR	FC1A,1B	FUSE CLIP
C205	820pf AX. CER.	FB1,2	FERRITE BEAD
C206	.01uf AX. CER.	TW1	TIE WRAP
CP1	.1uf AX. CER.	J3	9PIN P.C. MOUNT CONN.(MALE)
		J4	15PIN P.C. MOUNT CONN.(FEMALE)
		J5	15PIN P.C. MOUNT CONN.(MALE)
		J6	3PIN P.C. MOUNT CONN.(MALE)
R101	.18ohm 5W W/RES. SPACER	LB1	FUSE TAG
R102	68ohm 1/2W 5%	LB2	SYSTEM TAG
R104	10ohm 5W W/RES. SPACER		
R105	27ohm 1/4W 5%	HSA1	HEAT SINK ASS'Y 1
R106	270ohm 1/4W 5%	MHSA1	MOUNTING HARD WARE(HEAT SINK)
R107	6.2K 1/4W 5%		2-SCREW
			4-WASHER
			2-HEXNUT
R109	1K 1/4W 5%	JW1-5	JUMPER WIRE
R110	.16ohm 15W W/RES. SPACER	FBMH1,2	FERRITE BEAD MOUNTING HARDWARE
R111	6.8ohm 1/2W 5%		
R112	68ohm 1/2W 5%		
R113	1.2K 1/4W 5%		
R114	47ohm 1/4W 5%		
R115	160ohm 1/4W 5%		
R117	560ohm 1/4W 5%		
R118	150ohm 2W		
R201	270ohm 1/4W 5%		
R202	1.2K 1/4W 5%		
R203	1.1M 1/4W 5%		
R204	3.3M 1/4W 5%		
R205	10M 1/4W 5%		
R206	100K 1/4W 5%		
R207	33K 1/4W 5%		
R208	2M 1/4W 5%		
R209	1M 1/4W 5%		
R210	1.2M 1/4W 5%		
R211	75K 1/4W 5%		
R212	75K 1/4W 5%		
R213	220K 1/4W 5%		
R214	3.9K 1/4W 5%		
R215	1.2K 1/4W 5%		
R216	82ohm 1W 10%		
R217	270ohm 1/4W 5%		
VR101,102	100ohm POT		
D101	A15F		
D102	A15F		
D103	A15F		
D104	A15F		
D105	A15F		
D106	1N4001		
D201	1N4148		
D202	1N4148		
D203	1N4148		
D204	1N4001		
D205	1N4001		

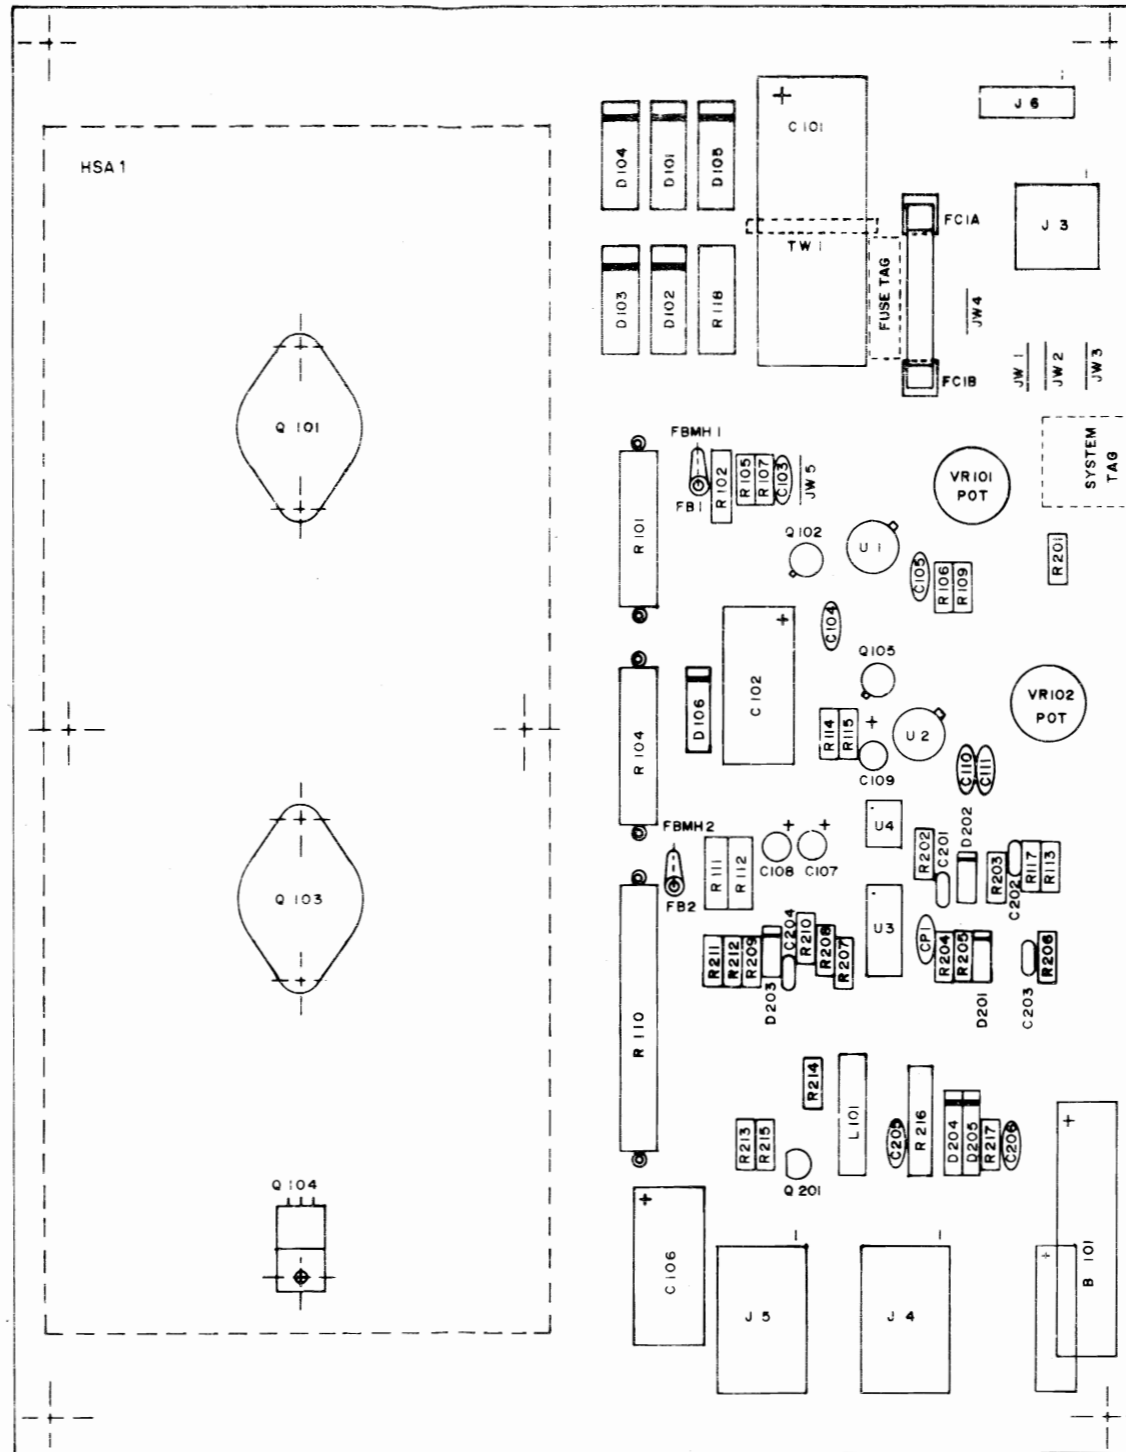


DESCRIPTION	Q'ty	DESIGNATION #	PART #
47pf AX. CER.	1	C105	0945-00811-0100
820pf AX. CER.	1	C205	0945-00816-0400
.01uf AX. CER.	1	C206	0945-00816-0100
.01uf MYLAR	2	C201,203	0945-00816-0200
.033uf MYLAR	1	C202	0945-00816-0500
.047uf MYLAR	1	C204	0945-00816-0300
.1uf AX. CER.	5	C103,104,110,111, CP1	0945-00811-0200
1uf RAD. TANT	1	C108	0945-00811-0300
4.7uf RAD. TANT	1	C109	0945-00811-0400
100uf RAD. TANT	1	C107	0945-00811-0500
470uf AX. ELECT.	2	C102,106	0945-00816-0600
470uf AX. ELECT.	1	C101	0945-00811-0700
.16ohm 15W 5%	1	R110	0945-00815-0100
.18ohm 5W 5%	1	R101	0945-00815-0200
6.8ohm 1/2W 5%	1	R111	0062-047D3-1XXX
10ohm 5W 5%	1	R104	0945-00812-0100
27ohm 1/4W 5%	1	R105	0062-088B3-1XXX
47ohm 1/4W 5%	1	R114	0062-086B3-1XXX
68ohm 1/2W 5%	2	R102,112	0062-098D3-1XXX
82ohm 1W 10%	1	R216	0062-104F5-1XXX
150ohm 2W 5%	1	R118	0945-00812-0200
160ohm 1/4W 5%	1	R115	0062-124B3-1XXX
270ohm 1/4W 5%	3	R106,201,217	0062-138B3-1XXX
560ohm 1/4W 5%	1	R117	0062-162B3-1XXX
1K 1/4W 5%	1	R109	0062-179B3-1XXX
1.2K 1/4W 5%	3	R113,202,215	0062-183B3-1XXX
3.9K 1/4W 5%	1	R214	0062-207B3-1XXX
6.2K 1/4W 5%	1	R107	0062-217B3-1XXX
33K 1/4W 5%	1	R207	0062-251B3-1XXX
75K 1/4W 5%	2	R211,212	0062-269B3-1XXX
100K 1/4W 5%	1	R206	0062-275B3-1XXX
220K 1/4W 5%	1	R213	0062-291B3-1XXX
1M 1/4W 5%	1	R209	0062-323B3-1XXX
1.1M 1/4W 5%	1	R203	0062-325B3-1XXX
1.2M 1/4W 5%	1	R210	0062-327B3-1XXX
2M 1/4W 5%	1	R208	0062-337B3-1XXX
3.3M 1/4W 5%	1	R204	0062-347B3-1XXX
10M 1/4W 5%	1	R205	0062-371B3-1XXX
100ohm POT	2	VR101,102	0945-00814-0000
A15F RECTIFIER	5	D101-105	0945-00804-0200
1N4001	3	D106,204,205	0945-00804-0300
1N4148	3	D201-203	0945-00804-0500
2N2905	2	Q102,105	0945-00808-0300
2N4401	1	Q201	0945-00804-0400
LM305 REG.	2	U1,2	0945-00813-0100
LM3900	1	U3	0945-00813-0200
4N28	1	U4	0945-00813-0300
BATTERY 3.6VDC 60DEG-C	1	B101	0017-00003-0377
FUSE 3/8A S-BLO	1	F1	0945-00808-0400
FUSE CLIP	2	FC1A,1B	0017-00003-0214
TIE WRAP	1	TW1	0945-00814-0300
FERRITE BEAD	2	FB1,2	0017-00009-0225
FERRITE MOUNTING HDW.			
.22uH INDUCTOR	1	L101	0017-00033-0139
FUSE TAG	1		M051-00945-A004
SYSTEM TAG	1		M051-00945-A009
P.C.B.	1		A080-90412-B000
HEAT SINK ASS'Y	1	HSA1	A945-00008-0000
(SEE HS ASS'Y DRAWING "X" NOTE")			
4-40 X 10 SLT RND	2	MHSA1A,2A	0017-00101-00727
4-40 HEX NUT	2	MHSA1E,2E	0017-00103-0002
WSH 4-120-.250-018	4	MHSA1B,1D	0017-00104-0071
		MHSA2B,2D	

CROSS REFERENCE LIST

DESCRIPTION	Q'ty	DESIGNATION #	PART #
3PIN P.C. MOUNT CONN. (MALE)	1	J6	0017-00021-0443
9PIN P.C. MOUNT CONN.(MALE)	1	J3	0017-00021-0425
15PIN P.C. MOUNT CONN.(FEMALE)	1	J4	0017-00021-0441
15PIN P.C. MOUNT CONN.(MALE)	1	J5	0017-00021-0440
22AWG T&R BARE 2.5"	5	JW1-5	0151-00087-0000

PROJ. ENG : L. DEKKER

DO NOT SCALE DWG		HEAT TREAT	SCALE	USED ON	KICK	<b>MIDWAY MFG. CO.</b>	
				NO REQ	1PER	FRANKLIN PK ILL	
DIM TOLERANCES UNLESS SPECIFIED		DWN	C.L.	PWR SPLY 125VA W/CKT SPRT		PART NO	
CONCENTRICITY 1/16 .001		CKD	L.D.	A082-90412-B000		M051-00945-0006	
SERIAL TYPICAL 1/64							
DECIMAL 0.05							
HOLE DIA .002 .005		DATE	12-14-81				

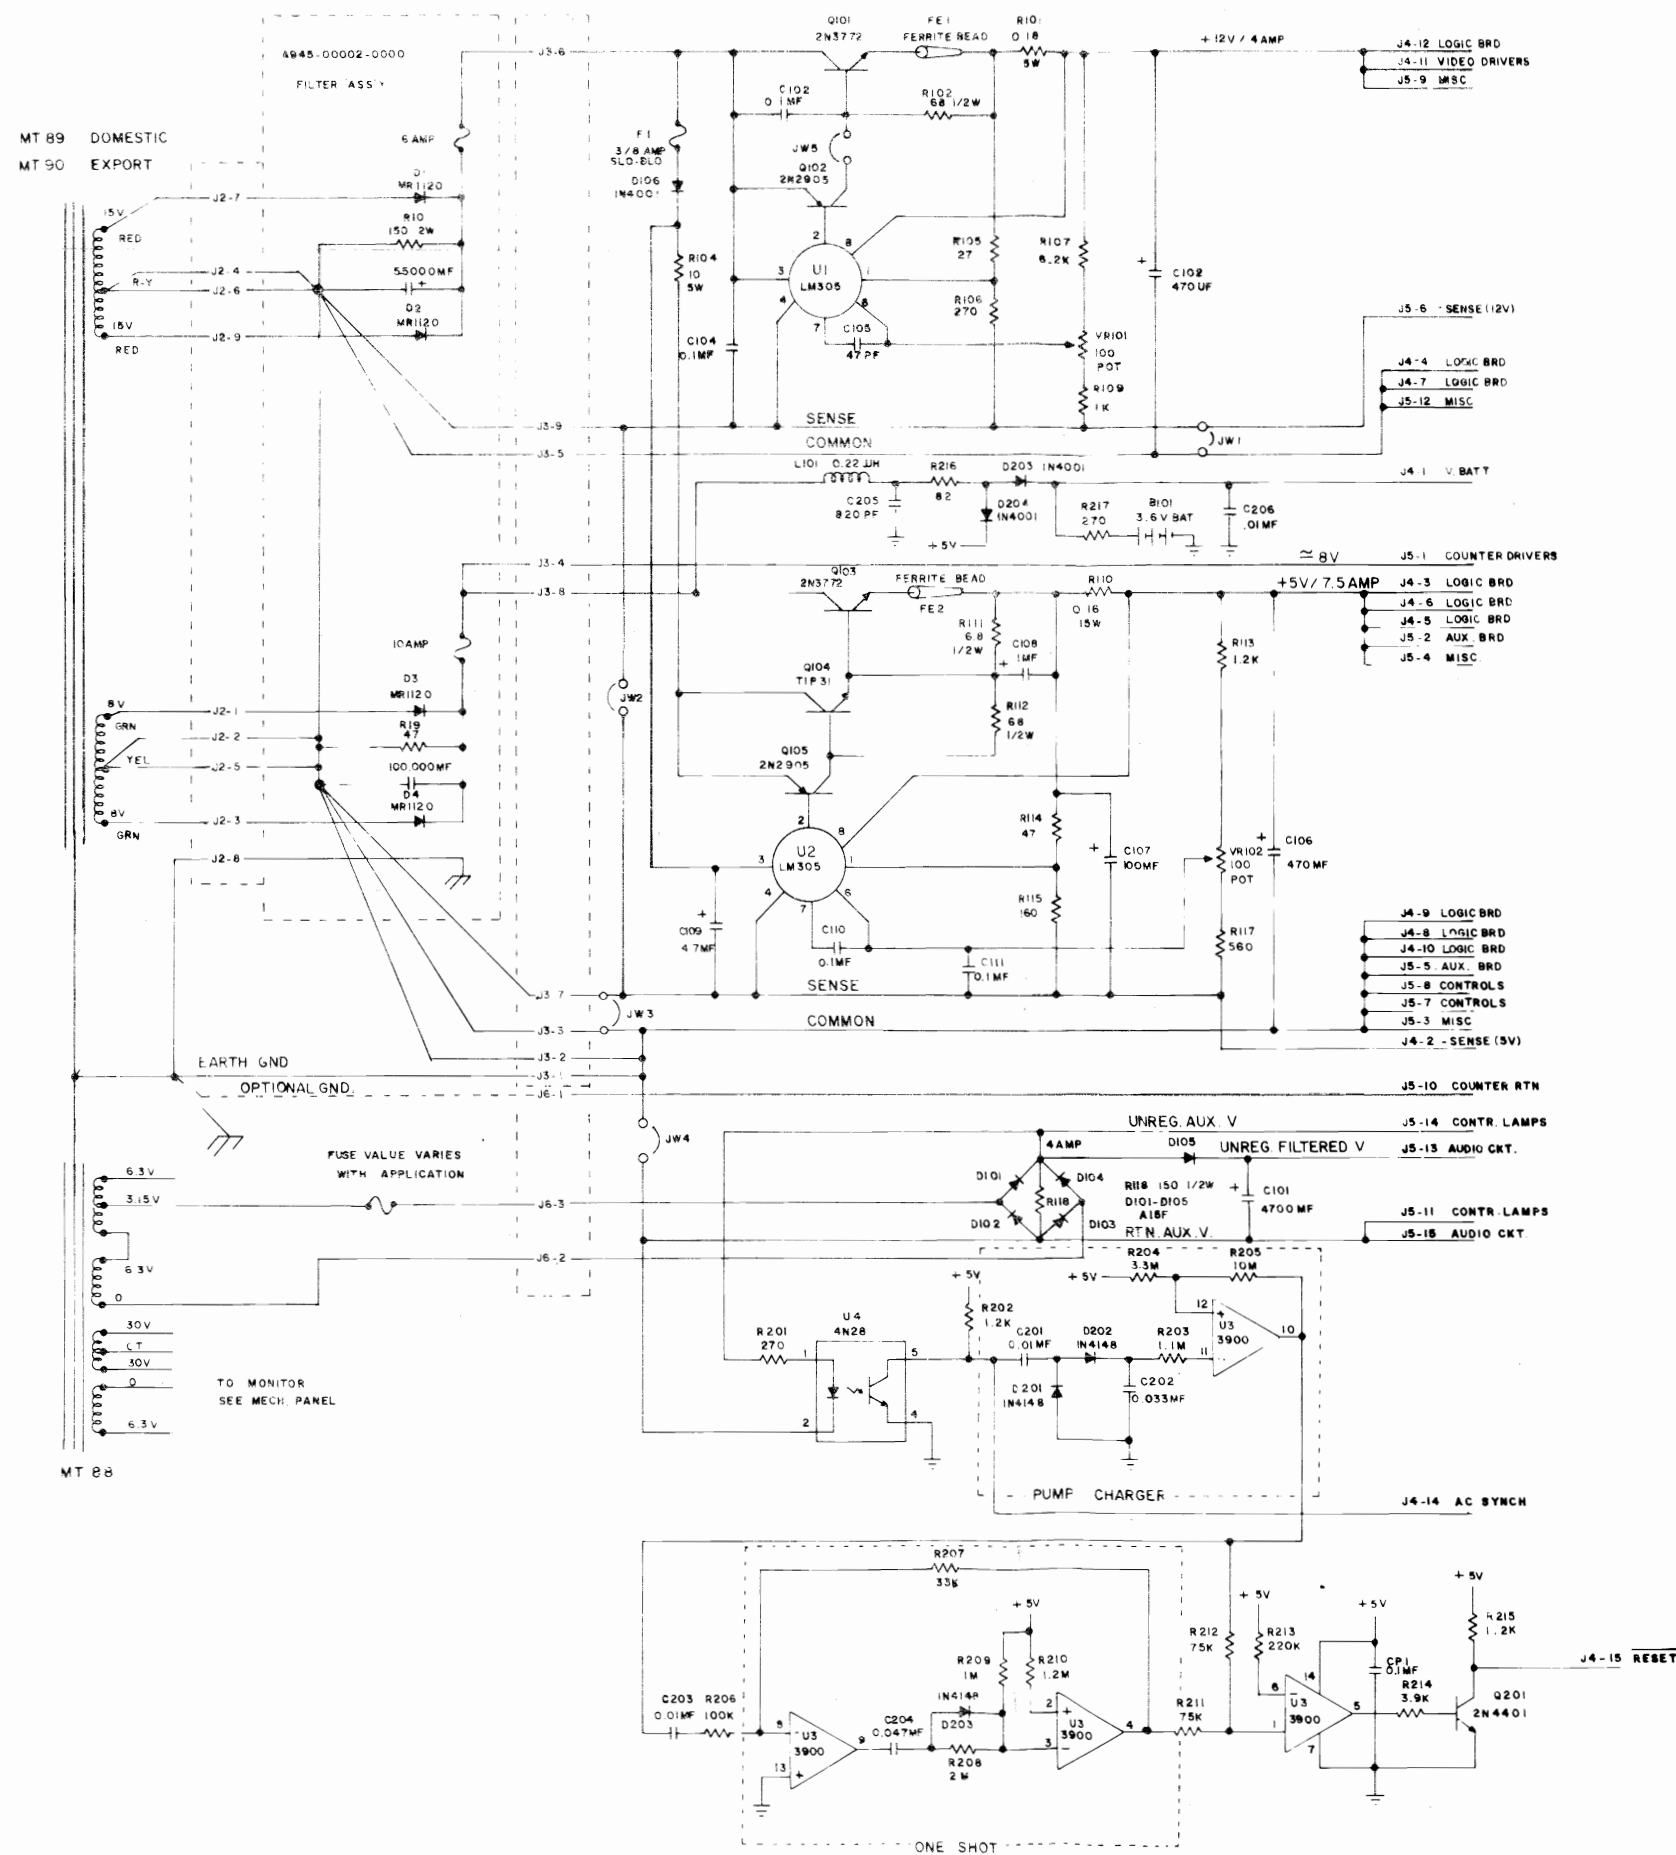


PROJECT ENG L DEKKER	MCR II	MIDWAY MFG. CO.
12-14-81	SCHEMATIC DRAWING 128VA POWER SUPPLY A082-90412-B000	M051-0945-C007

DESIGNATION LIST

CROSS REFERENCE LIST

DESIGNATION #	DESCRIPTION	DESIGNATION #	DESCRIPTION
C101	4700uf AX. ELECT.		
C102	470uf AX. ELECT.	Q102	2N2905
C103	.1uf AX. CER.	Q105	2N2905
C104	.1uf AX. CER.	Q201	2N4401
C105	47pf AX. CER.		
C106	470uf AX. ELECT.		
C107	100uf RD. TANT.		
C108	1uf RD. TANT.	U1	LM305 REG.
C109	4.7uf RD. TANT.	U2	LM305 REG.
C110	.1uf AX. CER.	U3	LM3900
C111	.1uf AX. CER.	U4	4N28
C201	.01uf MYLAR	L101	.22uH INDUCTOR
C202	.033uf MYLAR	B101	BATTERY 3.6VDC 60DEG-C
C203	.01uf MYLAR	F1	3/8A S-BLO FUSE
C204	.047uf MYLAR	FC1A,1B	FUSE CLIP
C205	820pf AX. CER.	FE1,2	FERRITE BEAD
C206	.01uf AX. CER.	TW1	TIE WRAP
CP1	.1uf AX. CER.	J3	9PIN P.C. MOUNT CONN.(MALE)
		J4	15PIN P.C. MOUNT CONN.(FEMALE)
		J5	15PIN P.C. MOUNT CONN.(MALE)
		J6	3PIN P.C. MOUNT CONN.(MALE)
R101	.18ohm 5W W/RES. SPACER		
R102	68ohm 1/2W 5%		
R104	10ohm 5W W/RES. SPACER		
R105	27ohm 1/4W 5%	LB1	FUSE TAG
R106	270ohm 1/4W 5%	LB2	SYSTEM TAG
R107	6.2K 1/4W 5%		
R109	1K 1/4W 5%	HSA1	HEAT SINK ASS'Y 1
R110	.16ohm 15W W/RES. SPACER	MHSA1	MOUNTING HARD WARE(HEAT SINK)
R111	6.8ohm 1/2W 5%		2-SCREW
R112	68ohm 1/2W 5%		4-WASHER
R113	1.2K 1/4W 5%		2-HEXNUT
R114	47ohm 1/4W 5%		
R115	160ohm 1/4W 5%	JW1-5	JUMPER WIRE
		FBMH1,2	FERRITE BEAD MOUNTING HARDWARE
R117	560ohm 1/4W 5%		
R118	150ohm 2W		
R201	270ohm 1/4W 5%		
R202	1.2K 1/4W 5%		
R203	1.1M 1/4W 5%		
R204	3.3M 1/4W 5%		
R205	10M 1/4W 5%		
R206	100K 1/4W 5%		
R207	33K 1/4W 5%		
R208	2M 1/4W 5%		
R209	1M 1/4W 5%		
R210	1.2M 1/4W 5%		
R211	75K 1/4W 5%		
R212	75K 1/4W 5%		
R213	220K 1/4W 5%		
R214	3.9K 1/4W 5%		
R215	1.2K 1/4W 5%		
R216	82ohm 1W 10%		
R217	270ohm 1/4W 5%		
R300	68 1/2W 5%		
VR101,102	100ohm POT		
D101	A15F		
D102	A15F		
D103	A15F		
D104	A15F		
D105	A15F		
D106	1N4001		
D201	1N4148		
D202	1N4148		
D203	1N4148		
D204	1N4001		
D205	1N4001		

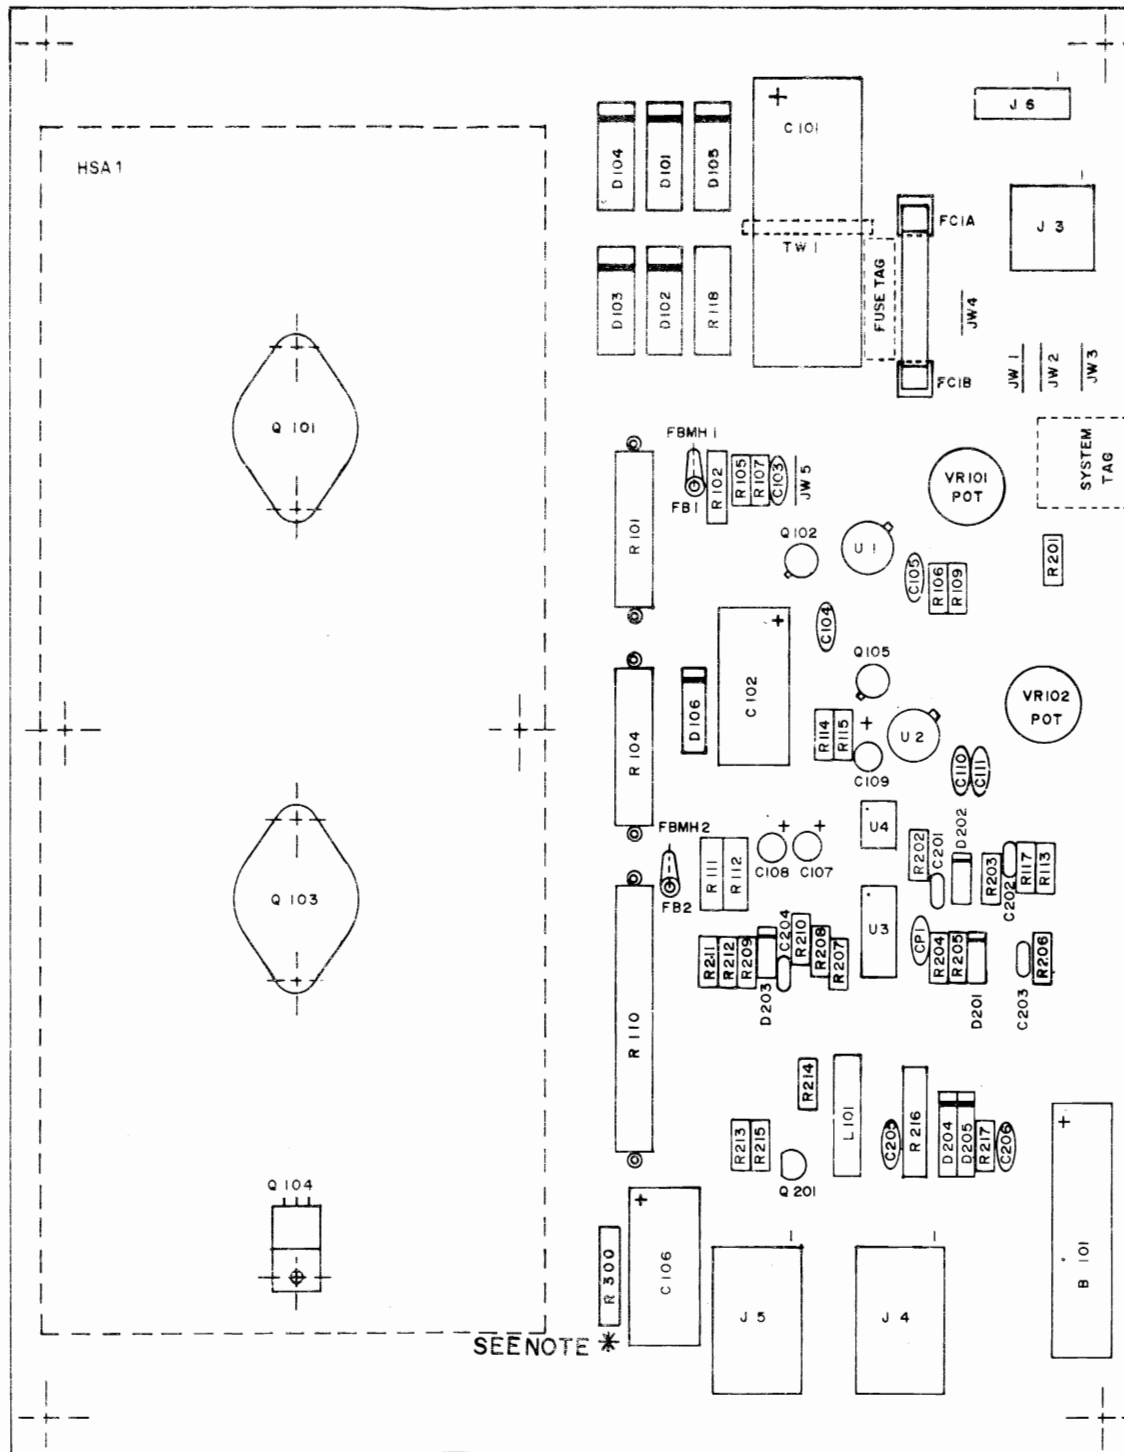

DESCRIPTION	Q'ty	DESIGNATION #	PART #
47pf AX. CER.	1	C105	0945-00811-0100
820pf AX. CER.	1	C205	0945-00816-0400
.01uf AX. CER.	1	C206	0945-00816-0100
.01uf MYLAR	2	C201,203	0945-00816-0200
.033uf MYLAR	1	C202	0945-00816-0500
.047uf MYLAR	1	C204	0945-00816-0300
.1uf AX. CER.	5	C103,104,110,111,CP1	0945-00811-0200
1uf RAD. TANT	1	C108	0945-00811-0300
4.7uf RAD. TANT	1	C109	0945-00811-0400
100uf RAD. TANT	1	C107	0945-00811-0500
470uf AX. ELECT.	2	C102,106	0945-00816-0600
470uf AX. ELECT.	1	C101	0945-00811-0700
.16ohm 15W 5%	1	R110	0945-00815-0100
.18ohm 5W 5%	1	R101	0945-00815-0200
6.8ohm 1/2W 5%	1	R111	0062-047D3-1XXX
10ohm 5W 5%	1	R104	0945-00812-0100
27ohm 1/4W 5%	1	R105	0062-068B3-1XXX
47ohm 1/4W 5%	1	R114	0062-086B3-1XXX
68ohm 1/2W 5%	3	R102,112,R300	0062-098D3-1XXX
82ohm 1W 10%	1	R216	0062-104F5-1XXX
150ohm 2W 5%	1	R118	0945-00812-0200
160ohm 1/4W 5%	1	R115	0062-124B3-1XXX
270ohm 1/4W 5%	3	R106,201,217.	0062-138B3-1XXX
560ohm 1/4W 5%	1	R117	0062-162B3-1XXX
1K 1/4W 5%	1	R109	0062-179B3-1XXX
1.2K 1/4W 5%	3	R113,202,215	0062-183B3-1XXX
3.9K 1/4W 5%	1	R214	0062-207B3-1XXX
6.2K 1/4W 5%	1	R107	0062-217B3-1XXX
33K 1/4W 5%	1	R207	0062-251B3-1XXX
75K 1/4W 5%	2	R211,212	0062-269B3-1XXX
100K 1/4W 5%	1	R206	0062-275B3-1XXX
220K 1/4W 5%	1	R213	0062-291B3-1XXX
1M 1/4W 5%	1	R209	0062-323B3-1XXX
1.1M 1/4W 5%	1	R203	0062-325B3-1XXX
1.2M 1/4W 5%	1	R210	0062-327B3-1XXX
2M 1/4W 5%	1	R208	0062-337B3-1XXX
3.3M 1/4W 5%	1	R204	0062-347B3-1XXX
10M 1/4W 5%	1	R205	0062-371B3-1XXX
100ohm POT	2	VR101,102	0945-00814-0000
A15F RECTIFIER	5	D101-105	0945-00804-0200
1N4001	3	D106,204,205	0945-00804-0300
1N4148	3	D201-203	0945-00804-0500
2N2905	2	Q102,105	0945-00808-0300
2N4401	1	Q201	0945-00804-0400
LM305 REG.	2	U1,2	0945-00813-0100
LM3900	1	U3	0945-00813-0200
4N28	1	U4	0945-00813-0300
BATTERY 3.6VDC 60DEG-C	1	B101	0017-00003-0377
FUSE 3/8A S-BLO	1	F1	0945-00808-0400
FUSE CLIP	2	FC1A,1B	0017-00003-0214
TIE WRAP	1	TW1	0945-00814-0300
FERRITE BEAD	2	FB1,2	0017-00009-0225
FERRITE MOUNTING HDW.			
.22uH INDUCTOR	1	L101	0017-00033-0139
FUSE TAG	1		M051-00945-A004
SYSTEM TAG	1		M051-00945-A009
P.C.B.	1		A080-90412-B000
HEAT SINK ASS'Y	1	HSA1	A945-00008-0000
(SEE HS ASS'Y DRAWING "X" NOTE)			
4-40 X 10 SLT RND	2	MH HSA 1A, 2A.	0017-00101-00727
4-40 HEX NUT	2	MH HSA 1E, 2E.	0017-00103-0002
WSH 4-120-.250-018	4	MH HSA 1B, 1D	0017-00104-0071
		MH HSA 2B, 2D	


CROSS REFERENCE LIST

DESCRIPTION	Q'ty	DESIGNATION #	PART #
3PIN P.C. MOUNT CONN. (MALE)	1	J6	0017-00021-0443
9PIN P.C. MOUNT CONN.(MALE)	1	J3	0017-00021-0425
15PIN P.C. MOUNT CONN.(FEMALE)	1	J4	0017-00021-0441
15PIN P.C. MOUNT CONN.(MALE)	1	J5	0017-00021-0440
22 AWG T & R BARE 2.5"	5	JW1-5	0151-00087-0000

PROJ. ENG : L. DEKKER

DO NOT SCALE DWG		HEAT TREAT		SCALE		USED ON TRON		NO REQ'D 1PER		MIDWAY MFG. CO.	
DIM TOLERANCES UNLESS SPECIFIED		MATERIAL		ASSEMBLY DRAWING PWR SPLY		PART NO		FRANKLIN PK ILL.		M051-00945-C006	
DECIMAL		FINISH		125VA W/CKT SPRT							
HOLE DIA + .002 000				A082-90412-C000							
DATE 5/4/82											

\* NOTE: THIS RESISTOR MUST BE IN CIRCUIT FOR PROPER OPERATION.

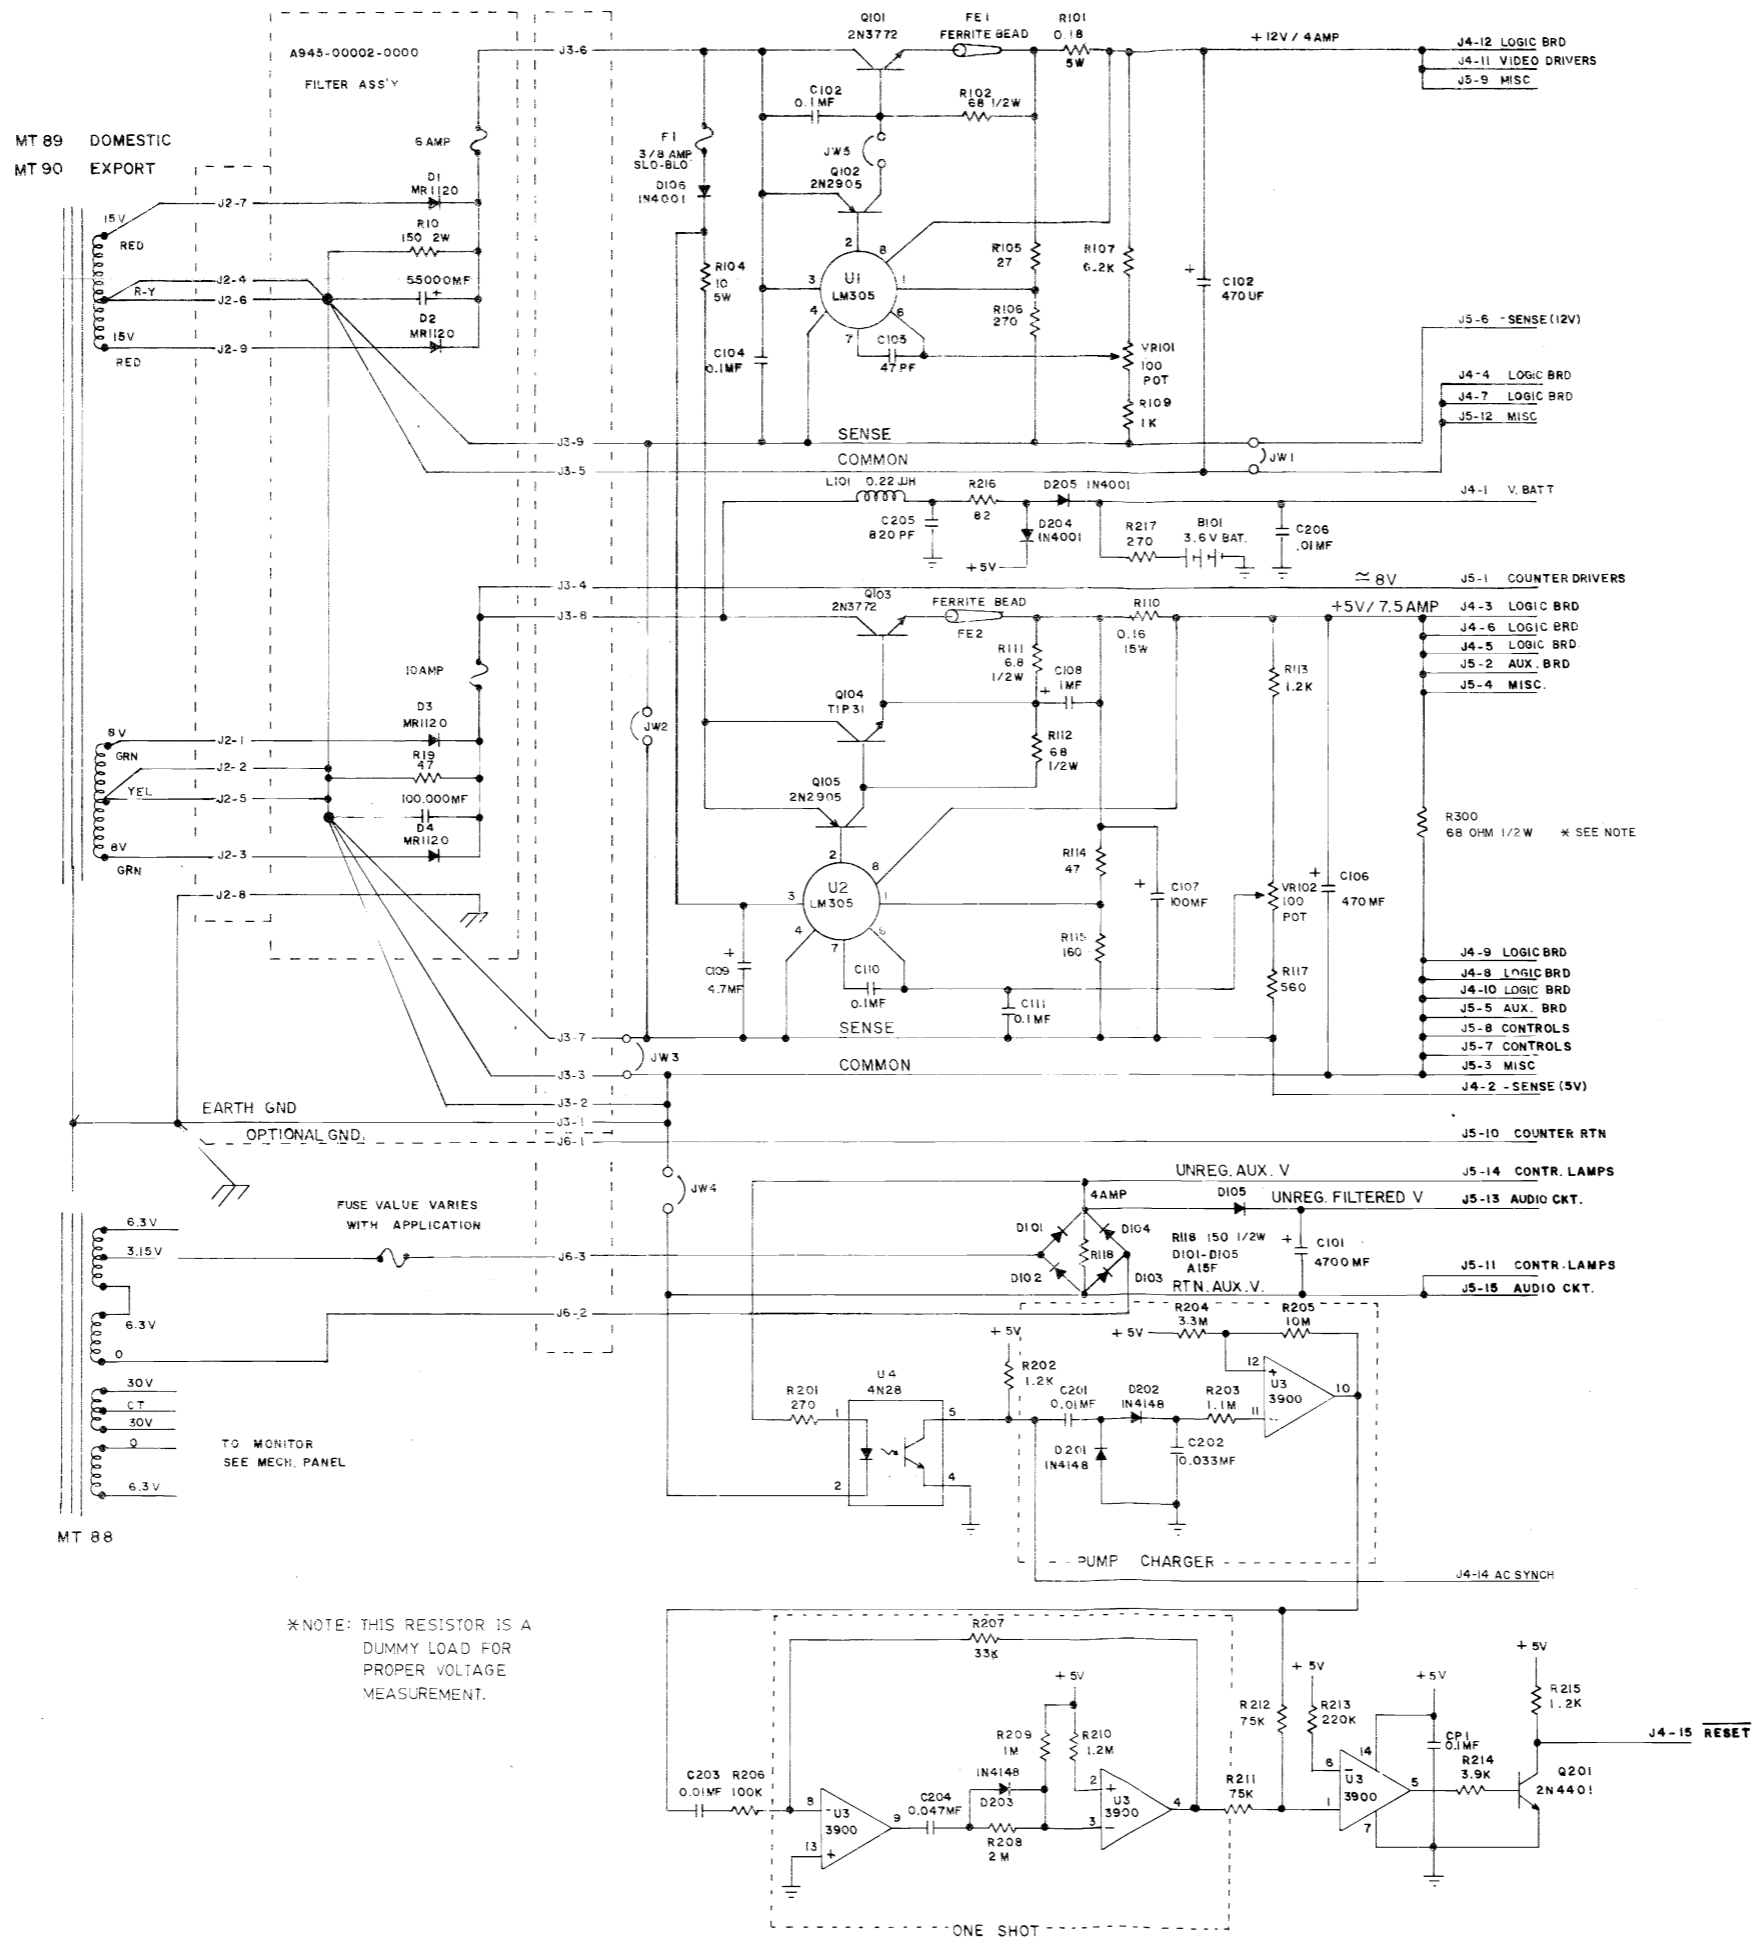


PROJECT ENG. L. DEKKER		USED ON SOLARFOX		MIDWAY MFG. CO.	
DO NOT SCALE DRAWING		FULL		FRANKLIN PK. ILL.	
DIM. TOLERANCES UNLESS SPECIFIED		NO REG. 1 PER.		PART NO.	
DATE 8/17/82		POWER SUPPLY 125VA		M051-00945-C007	
W/CKT SUPPORT		A082-90412-C000			

## DESIGNATION LIST

DESIGNATION	DESCRIPTION
C1,C2	4.7mf 25v rd.tant.
C3,C4	22mf 6v " "
C5,C6	470mf 6v ax.elect.
C7-C10	.1mf 50v ax.cr.
CP1	220mf 25v ax.elect.
CP2,CP3	.1mf 50v ax.cr.
R1,R2	2.7K $\Omega$ 1/4w 5% CRBN.
R3,R4	27 $\Omega$ " " "
R5-R8	1 $\Omega$ 1/2w " "
U1,U2	MB3730
J1	3 PIN STRT.KK156
J2	4 " " " "
HSA1,2	HEATSINK ASSY.
MH1-MH4	HEYCO BUSHING

## CROSS REFERENCE LIST

DESCRIPTION	QTY	DESIGNATION	PART NO.
.1mf 50v ax.cr.	6	C7-C10, CP2,CP3	0986-008001100
4.7mf 25v rd.tant.	2	C1,C2	0986-008003100
22mf 6v " "	2	C3,C4	0986-008001600
220mf 25v ax.elec.	1	CP1	0986-008003200
470mf 6v " "	2	C5,C6	0986-008001700
1 $\Omega$ 1/2w 5%	4	R5-R8	0062-026D3-1XXX
27 $\Omega$ 1/4w " "	2	R3,R4	0062-068B3-1XXX
2.7K " "	2	R1,R2	0062-199B3-1XXX
MB3730	2	U1,U2	0066-188XX-XX4X
2 PIN STRT.KK156	1	J2	3000-16367-0200
3 " " " "	2	J1,J2	3000-16367-0300
4 " " " "	1	J1	3000-16367-0400
HEATSINK ASSY.	2	HSA1, HSA2	0986-00804-1800
HEYCO BUSHING	4	MH1-MH4	0017-00042-0014
PC BOARD	1		A080-90910-D000

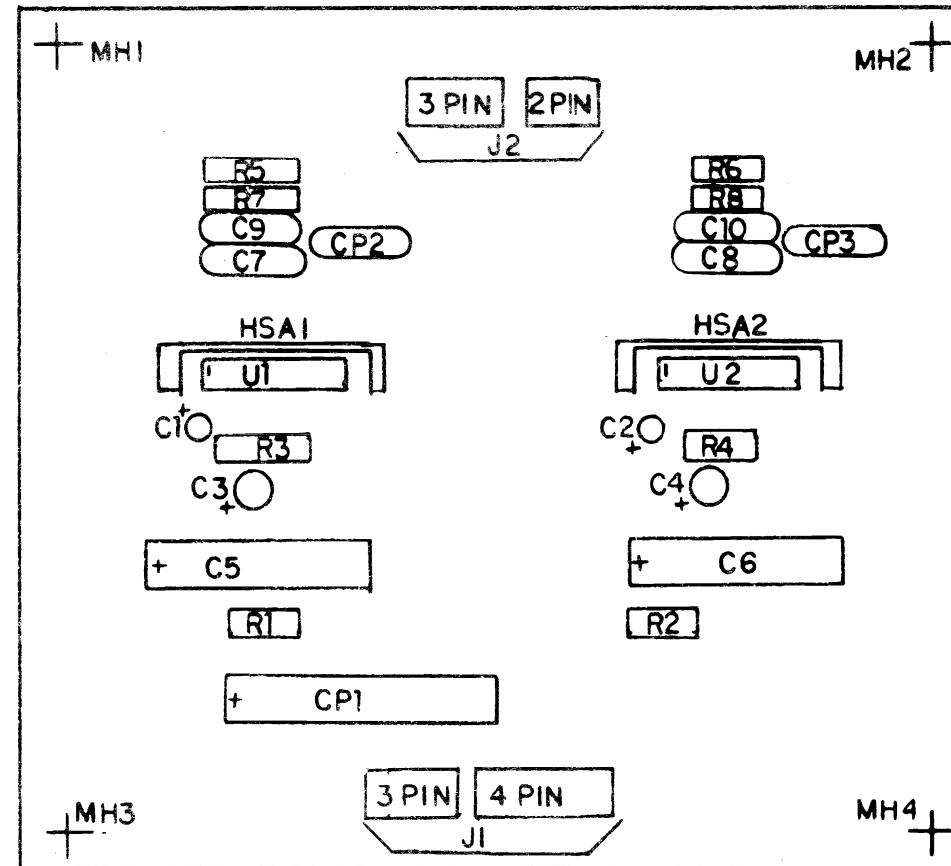

PROJECT ENG. C.MEDNICK


THIS DWG. IS CONFIDENTIAL & PROPERTY OF MIDWAY MFG. CO.

M051-00986-D010

<b>DIM. TOLERANCES</b> UNLESS OTHERWISE SPEC. CONCENTRICITY T.I.R. .002 FRACTIONAL $\pm 1/64$ DECIMAL $\pm .005$ HOLE DIA. $+ .002 - .000$ ANGLE $\pm 1/2^\circ$ DO NOT SCALE DWG	FIRST USED ON <b>KICK</b>	<b>MIDWAY MFG. CO.</b> FRANKLIN PK., IL. 60131 A BALLY CO.	<b>REVISIONS</b> PART NO. <b>M051-00986-D010</b>	
	DRN <b>TJK</b>			DATE <b>12-14-81</b>
	MECH CHK	MAT L		<b>DUAL PWR. AMP. ASSY</b> A082-90910-D000
	ELEC CHK <i>C.M.M.</i>	FINISH		



**J1**

PIN 1 — N.C.  
 " 2 — L. AUDIO  
 " 3 — L. SHIELD  
 " 4 — KEY  
 " 5 — VAUDIO RETURN  
 " 6 — R. AUDIO  
 " 7 — R. SHIELD  
 " 8 — VAUDIO

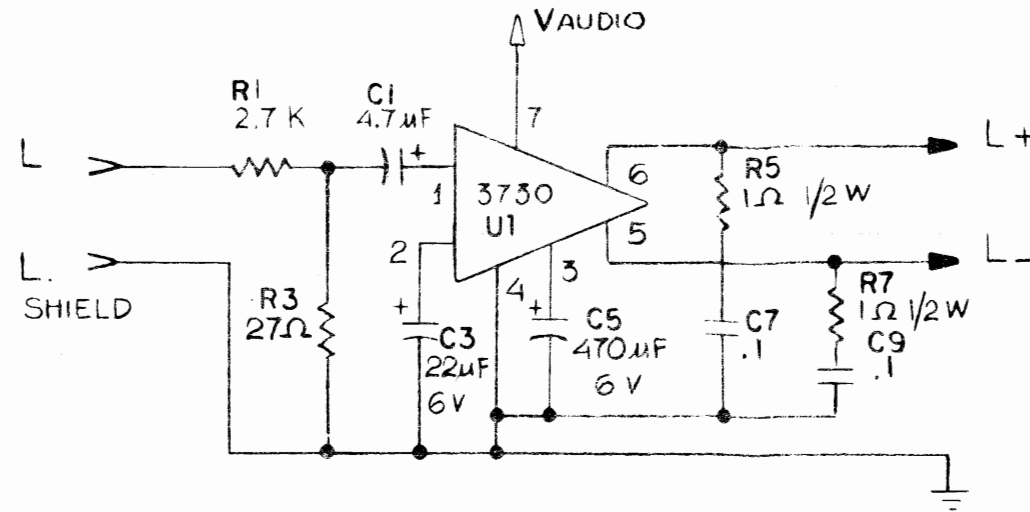

**J2**

PIN 1 — R +  
 " 2 — R -  
 " 3 — KEY  
 " 4 — L +  
 " 5 — N.C.  
 " 6 — L -

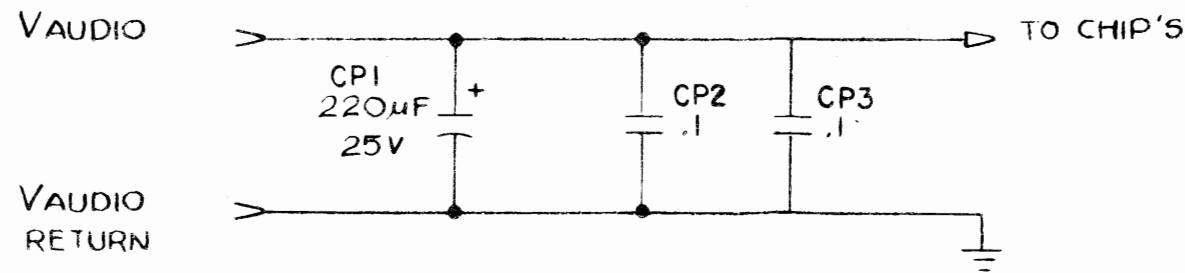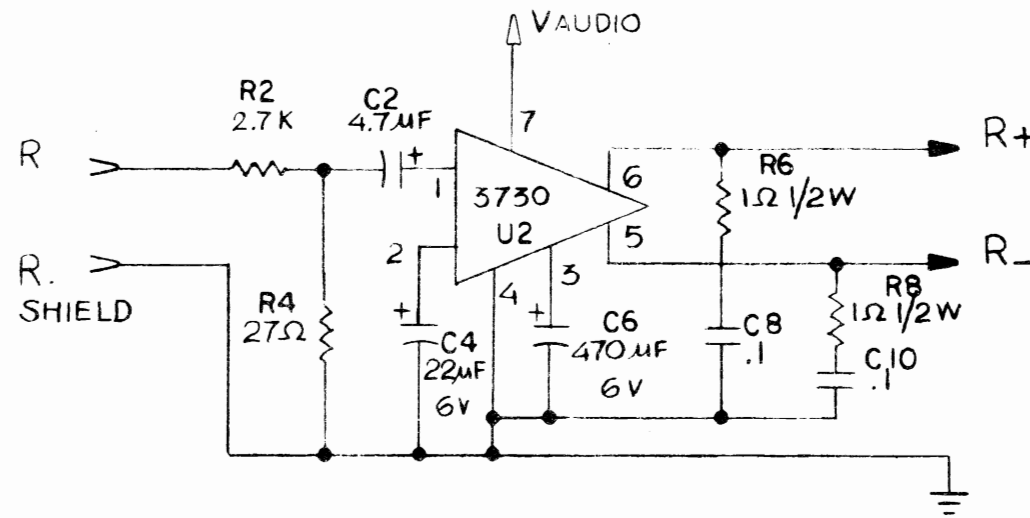

PROJECT ENG. C MEDNICK

THIS DWG. IS CONFIDENTIAL & PROPERTY OF MIDWAY MFG. CO.

<b>DIM. TOLERANCES</b> UNLESS OTHERWISE SPEC. CONCENTRICITY T.I.R. . . . .002 FRACTIONAL . . . . . ± 1/64 DECIMAL . . . . . ± .005 HOLE DIA. . . . . +.002-.000 ANGLE . . . . . ± 1/2° DO NOT SCALE DWG	FIRST USED ON <b>MCR II</b> DRN <b>T.V.T</b> DATE <b>12-14-81</b> SCALE <b>FULL</b>	<b>MIDWAY MFG. CO.</b> FRANKLIN PK., IL. 60131 A BALLY CO.	
	MECH CHK _____ MAT'L _____ ELEC CHK <b>C.M.M.</b> FINISH _____		<b>DUAL PWR AMP</b> <b>A082-90910-D000</b>




- 1 L SWD
- 2 L SWD
- 3 L SWD
- 4 L SWD
- 5 L SWD
- 6 L SWD
- 7 L SWD
- 8 L SWD
- 9 L SWD
- 10 L SWD
- 11 L SWD
- 12 L SWD
- 13 L SWD
- 14 L SWD
- 15 L SWD
- 16 L SWD
- 17 L SWD
- 18 L SWD
- 19 L SWD
- 20 L SWD
- 21 L SWD
- 22 L SWD
- 23 L SWD
- 24 L SWD

- 1 A SWD
- 2 A SWD
- 3 A SWD
- 4 A SWD
- 5 A SWD
- 6 A SWD
- 7 A SWD
- 8 A SWD
- 9 A SWD
- 10 A SWD
- 11 A SWD
- 12 A SWD
- 13 A SWD
- 14 A SWD
- 15 A SWD
- 16 A SWD
- 17 A SWD
- 18 A SWD
- 19 A SWD
- 20 A SWD
- 21 A SWD
- 22 A SWD
- 23 A SWD
- 24 A SWD

- 1 A SWD
- 2 A SWD
- 3 A SWD
- 4 A SWD
- 5 A SWD
- 6 A SWD
- 7 A SWD
- 8 A SWD
- 9 A SWD
- 10 A SWD
- 11 A SWD
- 12 A SWD
- 13 A SWD
- 14 A SWD
- 15 A SWD
- 16 A SWD
- 17 A SWD
- 18 A SWD
- 19 A SWD
- 20 A SWD
- 21 A SWD
- 22 A SWD
- 23 A SWD
- 24 A SWD

- 1 A SWD
- 2 A SWD
- 3 A SWD
- 4 A SWD
- 5 A SWD
- 6 A SWD
- 7 A SWD
- 8 A SWD
- 9 A SWD
- 10 A SWD
- 11 A SWD
- 12 A SWD
- 13 A SWD
- 14 A SWD
- 15 A SWD
- 16 A SWD
- 17 A SWD
- 18 A SWD
- 19 A SWD
- 20 A SWD
- 21 A SWD
- 22 A SWD
- 23 A SWD
- 24 A SWD

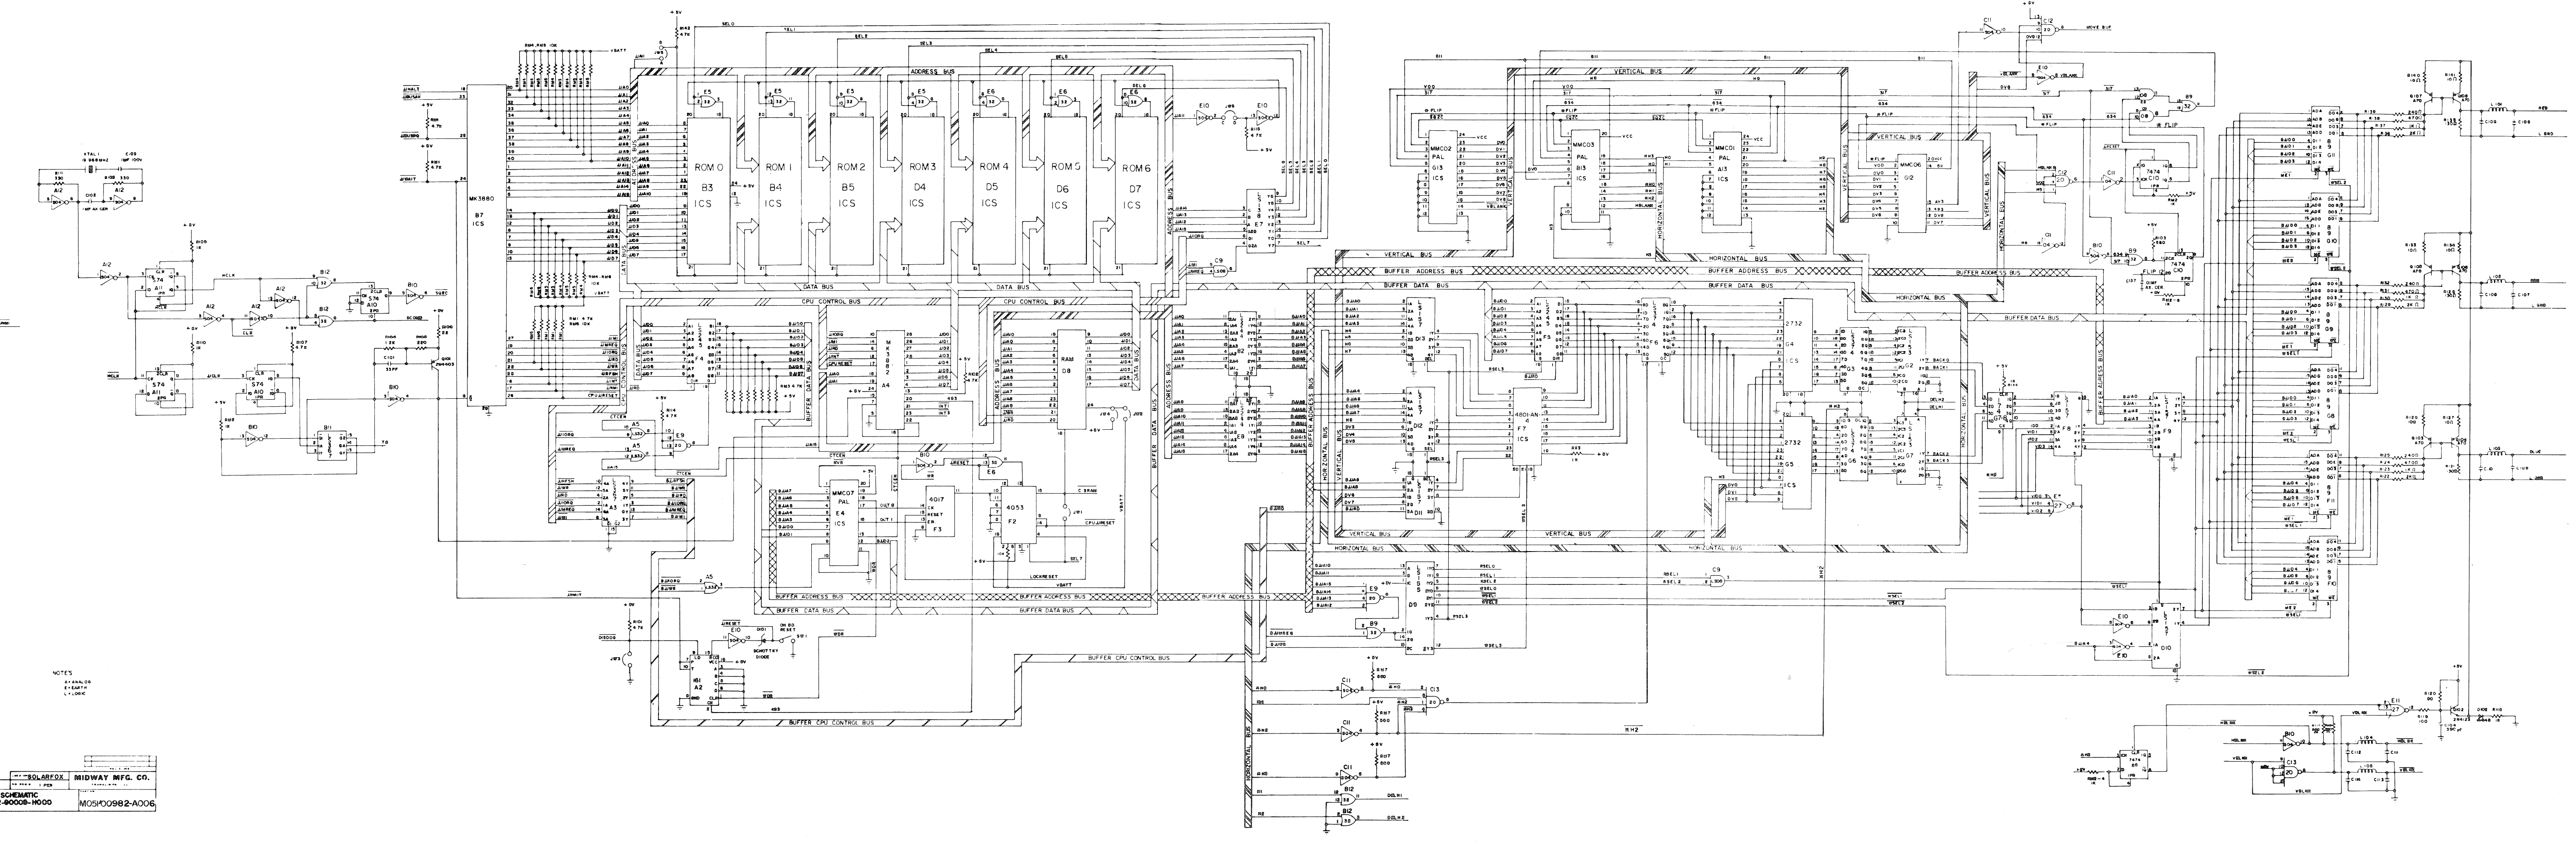

NOTES  
 A ANALOG  
 E EARTH  
 L LOGIC

PROJECT ENG J. GORDON	SOLARFOX	MIDWAY MFG. CO.
CPU SCHEMATIC	MO5100982-A006	


1 L SWD	1 A SWD	1 B SWD
2 L SWD	2 A SWD	2 B SWD
3 L SWD	3 A SWD	3 B SWD
4 L SWD	4 A SWD	4 B SWD
5 L SWD	5 A SWD	5 B SWD
6 L SWD	6 A SWD	6 B SWD
7 L SWD	7 A SWD	7 B SWD
8 L SWD	8 A SWD	8 B SWD
9 L SWD	9 A SWD	9 B SWD
10 L SWD	10 A SWD	10 B SWD
11 L SWD	11 A SWD	11 B SWD
12 L SWD	12 A SWD	12 B SWD
13 L SWD	13 A SWD	13 B SWD
14 L SWD	14 A SWD	14 B SWD
15 L SWD	15 A SWD	15 B SWD
16 L SWD	16 A SWD	16 B SWD
17 L SWD	17 A SWD	17 B SWD
18 L SWD	18 A SWD	18 B SWD
19 L SWD	19 A SWD	19 B SWD
20 L SWD	20 A SWD	20 B SWD
21 L SWD	21 A SWD	21 B SWD
22 L SWD	22 A SWD	22 B SWD
23 L SWD	23 A SWD	23 B SWD
24 L SWD	24 A SWD	24 B SWD

1 L SWD	1 A SWD	1 B SWD
2 L SWD	2 A SWD	2 B SWD
3 L SWD	3 A SWD	3 B SWD
4 L SWD	4 A SWD	4 B SWD
5 L SWD	5 A SWD	5 B SWD
6 L SWD	6 A SWD	6 B SWD
7 L SWD	7 A SWD	7 B SWD
8 L SWD	8 A SWD	8 B SWD
9 L SWD	9 A SWD	9 B SWD
10 L SWD	10 A SWD	10 B SWD
11 L SWD	11 A SWD	11 B SWD
12 L SWD	12 A SWD	12 B SWD
13 L SWD	13 A SWD	13 B SWD
14 L SWD	14 A SWD	14 B SWD
15 L SWD	15 A SWD	15 B SWD
16 L SWD	16 A SWD	16 B SWD
17 L SWD	17 A SWD	17 B SWD
18 L SWD	18 A SWD	18 B SWD
19 L SWD	19 A SWD	19 B SWD
20 L SWD	20 A SWD	20 B SWD
21 L SWD	21 A SWD	21 B SWD
22 L SWD	22 A SWD	22 B SWD
23 L SWD	23 A SWD	23 B SWD
24 L SWD	24 A SWD	24 B SWD

1 L SWD	1 A SWD	1 B SWD
2 L SWD	2 A SWD	2 B SWD
3 L SWD	3 A SWD	3 B SWD
4 L SWD	4 A SWD	4 B SWD
5 L SWD	5 A SWD	5 B SWD
6 L SWD	6 A SWD	6 B SWD
7 L SWD	7 A SWD	7 B SWD
8 L SWD	8 A SWD	8 B SWD
9 L SWD	9 A SWD	9 B SWD
10 L SWD	10 A SWD	10 B SWD
11 L SWD	11 A SWD	11 B SWD
12 L SWD	12 A SWD	12 B SWD
13 L SWD	13 A SWD	13 B SWD
14 L SWD	14 A SWD	14 B SWD
15 L SWD	15 A SWD	15 B SWD
16 L SWD	16 A SWD	16 B SWD
17 L SWD	17 A SWD	17 B SWD
18 L SWD	18 A SWD	18 B SWD
19 L SWD	19 A SWD	19 B SWD
20 L SWD	20 A SWD	20 B SWD
21 L SWD	21 A SWD	21 B SWD
22 L SWD	22 A SWD	22 B SWD
23 L SWD	23 A SWD	23 B SWD
24 L SWD	24 A SWD	24 B SWD

1 L SWD	1 A SWD	1 B SWD
2 L SWD	2 A SWD	2 B SWD
3 L SWD	3 A SWD	3 B SWD
4 L SWD	4 A SWD	4 B SWD
5 L SWD	5 A SWD	5 B SWD
6 L SWD	6 A SWD	6 B SWD
7 L SWD	7 A SWD	7 B SWD
8 L SWD	8 A SWD	8 B SWD
9 L SWD	9 A SWD	9 B SWD
10 L SWD	10 A SWD	10 B SWD
11 L SWD	11 A SWD	11 B SWD
12 L SWD	12 A SWD	12 B SWD
13 L SWD	13 A SWD	13 B SWD
14 L SWD	14 A SWD	14 B SWD
15 L SWD	15 A SWD	15 B SWD
16 L SWD	16 A SWD	16 B SWD
17 L SWD	17 A SWD	17 B SWD
18 L SWD	18 A SWD	18 B SWD
19 L SWD	19 A SWD	19 B SWD
20 L SWD	20 A SWD	20 B SWD
21 L SWD	21 A SWD	21 B SWD
22 L SWD	22 A SWD	22 B SWD
23 L SWD	23 A SWD	23 B SWD
24 L SWD	24 A SWD	24 B SWD


DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION
CI, 2	100 $\mu$ f	IC A 1	EPROM	IC H 1	74 LS 86
	AX. ELECT	IC A 2	74 LS157	IC H 2	74174
CP1-3, 5-10	.01 $\mu$ f AX. CER.	IC A 3	74 LS157	IC H 3	74 S 74
CP12-20, 22-27,		IC A 4	74 LS157	IC H 4	74175
CP29-33, 35, 36,		IC A 5	74 LS157	IC H 5	74174
CP38-41, 43-47,		IC A 6	74 LS157	IC H 6	74 LS157
CP49-54, 56-61,		IC A 7	74 LS157		
CP63-67, 69-71.		IC B 1	EPROM	IC J 2	74 LS 30
CP4, 11, 21, 28, 34,	10 $\mu$ f 25V AX. TANT.	IC B 2	74 LS194	IC J 3	7430
CP37, 42, 48, 55,		IC B 3	74 LS194	IC J 4	74 LS273
CP62, 68.		IC B 4	74 LS32	IC J 5	422
RI01-119, 201, 202,	1 K 1/4W 5%	IC B 5	422	IC J 6	74 LS157
RM1, 2	8PIN 1K SIP	IC B 6	422		
RM 3	10PIN 1K SIP	IC B 7	74LS32		
		IC C 1	EPROM	IC K 1	74161
		IC C 2	74 LS194	IC K 2	7430
		IC C 3	74 LS194	IC K 3	7474
		IC C 4	74 LS32	IC K 4	74161
		IC C 5	422	IC K 5	422
		IC C 6	422	IC K 6	2114-2
		IC C 7	74 LS32		
		IC D 1	EPROM	IC L 1	74 LS 20
		IC D 2	74 LS194	IC L 2	7408
		IC D 3	74 LS194	IC L 3	7474
		IC D 4	74 LS273	IC L 4	74 LS283
		IC D 5	74 LS157	IC L 5	422
		IC D 6	74 LS157	IC L 6	2114-2
		IC D 7	74 LS273	IC L 7	74 LS157
		IC E 2	74 LS194	IC M 1	7430
		IC E 3	74 LS194	IC M 2	7432
		IC E 4	74 LS374	IC M 3	74 S 74
		IC E 5	74 LS157	IC M 4	74161
		IC E 6	74 LS157	IC M 5	422
				IC M 7	74 LS157
		IC F 2	7400	IC N 1	7430
		IC F 3	74 S04	IC N 2	7427
		IC F 4	74 LS374	IC N 3	74 LS273
		IC F 5	74 LS157	IC N 4	74 LS283
		IC F 6	74 LS157	IC N 5	74 LS245
				IC N 6	7404
		IC G 1	74 LS 86	IC N 7	74 LS157
		IC G 2	74 LS 20		
		IC G 3	74 LS 283	ICS A1, B1, C1, D1.	28PIN IC SOCKET
		IC G 4	74 LS 283	ICS B5, 6, C5, 6,	22PIN IC SOCKET
		IC G 5	74 LS 283	J5, K5, L5, M5.	
		IC G 6	74 LS157	ICS K6, L6.	18PIN IC SOCKET
				J3, 4, 5	24 PIN SOCKET
				JW1-8	JUMPER WIRE
				BB1, 2	BUSS BAR

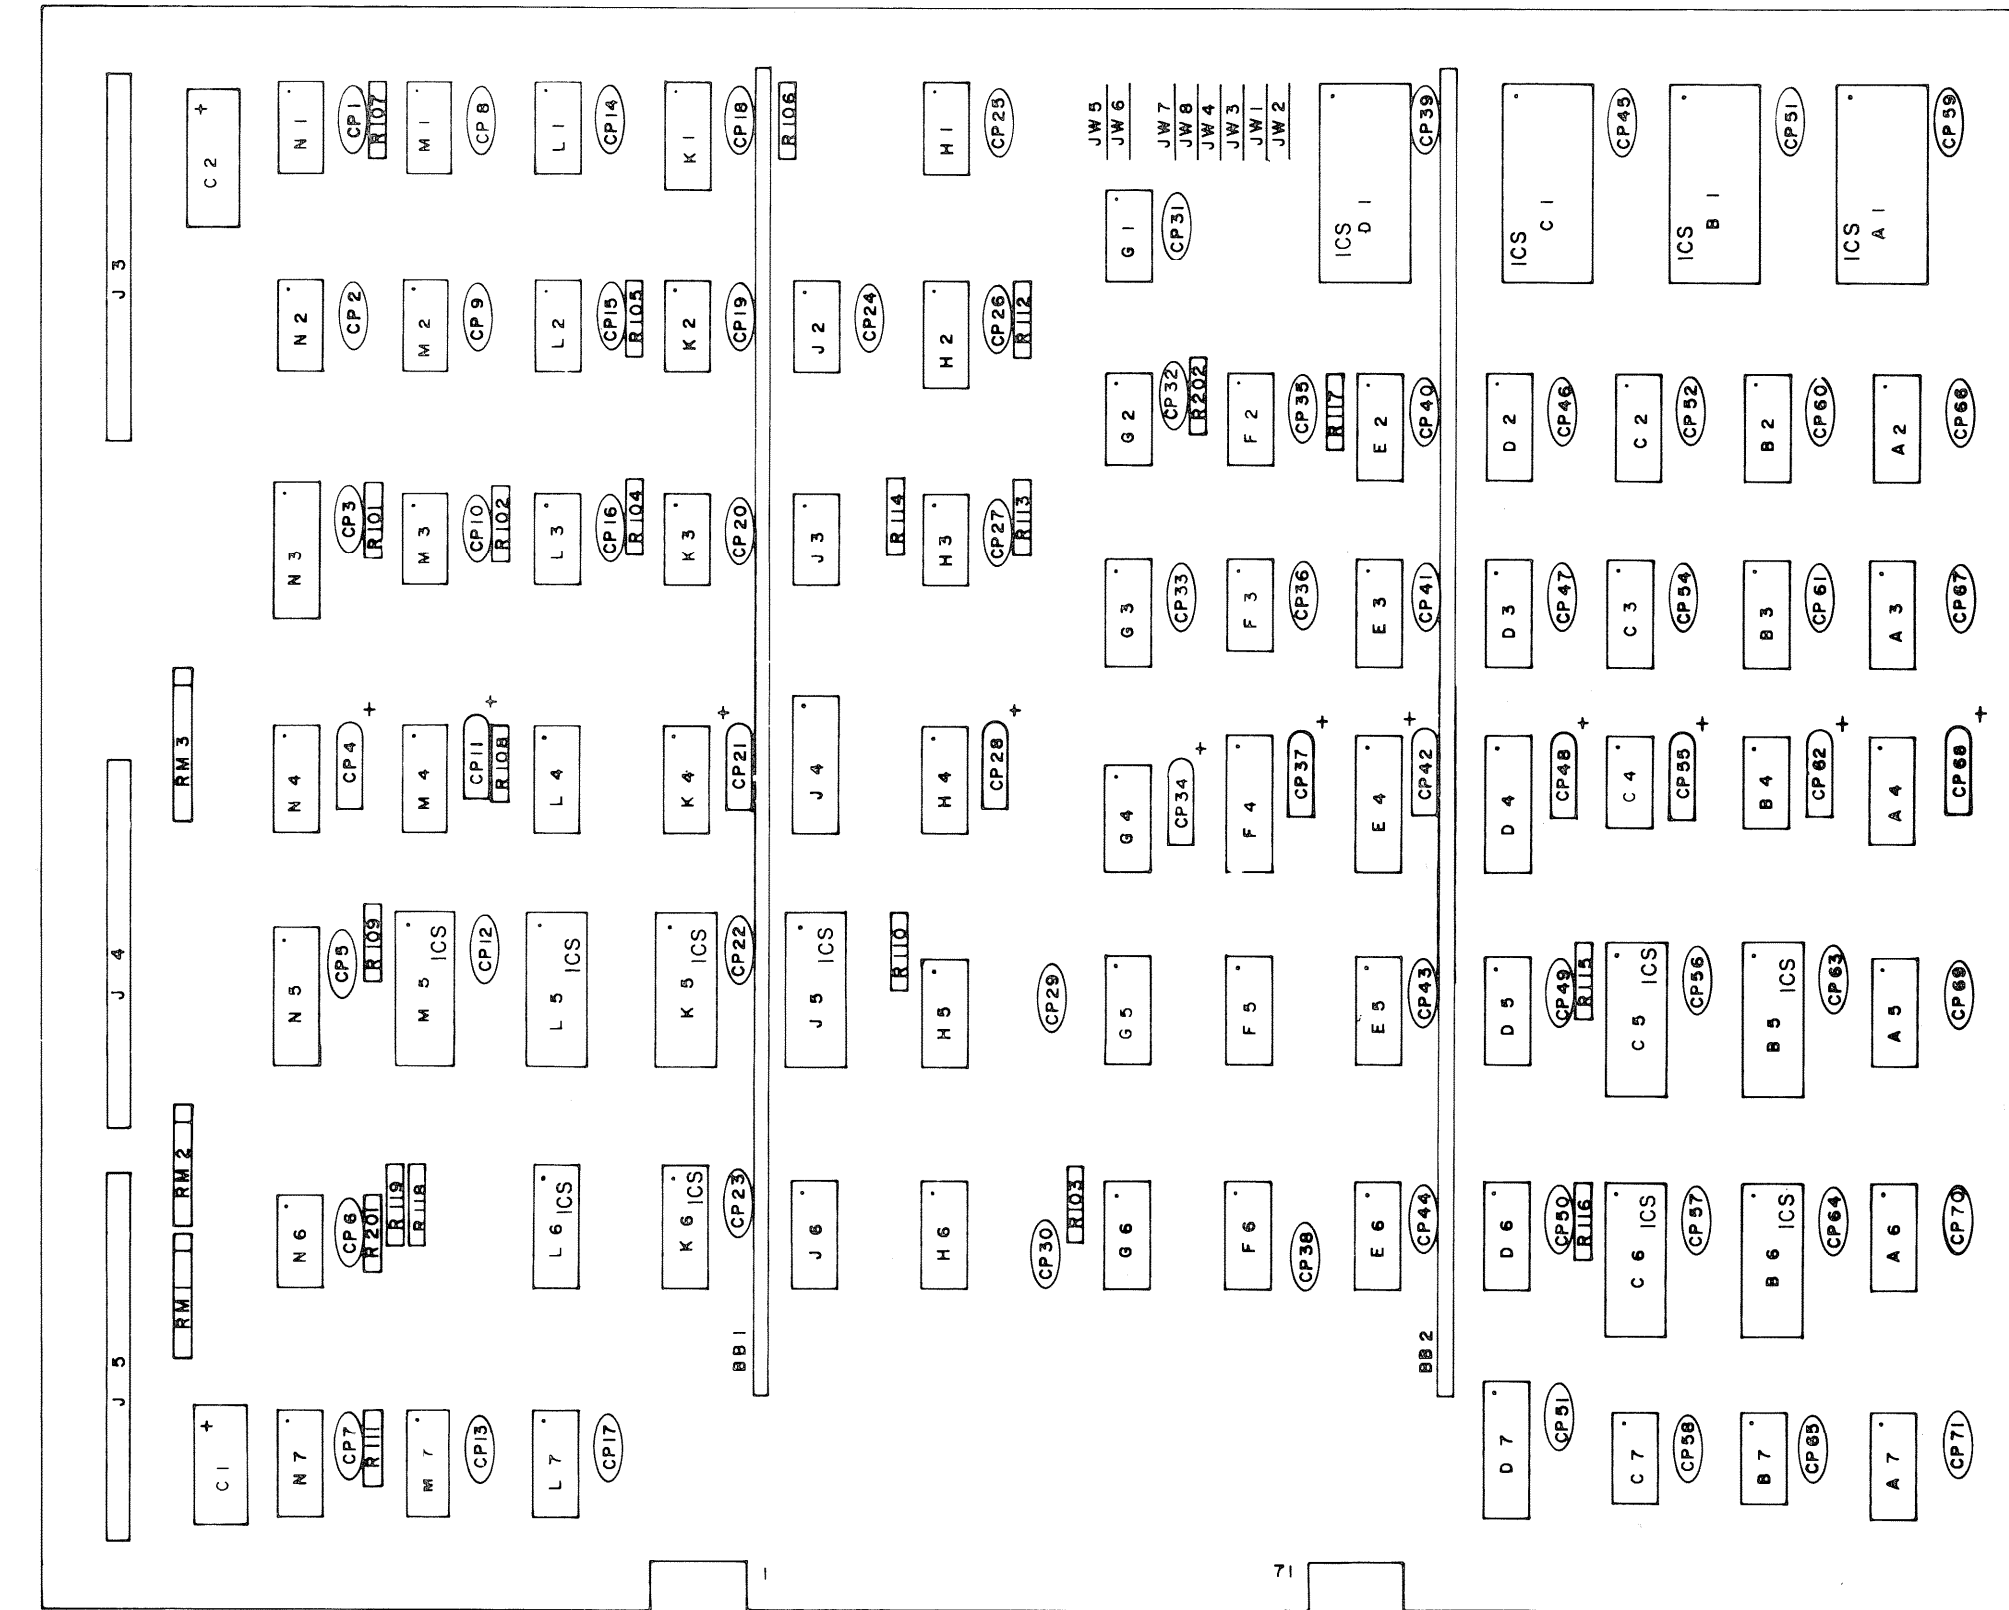

Q'TY	DESCRIPTION	DESIGNATION	PART NO.
60	.01 $\mu$ f 50V AX. CER.	CP1-3, CP5-10, CP12-20, CP22-27, CP29-33, CP35, 36, CP38-41, CP43-47, CP49-54, CP56-61, CP63-67, CP69-71.	0986-00800-2500
11	10 $\mu$ f 25 V AX. TANT.	CP4, 11, 21, 28, 34, 37, CP42, 48, 55, 62, 68.	0986-00800-2400
2	100 $\mu$ f 25 V AX. ELECT.	CI, 2.	0986-00800-1800
21	1 K 1/4 W CRBN. FLM.	RI01-119, 201, 202.	0062-17983-1XXX
2	1 K 8 PIN SIP	RM1, 2.	0986-00804-1100
1	1 K 10 PIN SIP	RM3	0986-00804-1000
2	2114-2	K6, L6.	0986-00803-2300
1	7400	F2	0986-00803-2800
1	7404	N6	0986-00803-8300
1	74S04	F3	0986-00803-3100
1	7408	L2	0986-00803-3200
2	74LS20	G2, L1	0986-00803-3400
1	7427	N2	0986-00803-3500
4	7430	J3, K2, M1, N1	0986-00803-3600
1	74LS30	J2	0986-00803-4300
1	7432	M2	0986-00803-4400
4	74LS32	B4, 7, C4, 7,	0986-00803-3700
2	7474	K3, L3	0986-00803-4500
2	74S74	H3, M3	0986-00803-4100
2	74LS86	G1, H1	0986-00803-4200
18	74LS157	A2, 3, 4, 5, 6, 7, D5, 6, E5, 6, F5, 6, G6, H6, J6, L7, M7, N7.	0986-00803-2400
3	74161	K1, K4, M4.	0986-00803-2500
2	74174	H2, 5	0986-00803-2600
1	74175	H4	0986-00803-2700
8	74LS194	B2, 3, C2, 3, D2, 3, E2, 3.	0986-00803-2900
1	74LS245	N5	0986-00803-3000
4	74LS273	D4, 7, J4, N3	0986-00803-3800
5	74LS283	G3, 4, 5, L4, N4,	0986-00803-3900
2	74LS374	E4, F4	0986-00803-4000
8	93422	B5, 6, C5, 6, J5, K5, L5, M5	0986-00804-0800
1	EPROM	A1 (VGA)	OPTION KIT: COCKTAILS, MINIS 0580-00803-0100 OPT. KIT: UPRIGHTS 0982-00803-2000
1	EPROM	B1 (VGB)	
1	EPROM	C1 (VGC)	
1	EPROM	D1 (VGD)	
8	JUMPER WIRE	JW1-8	0986-00805-0200
2	BUSS BAR	BB1, 2	0986-00804-0900
1	P.C. BOARD		A080-91399-E000
3	24 PIN SOCKET	J3, 4, 5	0986-00804-4700
4	28 PIN SOCKET	ICS A1, B1, C1, D1	0986-00804-0300
8	22 PIN SOCKET	ICS B5, 6, C5, 6, J5, K5, L5, M5	0986-00804-0700
2	18 PIN SOCKET	ICS K6, L6	0986-00804-0600

PROJ. ENG. ATISH GHOSH

DO NOT SCALE DWG		DATE: 4/22/82	SCALE: A6	NO. REQ'D: 1 PER	REVISIONS
DIM. TOLERANCES UNLESS SPECIFIED:		OWN: [Signature]	MAT'L: [Blank]	USED ON SOLAR FOX	
FINISH: [Blank]		ASS'Y DRAWING VIDEO GENERATOR P.C.		MIDWAY MFG. CO.	
MIDWAY MFG. CO. + 002 000		A082-91399-F000		FRANKLIN PK ILL	
		PART NO. M051-00982-A007			

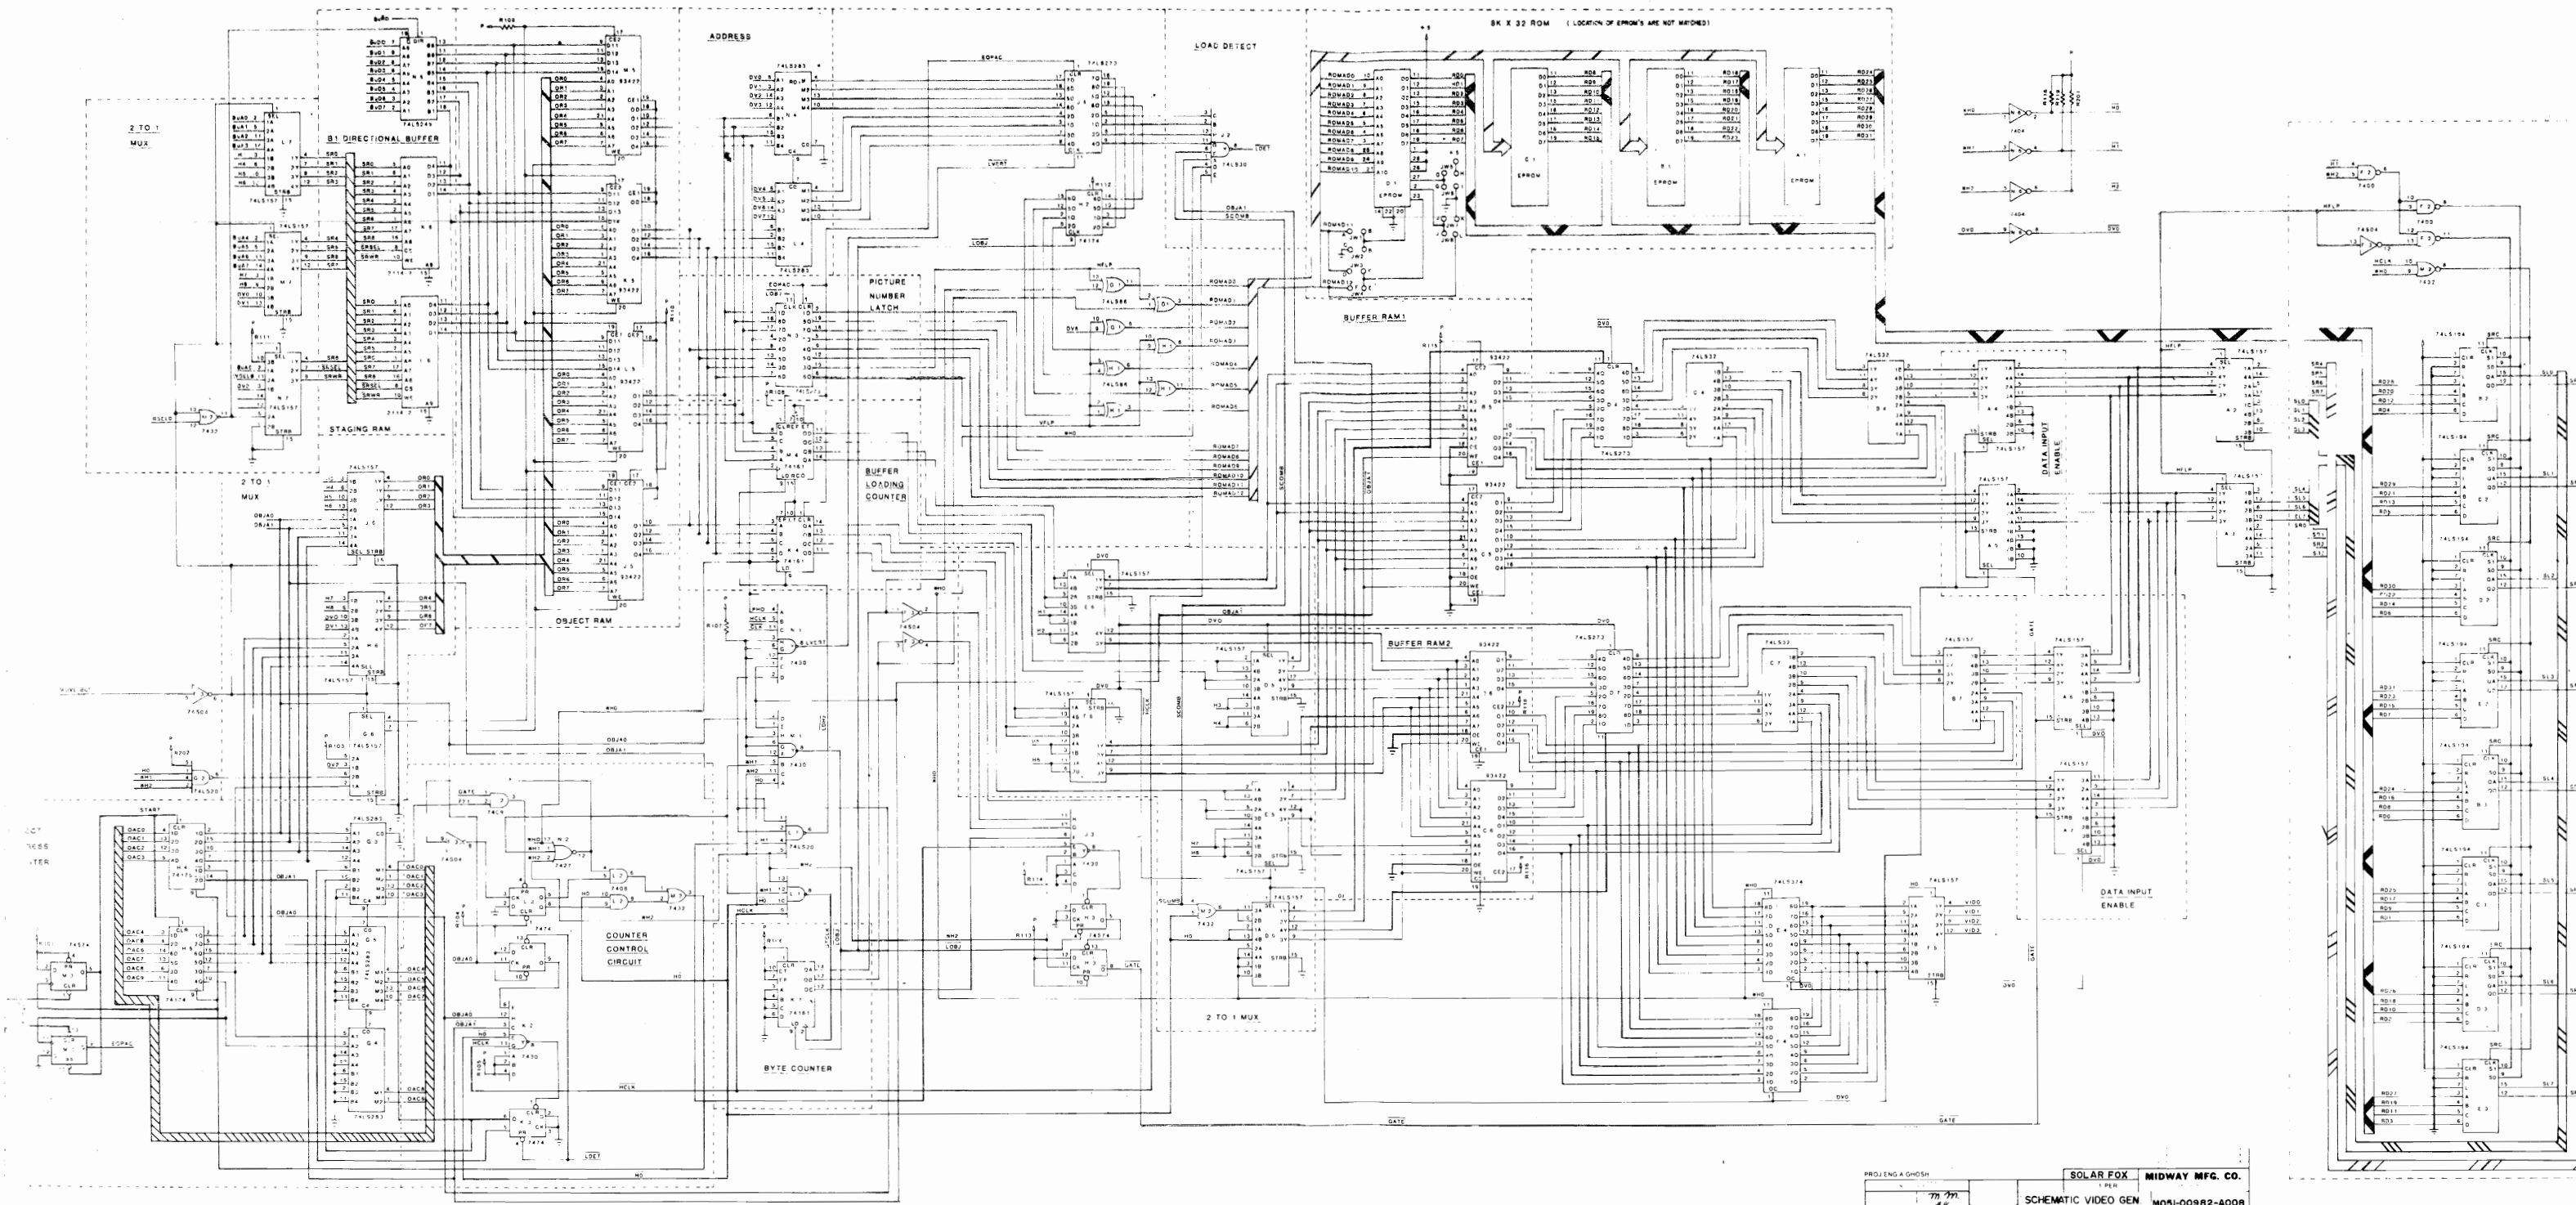

PROJ ENG A GHOSH  
 7/7/77  
 08/24/77  
 SOLAR FOX  
 1 PER  
 SCHEMATIC VIDEO GEN  
 A082-91399-FO00  
 MIDWAY MFG. CO.  
 M051-00982-A008

33 PIN TEST CONN (LEADS)

1	NC
2	5V
3	5V
4	5V
5	NOT USED
6	5V
7	5V
8	5V
9	5V
10	5V
11	5V
12	5V
13	5V
14	5V
15	5V
16	5V
17	5V
18	5V
19	5V
20	5V
21	5V
22	5V
23	5V
24	5V
25	5V
26	5V
27	5V
28	5V
29	5V
30	5V
31	5V
32	5V
33	5V

3. 124 PIN MINICABLE

1	5V
2	5V
3	5V
4	5V
5	5V
6	5V
7	5V
8	5V
9	5V
10	5V
11	5V
12	5V
13	5V
14	5V
15	5V
16	5V
17	5V
18	5V
19	5V
20	5V
21	5V
22	5V
23	5V
24	5V

4. 124 PIN RIBBON CABLE

1	5V
2	5V
3	5V
4	5V
5	5V
6	5V
7	5V
8	5V
9	5V
10	5V
11	5V
12	5V
13	5V
14	5V
15	5V
16	5V
17	5V
18	5V
19	5V
20	5V
21	5V
22	5V
23	5V
24	5V

5. 124 PIN RIBBON CABLE

1	5V
2	5V
3	5V
4	5V
5	5V
6	5V
7	5V
8	5V
9	5V
10	5V
11	5V
12	5V
13	5V
14	5V
15	5V
16	5V
17	5V
18	5V
19	5V
20	5V
21	5V
22	5V
23	5V
24	5V

CROSS REFERENCE LIST

DESCRIPTION	QUANTITY	DESIGNATION	PART NO.
33 PF 50V 5% AX CER	1	C144	0986-00800-0800
47 PF 50V AX CER	2	C126, C129	0986-00800-2800
220 PF 50V AX CER	1	C130	0986-00800-2800
100 PF 50V 5% AX CER	1	C142	0986-00800-1000
330 PF 50V AX CER	2	C161, C165	0986-00800-1300
0022 MF 100V 10% MYLAR	12	C145-C156	0986-00800-1200
047 MF 100V MYLAR	1	C139	0986-00800-2600
01 MF 50V AX CER	49	CP2-CP12, CP14-CP33, CP35-CP46, CP48-CP51, C140, C141, C173	0986-00800-2000
1 MF 50V AX CER	17	C112-127, C143	0986-00800-1100
1 MF 20V AX TANT	8	C157-159, C162-C164, C134, C137	0986-00800-1400
10 MF 25V AX TANT	16	CP34, CP52, CP53, CP201-CP204, C101-C103, C131, C138, C172, C66, C68, C72	0986-00800-0700
470 MF 16V AX ELECT	4	CP1, CP13, CP47, CP54	0196 00800-2700
22 OHM 1/4W	1	R164	0062-063B3-1XXX
100 OHM II	1	R239	0062-110B3-1XXX
220 OHM 1/4W	17	R116-131, R162	0062-133B3-1XXX
300 OHM II	1	R231	0062-141B3-1XXX
330 OHM II	2	R160-R161	0062-144B3-1XXX
1 K II	3	R153, R227, R401	0062-178B3-1XXX
1.2 K II	3	R157, R158, R163	0062-183B3-1XXX
2.7 K II	6	R301-R306	0062-199B3-1XXX
3 K II	1	R233	0062-201B3-1XXX
4.7 K II	17	R101-R107, R165-166, R225-226, R228, R232, R234, R235, R402, R405	0062-211B3-1XXX
5.6 K II	12	R173-R178, R197-R202	0062-215B3-1XXX
10 K II	4	R155, R156, R146, R151	0062-227B3-1XXX
13 K II	6	R209-R211, R220-R222	0062-233B3-1XXX
24 K II	2	R179, R196	0062-245B3-1XXX
27 K II	2	R217, R224	0062-247B3-1XXX
33 K II	13	R190, R203-R208, R214-R219	0062-251B3-1XXX
100K II	2	R142, R148	0062-275B3-1XXX
100K II	2	R150, R141	0062-287B3-1XXX
510K II	4	R144, R145, R149, R150	0062-313B3-1XXX
1 MEG II	2	R152, R154	0062-323B3-1XXX
820 OHM 8 PIN SIP	1	RM8	0986-00805-0800
1.8 K 10 PIN SIP	1	RM9	0986-00805-0600
2.7 K 10 PIN SIP	2	RM4, RM5	0986-00805-0500
4.7 K 8 PIN SIP	1	RM7	0986-00805-0400
4.7 K 10 PIN SIP	2	RM1, RM14	0986-00805-0300
1N4148	6	D101-D103, D105-D107	0986-00801-0200
2N4403	1	Q104	0986-00802-0500
TIP 110	3	Q101-Q103	0986-00802-0400
74LS02	1	D6	0986-00803-7400
74LS04	1	C11	0986-00803-6900
74S04	1	F12	0986-00803-6600
7406	1	A1	0986-00803-7800
7407	1	C6	0986-00803-5900
74LS08	1	A13	0986-00803-7300
7427	1	C13	0986-00803-7200
74LS32	1	B10	0986-00803-6100
7474	1	F11	0986-00803-6700
74126	1	E12	0986-00803-6800
74LS138	4	B12-B13, B7-B8	0986-00803-6500
74160	1	D11	0986-00803-5200
74161	1	E11	0986-00803-5100
74166	1	D13	0986-00803-5300
74LS174	1	B14	0986-00803-7500
74LS191	6	F3-F5, F8-F10	0986-00803-5600
74LS244	3	F4, E2, F2	0986-00803-4800
74LS245	1	A11	0986-00803-6400
74LS273	1	A4	0986-00803-4700
74LS367	1	C14	0986-00803-7000
74LS374	1	A5	0986-00803-4600
74LS670	2	B9, B11	0986-00803-6300
AY-3-8910	2	F6-F7	0986-00803-8500
LM3900	1	D3	0986-00803-4900
MC3403	2	C10, E10	0986-00803-5000
MC14016	3	D7-D9	0986-00803-6200
MC14024	1	C12	0986-00803-7100
PROM SB2-A	1	D12	0986-00803-8200
RAM 1K X 8 SUB	1	A6	0986-00803-8000
ROM/EPROM 0	1	A7	
II 1	1	A8	
II 2	1	A9	
II 3	1	A10	
Z-80 (3880)	1	A12	0986-00803-5500
16 PIN IC SOCKET	1	ICSD12	0986-00804-1400
24 PIN II II	5	ICSA6-ICSA10	0986-00804-1600
40 PIN II II	3	ICSA12, ICSF6, ICSF7	0986-00804-1500
3 PIN KK-100 RT. ANGEL	1	J3	3000-16366-0300
4 PIN II II	1	J5	3000-16366-0400
5 PIN II II	2	J5, J4	3000-16366-0500
13 PIN II II	1	J4	3000-16366-1300
18 PIN II II	1	J5	3000-16366-1800
4 PIN CONN KK-100 (SIP)	2	J1, J2	0986-00804-1300
20 PIN II II	2	J1, J2	0986-00804-1200
JUMPER WIRE	2	JW1, JW2	0986-00804-4000
YELLOW LED	1	LED 3	0986-00804-2000
SNAP'S	3	MHQ101-MHQ103	6017-00007-0134
8 POSITION DIP SW	1	SW3	0986-00805-0900
10 POSITION DIP SW	1	SW1	0986-00805-1000
P.B. SW	1	SW4	0986-00804-1700
16 MHZ CRYSTAL W/ORD LEAD	1	XTAL1	0986-00805-1100

DESIGNATION LIST

DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION
C101, C103	10 MF 25V AX TANT	D101, D103, D105, 107	1N4148
C102, C107	1 MF 50V AX CER	Q101, Q103	TIP 110
C108, C109	47 PF 50V AX CER	Q104	2N4403
C110	220 PF " " "		
C111	10 MF 25V AX TANT	IC 1A	7406
C116, C117	1 MF 20V AX TANT	4A	74LS273
C136	10 MF 25V AX TANT	1A	74LS374
C139	047 MF 100V MYLAR	1A	1K88 RAM
C140, C141	01 MF 50V AX CER	1A	ROM/EPROM 0
C142	100 PF 50V AX CER	HA	" = 1
C143	1 MF 50V AX CER	HA	" = 2
C144	13 PF 50V AX CER	10A	" = 3
C145, C156	0022 MF 100V 10% MYLAR	11A	74LS245
C157, C158	1 MF 20V AX TANT	12A	Z 80 CPU
C161	330 PF 50V AX CER	11A	74LS248
C162, C164	1 MF 20V AX TANT	4E	74LS244
C165	330 PF 50V AX CER	1B	74LS138
C166, C167, C172	10 MF 25V AX TANT	HB	"
C173	01 MF 50V AX CER	HB	74LS670
CP1	470 MF 16V AX ELECT	10B	74LS32
CP2-CP12	01 MF 50V AX CER	11B	74LS670
CP13	470 MF 16V AX ELECT	10B	74LS138
CP14-CP33	01 MF 50V AX CER	11B	"
CP34	10 MF 25V AX TANT	14B	74LS174
CP35-CP46	01 MF 50V AX CER	1C	7407
CP47	470 MF 16V AX ELECT	10C	MC1403
CP48-CP51	01 MF 50V AX CER	11C	74LS04
CP52-CP53	10 MF 25V AX TANT	12C	MC14024
CP54	470 MF 16V AX ELECT	11C	7407
CP55	10 MF 25V AX TANT	14C	74LS367
CP56	47 K 1/4W 5% CARBON	1D	LM3900
D101, R107	1.8 K	1D	74LS02
D102, R133	220 OHM	1D	MC14016
D103	3.3 K	1D	"
D104, R141	180 K	1D	"
D105	100 K	1D	"
D106, R145	510K	1D	"
D107	10 K	1D	"
D108	100 K	1D	"
D109, R150	510K	1D	"
D110	10 K	1D	"
D111	1 MEG	1D	"
D112	1 K	1D	"
D113	1 MEG	1D	"
D114	10 K	1D	"
D115, R156	12 K	1D	"
D116, R158	12 K	1D	"
D117, R161	140 OHM	1D	"
D118	220 OHM	1D	"
D119	12 K	1D	"
D120	20 OHM	1D	"
D121, R166	4.7 K	1D	"
D122, R178	56 K	1D	"
D123, R186	24 K	1D	"
D124, R202	5.6K	1D	"
D125, R208	33K	1D	"
D126, R211	18 K	1D	"
D127	27K	1D	"
D128, R215	39K	1D	"
D129, R222	18K	1D	"
D130	27K	1D	"
D131, R226	4.7K	1D	"
D132	1K	1D	"
D133	4.7K	1D	"
D134, R235	3K	1D	"
D135	4.7K	1D	"
D136, R306	100 OHM	1D	"
D137	2.7K	1D	"
D138	1K	1D	"
D139, R403	4.7K	1D	"
D140	4.7K	1D	"
D141, R404	4.7K	1D	"
D142	4.7K	1D	"
D143, R405	4.7K	1D	"
D144	4.7K	1D	"
D145, R406	4.7K	1D	"
D146	4.7K	1D	"
D147, R407	4.7K	1D	"
D148	4.7K	1D	"
D149	4.7K	1D	"
D150	4.7K	1D	"
D151	4.7K	1D	"
D152	4.7K	1D	"
D153	4.7K	1D	"
D154	4.7K	1D	"
D155	4.7K	1D	"
D156	4.7K	1D	"
D157	4.7K	1D	"
D158	4.7K	1D	"
D159	4.7K	1D	"
D160	4.7K	1D	"
D161	4.7K	1D	"
D162	4.7K	1D	"
D163	4.7K	1D	"
D164	4.7K	1D	"
D165	4.7K	1D	"
D166	4.7K	1D	"
D167	4.7K	1D	"
D168	4.7K	1D	"
D169	4.7K	1D	"
D170	4.7K	1D	"
D171	4.7K	1D	"
D172	4.7K	1D	"
D173	4.7K	1D	"
D174	4.7K	1D	"
D175	4.7K	1D	"
D176	4.7K	1D	"
D177	4.7K	1D	"
D178	4.7K	1D	"
D179	4.7K	1D	"
D180	4.7K	1D	"
D181	4.7K	1D	"
D182	4.7K	1D	"
D183	4.7K	1D	"
D184	4.7K	1D	"
D185	4.7K	1D	"
D186	4.7K	1D	"
D187	4.7K	1D	"
D188	4.7K	1D	"
D189	4.7K	1D	"
D190	4.7K	1D	"
D191	4.7K	1D	"
D192	4.7K	1D	"
D193	4.7K	1D	"
D194	4.7K	1D	"
D195	4.7K	1D	"
D196	4.7K	1D	"
D197	4.7K	1D	"
D198	4.7K	1D	"
D199	4.7K	1D	"
D200	4.7K	1D	"
D201	4.7K	1D	"
D202	4.7K	1D	"
D203	4.7K	1D	"
D204	4.7K	1D	"
D205	4.7K	1D	"
D206	4.7K	1D	"
D207	4.7K	1D	"
D208	4.7K	1D	"
D209	4.7K	1D	"
D210	4.7K	1D	"
D211	4.7K	1D	"
D212	4.7K	1D	"
D213	4.7K	1D	"
D214	4.7K	1D	"
D215	4.7K	1D	"
D216	4.7K	1D	"
D217	4.7K	1D	"
D218	4.7K	1D	"
D219	4.7K	1D	"
D220	4.7K	1D	"
D221	4.7K	1D	"
D222	4.7K	1D	"
D223	4.7K	1D	"
D224	4.7K	1D	"
D225	4.7K	1D	"
D226	4.7K	1D	"
D227	4.7K	1D	"
D228	4.7K	1D	"
D229	4.7K	1D	"
D230	4.7K	1D	"
D231	4.7K	1D	"
D232	4.7K	1D	"
D233	4.7K	1D	"
D234	4.7K	1D	"
D235	4.7K	1D	"
D236	4.7K	1D	"
D237	4.7K	1D	"
D238	4.7K	1D	"
D239	4.7K	1D	"
D240	4.7K	1D	"
D241	4.7K	1D	"
D242	4.7K	1D	"
D243	4.7K	1D	"
D244	4.7K	1D	"
D245	4.7K	1D	"
D246	4.7K	1D	"
D247	4.7K	1D	"
D248	4.7K	1D	"
D249	4.7K	1D	"
D250	4.7K	1D	"
D251	4.7K	1D	"
D252	4.7K	1D	"
D253	4.7K	1D	"
D254	4.7K	1D	"
D255	4.7K	1D	"
D256	4.7K	1D	"
D257	4.7K	1D	"
D258	4.7K	1D	"
D259	4.7K	1D	"
D260	4.7K	1D	"
D261	4.7K	1D	"
D262	4.7K	1D	"
D263	4.7K	1D	"
D264	4.7K	1D	"
D265	4.7K	1D	"
D266	4.7K	1D	"
D267	4.7K	1D	"
D268	4.7K		


**DESIGNATION LIST**

DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION
C101	10 MF 25V AX TANT	D101	D103, D105, D107
C102	1 MF 50V AX CER	Q101	Q103
C103	47 PF 50V AX CER	Q104	
C104	220 PF " "		
C105	10 MF 25V AX TANT	IC1A	7406
C106	1 MF 20V AX TANT	IC1B	74LS273
C107	10 MF 25V AX TANT	IC1C	74LS374
C108	0.47 MF 100V MYLAR	IC1D	1K X 8 RAM
C109	0.1 MF 50V AX CER	IC1E	ROM/EPROM 0
C110	100 PF 50V AX CER	IC1F	" " 1
C111	1 MF 50V AX CER	IC1G	" " 2
C112	33 PF 50V AX CER	IC1H	" " 3
C113	0.022 MF 100V 10% MYLAR	IC1I	74LS245
C114	1 MF 50V AX CER	IC1J	Z 80 CPU
C115	100 PF 50V AX CER	IC1K	74LS08
C116	1 MF 20V AX TANT	IC1L	74LS244
C117	330 PF 50V AX CER	IC1M	74LS138
C118	10 MF 25V AX TANT	IC1N	" "
C119	0.1 MF 50V AX CER	IC1O	74LS670
C120	470 MF 16V AX ELECT	IC1P	74LS32
C121	0.1 MF 50V AX CER	IC1Q	74LS670
C122	10 MF 25V AX TANT	IC1R	74LS128
C123	0.1 MF 50V AX CER	IC1S	" "
C124	470 MF 16V AX ELECT	IC1T	74LS174
C125	0.1 MF 50V AX CER	IC1U	7401
C126	470 MF 16V AX ELECT	IC1V	MC1403
C127	0.1 MF 50V AX CER	IC1W	74LS04
C128	10 MF 25V AX TANT	IC1X	MC14024
C129	470 MF 16V AX ELECT	IC1Y	7427
C130	10 MF 25V AX TANT	IC1Z	74LS367
C131	10 MF 25V AX TANT	IC2A	1M 100V
C132	10 MF 25V AX TANT	IC2B	MC14016
C133	220 OHM " "	IC2C	" "
C134	33 K " "	IC2D	74190
C135	180 K " "	IC2E	PROM SB2-A
C136	100 K " "	IC2F	74166
C137	10 K " "	IC2G	74LS244
C138	510K " "	IC2H	MC1401
C139	10 K " "	IC2I	74126
C140	10 K " "	IC2J	74LS244
C141	10 K " "	IC2K	74LS191
C142	10 K " "	IC2L	" "
C143	10 K " "	IC2M	" "
C144	10 K " "	IC2N	" "
C145	10 K " "	IC2O	" "
C146	10 K " "	IC2P	" "
C147	10 K " "	IC2Q	" "
C148	10 K " "	IC2R	" "
C149	10 K " "	IC2S	" "
C150	10 K " "	IC2T	" "
C151	10 K " "	IC2U	" "
C152	10 K " "	IC2V	" "
C153	10 K " "	IC2W	" "
C154	10 K " "	IC2X	" "
C155	10 K " "	IC2Y	" "
C156	10 K " "	IC2Z	" "
C157	10 K " "	IC3A	24 PIN IC SOCKET
C158	10 K " "	IC3B	40 PIN " "
C159	10 K " "	IC3C	16 PIN " "
C160	10 K " "	IC3D	40 PIN " "
C161	10 K " "	IC3E	" "
C162	10 K " "	IC3F	" "
C163	10 K " "	IC3G	" "
C164	10 K " "	IC3H	" "
C165	10 K " "	IC3I	" "
C166	10 K " "	IC3J	" "
C167	10 K " "	IC3K	" "
C168	10 K " "	IC3L	" "
C169	10 K " "	IC3M	" "
C170	10 K " "	IC3N	" "
C171	10 K " "	IC3O	" "
C172	10 K " "	IC3P	" "
C173	10 K " "	IC3Q	" "
C174	10 K " "	IC3R	" "
C175	10 K " "	IC3S	" "
C176	10 K " "	IC3T	" "
C177	10 K " "	IC3U	" "
C178	10 K " "	IC3V	" "
C179	10 K " "	IC3W	" "
C180	10 K " "	IC3X	" "
C181	10 K " "	IC3Y	" "
C182	10 K " "	IC3Z	" "
C183	10 K " "	IC4A	16 MHZ CRYSTAL
C184	10 K " "	IC4B	SNAP
C185	10 K " "	IC4C	" "
C186	10 K " "	IC4D	" "
C187	10 K " "	IC4E	" "
C188	10 K " "	IC4F	" "
C189	10 K " "	IC4G	" "
C190	10 K " "	IC4H	" "
C191	10 K " "	IC4I	" "
C192	10 K " "	IC4J	" "
C193	10 K " "	IC4K	" "
C194	10 K " "	IC4L	" "
C195	10 K " "	IC4M	" "
C196	10 K " "	IC4N	" "
C197	10 K " "	IC4O	" "
C198	10 K " "	IC4P	" "
C199	10 K " "	IC4Q	" "
C200	10 K " "	IC4R	" "
C201	10 K " "	IC4S	" "
C202	10 K " "	IC4T	" "
C203	10 K " "	IC4U	" "
C204	10 K " "	IC4V	" "
C205	10 K " "	IC4W	" "
C206	10 K " "	IC4X	" "
C207	10 K " "	IC4Y	" "
C208	10 K " "	IC4Z	" "
C209	10 K " "	IC5A	" "
C210	10 K " "	IC5B	" "
C211	10 K " "	IC5C	" "
C212	10 K " "	IC5D	" "
C213	10 K " "	IC5E	" "
C214	10 K " "	IC5F	" "
C215	10 K " "	IC5G	" "
C216	10 K " "	IC5H	" "
C217	10 K " "	IC5I	" "
C218	10 K " "	IC5J	" "
C219	10 K " "	IC5K	" "
C220	10 K " "	IC5L	" "
C221	10 K " "	IC5M	" "
C222	10 K " "	IC5N	" "
C223	10 K " "	IC5O	" "
C224	10 K " "	IC5P	" "
C225	10 K " "	IC5Q	" "
C226	10 K " "	IC5R	" "
C227	10 K " "	IC5S	" "
C228	10 K " "	IC5T	" "
C229	10 K " "	IC5U	" "
C230	10 K " "	IC5V	" "
C231	10 K " "	IC5W	" "
C232	10 K " "	IC5X	" "
C233	10 K " "	IC5Y	" "
C234	10 K " "	IC5Z	" "
C235	10 K " "	IC6A	" "
C236	10 K " "	IC6B	" "
C237	10 K " "	IC6C	" "
C238	10 K " "	IC6D	" "
C239	10 K " "	IC6E	" "
C240	10 K " "	IC6F	" "
C241	10 K " "	IC6G	" "
C242	10 K " "	IC6H	" "
C243	10 K " "	IC6I	" "
C244	10 K " "	IC6J	" "
C245	10 K " "	IC6K	" "
C246	10 K " "	IC6L	" "
C247	10 K " "	IC6M	" "
C248	10 K " "	IC6N	" "
C249	10 K " "	IC6O	" "
C250	10 K " "	IC6P	" "
C251	10 K " "	IC6Q	" "
C252	10 K " "	IC6R	" "
C253	10 K " "	IC6S	" "
C254	10 K " "	IC6T	" "
C255	10 K " "	IC6U	" "
C256	10 K " "	IC6V	" "
C257	10 K " "	IC6W	" "
C258	10 K " "	IC6X	" "
C259	10 K " "	IC6Y	" "
C260	10 K " "	IC6Z	" "
C261	10 K " "	IC7A	" "
C262	10 K " "	IC7B	" "
C263	10 K " "	IC7C	" "
C264	10 K " "	IC7D	" "
C265	10 K " "	IC7E	" "
C266	10 K " "	IC7F	" "
C267	10 K " "	IC7G	" "
C268	10 K " "	IC7H	" "
C269	10 K " "	IC7I	" "
C270	10 K " "	IC7J	" "
C271	10 K " "	IC7K	" "
C272	10 K " "	IC7L	" "
C273	10 K " "	IC7M	" "
C274	10 K " "	IC7N	" "
C275	10 K " "	IC7O	" "
C276	10 K " "	IC7P	" "
C277	10 K " "	IC7Q	" "
C278	10 K " "	IC7R	" "
C279	10 K " "	IC7S	" "
C280	10 K " "	IC7T	" "
C281	10 K " "	IC7U	" "
C282	10 K " "	IC7V	" "
C283	10 K " "	IC7W	" "
C284	10 K " "	IC7X	" "
C285	10 K " "	IC7Y	" "
C286	10 K " "	IC7Z	" "
C287	10 K " "	IC8A	" "
C288	10 K " "	IC8B	" "
C289	10 K " "	IC8C	" "
C290	10 K " "	IC8D	" "
C291	10 K " "	IC8E	" "
C292	10 K " "	IC8F	" "
C293	10 K " "	IC8G	" "
C294	10 K " "	IC8H	" "
C295	10 K " "	IC8I	" "
C296	10 K " "	IC8J	" "
C297	10 K " "	IC8K	" "
C298	10 K " "	IC8L	" "
C299	10 K " "	IC8M	" "
C300	10 K " "	IC8N	" "
C301	10 K " "	IC8O	" "
C302	10 K " "	IC8P	" "
C303	10 K " "	IC8Q	" "
C304	10 K " "	IC8R	" "
C305	10 K " "	IC8S	" "
C306	10 K " "	IC8T	" "
C307	10 K " "	IC8U	" "
C308	10 K " "	IC8V	" "
C309	10 K " "	IC8W	" "
C310	10 K " "	IC8X	" "
C311	10 K " "	IC8Y	" "
C312	10 K " "	IC8Z	" "
C313	10 K " "	IC9A	" "
C314	10 K " "	IC9B	" "
C315	10 K " "	IC9C	" "
C316	10 K " "	IC9D	" "
C317	10 K " "	IC9E	" "
C318	10 K " "	IC9F	" "
C319	10 K " "	IC9G	" "
C320	10 K " "	IC9H	" "
C321	10 K " "	IC9I	" "
C322	10 K " "	IC9J	" "
C323	10 K " "	IC9K	" "
C324	10 K " "	IC9L	" "
C325	10 K " "	IC9M	" "
C326	10 K " "	IC9N	" "
C327	10 K " "	IC9O	" "
C328	10 K " "	IC9P	" "
C329	10 K " "	IC9Q	" "
C330	10 K " "	IC9R	" "
C331	10 K " "	IC9S	" "
C332	10 K " "	IC9T	" "
C333	10 K " "	IC9U	" "
C334	10 K " "	IC9V	" "
C335	10 K " "	IC9W	" "
C336	10 K " "	IC9X	" "
C337	10 K " "	IC9Y	" "
C338	10 K " "	IC9Z	" "
C339	10 K " "	IC0A	" "
C340	10 K " "	IC0B	" "
C341	10 K " "	IC0C	" "
C342	10 K " "	IC0D	" "
C343	10 K " "	IC0E	" "
C344	10 K " "	IC0F	" "
C345	10 K " "	IC0G	" "
C346	10 K " "	IC0H	" "
C347	10 K " "	IC0I	" "
C348	10 K " "	IC0J	" "
C349	10 K " "	IC0K	" "
C350	10 K " "	IC0L	" "
C351	10 K " "	IC0M	" "
C352	10 K " "	IC0N	" "
C353	10 K " "	IC0O	" "
C354	10 K " "	IC0P	" "
C355	10 K " "	IC0Q	" "
C356	10 K " "	IC0R	" "
C357	10 K " "	IC0S	" "
C358	10 K " "	IC0T	" "
C359	10 K " "	IC0U	" "
C360	10 K " "	IC0V	" "
C361	10 K " "	IC0W	" "
C362	10 K " "	IC0X	" "
C363	10 K " "	IC0Y	" "
C364	10 K " "	IC0Z	" "
C365	10 K " "	IC1A	" "
C366	10 K " "	IC1B	" "
C367	10 K " "	IC1C	" "
C368	10 K " "	IC1D	" "
C369	10 K " "	IC1E	" "
C370	10 K " "	IC1F	" "
C371	10 K " "	IC1G	" "
C372	10 K " "	IC1H	" "
C373	10 K " "	IC1I	" "
C374	10 K " "	IC1J	" "
C375	10 K " "	IC1K	" "
C376	10 K " "	IC1L	" "
C377	10 K " "	IC1M	" "
C378	10 K " "	IC1N	" "
C379	10 K " "	IC1O	" "
C380	10 K " "	IC1P	" "
C381	10 K " "	IC1Q	" "
C382	10 K " "	IC1R	" "
C383	10 K " "	IC1S	" "
C384	10 K " "	IC1T	" "
C385	10 K " "	IC1U	" "
C386	10 K " "	IC1V	" "
C387	10 K " "	IC1W	" "
C388	10 K " "	IC1X	" "
C389	10 K " "	IC1Y	" "

**DESIGNATION LIST**

**CROSS REFERENCE LIST**

DESCRIPTION	QUANTITY	DESIGNATION	PART NO.
33 PF 50V 5% AX CER	1	C144	0986-09800-0900
47 PF 50V AX CER	2	C128, C129	0986-09800-2800
100 PF 50V 5% AX CER	1	C142	0986-09800-1000
330 PF 50V AX CER	2	C161, C165	0986-09800-1300
.0022 MF 100V 10% MYLAR	12	C145-C156	0986-09800-1200
.047 MF 100V MYLAR	1	C139	0986-09800-2800
.01 MF 50V AX CER	50	CP2-CP12, CP14-CP33, CP35-CP46, CP48-CP51, C140, C141, C173	0986-09800-2000
.1 MF 50V AX CER	17	C112-127, C143	0986-09800-1100
1 MF 20V AX TANT	8	C157-159, C162-C164, C134, C137	0986-09800-1400
10 MF 25V AX TANT	16	CP34, CP52, CP53, CP201-CP204, C101-C103, C131, C138, C172, C166-C168	0986-09800-0700
470 MF 16V AX ELECT	4	CP1, CP13, CP47, CP54	0986-09800-2700
22 OHM 1/4W	1	R164	0062-063B3-1XXX
100 OHM II	1	R239	0062-110B3-1XXX
220 OHM 1/4W	17	R116-131, R162	0062-133B3-1XXX
300 OHM II	2	R231	0062-141B3-1XXX
330 OHM II	2	R160-R161	0062-144B3-1XXX
1 K II	3	R153, R227, R401	0062-179B3-1XXX
1.2 K II	3	R157, R158, R163	0062-183B3-1XXX
2.7 K II	6	R301-R306	0062-199B3-1XXX
3 K II	1	R233	0062-201B3-1XXX
4.7 K II	19	R101-R107, R165-166, R225-226, R228, R232, R234, R235, R402, R405, R406, R407	0062-211B3-1XXX
5.6 K II	12	R173-R178, R197-R202	0062-215B3-1XXX
10 K II	4	R155, R156, R146, R151	0062-227B3-1XXX
13 K II	6	R209-R211, R220-R222	0062-233B3-1XXX
24 K II	2	R179, R186	0062-245B3-1XXX
27 K II	2	R213, R224	0062-247B3-1XXX
33 K II	13	R156, R203-R208, R214-R219	0062-251B3-1XXX
100K II	2	R142, R148	0062-275B3-1XXX
180K II	4	R158, R141	0062-287B3-1XXX
620K II	4	R144, R145, R149, R150	0062-313B3-1XXX
1 MEG. II	2	R152, R154	0062-323B3-1XXX
820 OHM 8 PIN SIP	1	RM8	0986-09805-0800
1.8 K 10 PIN SIP	1	RM9	0986-09805-0800
2.7 K 10 PIN SIP	2	RM4, RM5	0986-09805-0500
4.7 K 8 PIN SIP	1	RM7	0986-09805-0400
4.7 K 10 PIN SIP	2	RM1, RM14	0986-09805-0300
1N4148	6	D101-D103, D105-D107	0986-09801-0200
2N4403	1	Q104	0986-09802-0500
TIP 110	3	Q101-Q103	0986-09802-0400
74LS02	1	D6	0986-09803-7400
74LS04	1	C11	0986-09803-6900
74LS04	1	F12	0986-09803-6600
7406	1	A1	0986-09803-7800
7407	1	C8	0986-09803-5900
74LS08	1	A13	0986-09803-7300
7427	1	C13	0986-09803-7200
74LS32	1	B10	0986-09803-6100
7474	1	F11	0986-09803-6700
74128	1	E12	0986-09803-6800
74LS138	4	B12-B13, B7-B8	0986-09803-6500
74161	1	E11	0986-09803-5100
74166	1	D13	0986-09803-5300
74LS174	1	B14	0986-09803-7500
74190	1	D11	0986-09803-5400
74LS191	6	F3-F5, F8-F10	0986-09803-5600
74LS244	3	B4, E2, F2	0986-09803-4800
74LS245	1	A11	0986-09803-6400
74LS273	1	A4	0986-09803-4700
74LS367	1	C14	0986-09803-7000
74LS374	1	A5	0986-09803-4600
74LS670	2	B9, B11	0986-09803-6300
AY-3-8910	2	F8-F7	0986-09803-8500
LM3900	1	D3	0986-09803-4900
MC3403	2	C10, E10	0986-09803-5000
MC14016	3	D7-D9	0986-09803-6200
MC14024	1	C12	0986-09803-7100
PROM SB2-A	1	D12	0986-09803-8200
RAM 1K X8 SUB	1	A6	0986-09803-8000
ROM/EPROM O	1	A7	OPTION KIT: UPRIGHT, MINI 0982-09803-3500
II 1	1	A8	
II 2	1	A9	
II 3	1	A10	
II 4	1	A12	
Z-80 (3860)	1		0986-09803-5500
16 PIN IC SOCKET	1	ICSD12	0986-09804-1400
24 PIN II II	5	ICSA6-ICSA10	0986-09804-1600
40 PIN II II	3	ICSA12, ICSF6, ICSF7	0986-09804-1500
3 PIN KK-100 RT. ANGEL	1	J3	3000-13366-0300
4 PIN II II	1	J5	3000-16366-0400
5 PIN II II	2	J5, J4	3000-16366-0500
13 PIN II II	1	J4	3000-16366-1300
18 PIN II II	1	J5	3000-16366-1800
4 PIN CONN KK 156 (SIP)	2	J1, J2	0986-09804-1300
20 PIN "	2	J1, J2	0986-09804-1200
JUMPER WIRE	2	JW1, JW2	0986-09804-4000
YELLOW LED	2	LED 3	0986-09804-2000
SNAP'S	3	MHQ101-MHQ103	0017-00007-0134
8 POSITION DIP SW.	1	SW3	0986-09805-0900
10 POSITION DIP SW.	1	SW1	0986-09805-1000
P.B. SW.	1	SW4	0986-09804-1700
16 MHZ CRYSTAL W/3RD LEAD	1	XTAL	0986-09805-1100

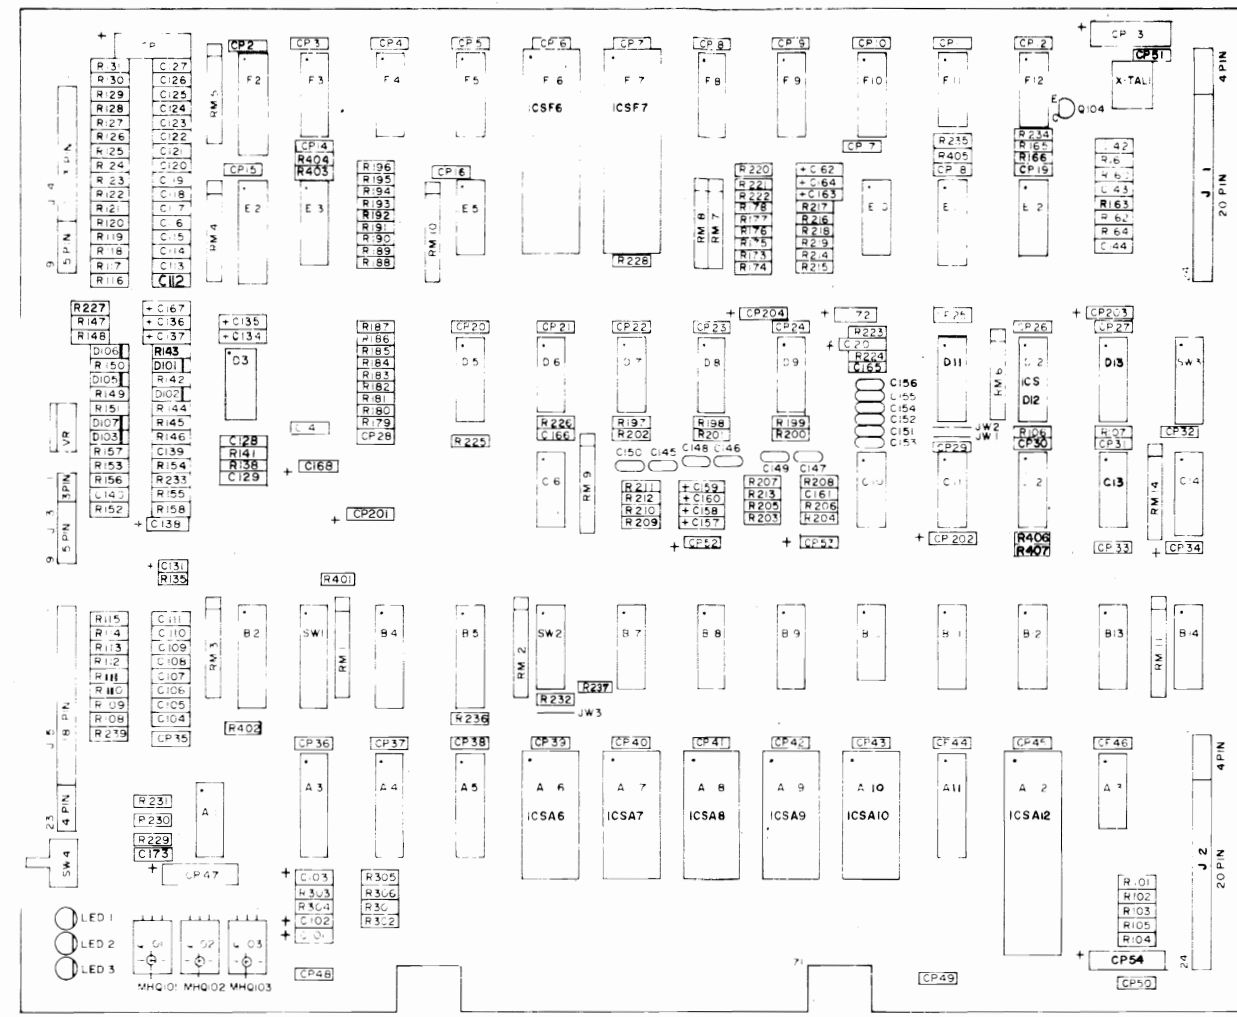

W/O FANNING KIT

DESIGNATION LIST		CROSS REFERENCE LIST	
DESIGNATION	DESCRIPTION	DESCRIPTION	PART NO.
R403, R404	33K 1/4W 5% CHB.	33K 1/4W 5% CHB.	2
		R403, R404	0062-251B3-1XXX

NOTE: THIS DRAWING VALID FOR 'K' & 'L' VERSION SOUND I/O

DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION
D101-D103	1N4148	D101-D103, D105-D107	TIP 110
Q101-Q103	2N4403	Q101-Q103	2N4403
Q104		Q104	
IC 1A	7406	IC 1A-IC 10A	24 PIN IC SOCKET
4A	74LS273	12A	40 PIN "
5A	74LS374	12D	16 PIN "
6A	1K X8 RAM	6F 7F	40 PIN "
7A	ROM/EPROM O		
8A		J1, J2	20 PIN CONN. KK-100 (SIP)
9A		J3	5 PIN KK 100 RT. ANGLE
10A		J4	3 PIN "
11A	74LS245	J5	13 PIN "
12A	Z-80 CPU	J5	5 PIN "
13A	74LS08	J5	18 PIN "
4B	74LS244	J5	4 PIN "
7B	74LS138	JW1, JW2	JUMPER WIRE
8B		LED 3	YELLOW LED
9B	74LS670	SW1	10 POSITION DIP
10B	74LS32	SW3	8 "
11B	74LS670	SW4	PUSH BUTTON SW
12B	74LS138	XTAL 1	16 MHZ CRYSTAL
13B		MHQ101-MHQ103	SNAP
14B	74LS174		
6C	7403		
10C	MC3403		
11C	74LS04		
12C	MC14024		
11C	7427		
3D	74LS367		
6D	LM3900		
7D	74LS02		
8D	MC14016		
9D			
11D	74190		
12D	PROM SB2 A		
13D	74166		
2E	74LS244		
10E	MC3403		
11E	74161		
12E	74126		
2F	74LS244		
3F	74LS191		
4F			
5F			
6F	AY-3-8910		
7F			
8F	74LS191		
9F			
10F			
11F	7474		
12F	74S04		
ICS 1A-IC 10A	24 PIN IC SOCKET		
12A	40 PIN "		
12D	16 PIN "		
6F 7F	40 PIN "		
J1, J2	20 PIN CONN. KK-100 (SIP)		
J3	5 PIN KK 100 RT. ANGLE		
J4	3 PIN "		
J5	13 PIN "		
J5	5 PIN "		
J5	18 PIN "		
J5	4 PIN "		
JW1, JW2	JUMPER WIRE		
LED 3	YELLOW LED		
SW1	10 POSITION DIP		
SW3	8 "		
SW4	PUSH BUTTON SW		
XTAL 1	16 MHZ CRYSTAL		
MHQ101-MHQ103	SNAP		

PROJECT ENG: CARY MEDNICK

SOLAR FOX

MIDWAY MFG. CO.


1 PER

ASS'Y DRAWING SOUND I/O

A082-90908-L000

M051-00982-B009

1/6/82

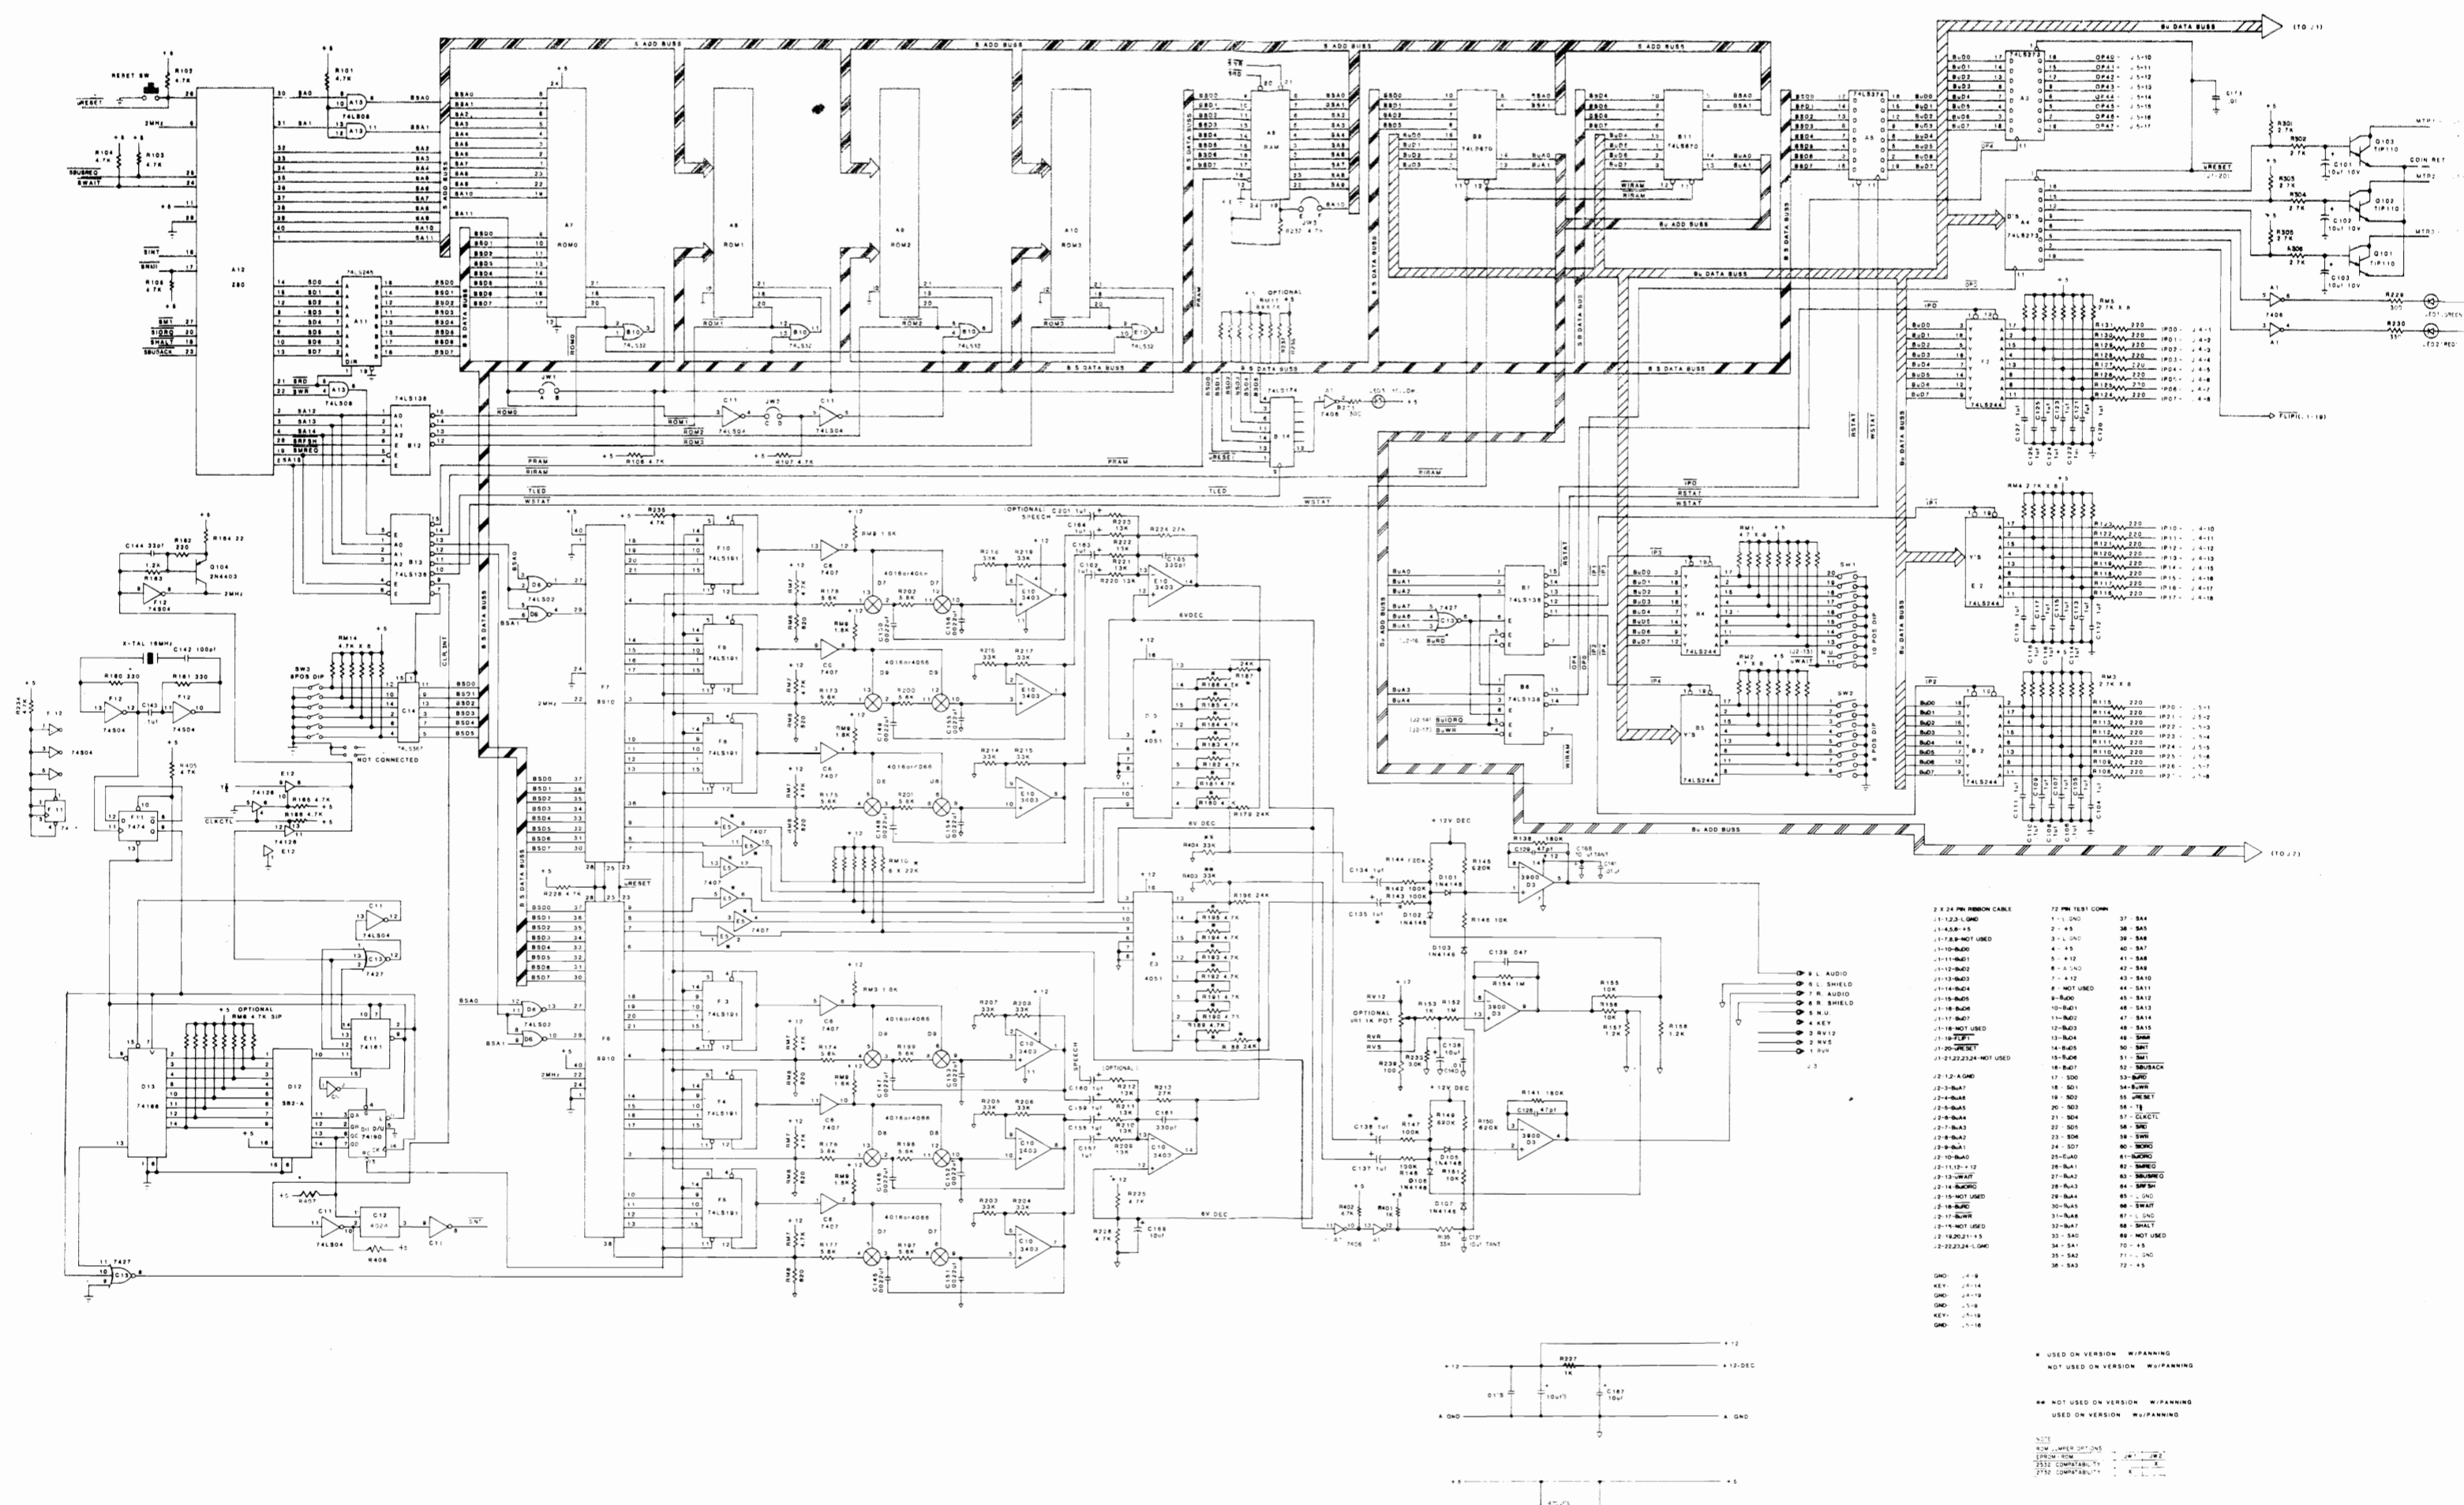

2 X 24 PIN RIBBON CABLE

J1-1,2,3-GND	27-S44
J1-4,5-+5	28-S45
J1-6,7-NOT USED	29-+1-GND
J1-8-BU00	30-S46
J1-9-BU01	31-S47
J1-10-BU02	32-S48
J1-11-BU03	33-S49
J1-12-BU04	34-S50
J1-13-BU05	35-S51
J1-14-BU06	36-S52
J1-15-BU07	37-S53
J1-16-BU08	38-S54
J1-17-BU09	39-S55
J1-18-BU10	40-S56
J1-19-BU11	41-S57
J1-20-BU12	42-S58
J1-21-BU13	43-S59
J1-22-BU14	44-S60
J1-23-BU15	45-S61
J1-24-BU16	46-S62
J1-25-BU17	47-S63
J1-26-BU18	48-S64
J1-27-BU19	49-S65
J1-28-BU20	50-S66
J1-29-BU21	51-S67
J1-30-BU22	52-S68
J1-31-BU23	53-S69
J1-32-BU24	54-S70
J1-33-BU25	55-S71
J1-34-BU26	56-S72
J1-35-BU27	57-S73
J1-36-BU28	58-S74
J1-37-BU29	59-S75
J1-38-BU30	60-S76
J1-39-BU31	61-S77
J1-40-BU32	62-S78
J1-41-BU33	63-S79
J1-42-BU34	64-S80
J1-43-BU35	65-S81
J1-44-BU36	66-S82
J1-45-BU37	67-S83
J1-46-BU38	68-S84
J1-47-BU39	69-S85
J1-48-BU40	70-S86
J1-49-BU41	71-S87
J1-50-BU42	72-S88

72 PIN TEST COMB

1-1-GND	27-S44
2-+5	28-S45
3-+1-GND	29-S46
4-S47	30-S47
5-+12	31-S48
6-S49	32-S49
7-NOT USED	33-S50
8-S51	34-S51
9-S52	35-S52
10-BU01	36-S53
11-BU02	37-S54
12-BU03	38-S55
13-BU04	39-S56
14-BU05	40-S57
15-BU06	41-S58
16-BU07	42-S59
17-BU08	43-S60
18-BU09	44-S61
19-BU10	45-S62
20-BU11	46-S63
21-BU12	47-S64
22-BU13	48-S65
23-BU14	49-S66
24-S07	50-S67
25-ELAD	51-S68
26-BU15	52-S69
27-BU16	53-S70
28-BU17	54-S71
29-BU18	55-S72
30-BU19	56-S73
31-BU20	57-S74
32-BU21	58-S75
33-S47	59-S76
34-S48	60-S77
35-S49	61-S78
36-S50	62-S79
37-S51	63-S80
38-S52	64-S81
39-S53	65-S82
40-S54	66-S83
41-S55	67-S84
42-S56	68-S85
43-S57	69-S86
44-S58	70-S87
45-S59	71-S88
46-S60	72-S89

USED ON VERSION W/PANNING  
NOT USED ON VERSION W/PANNING

NOT USED ON VERSION W/PANNING  
USED ON VERSION W/PANNING

NOTE  
ROW NUMBER OPTIONS: -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -44, -45, -46, -47, -48, -49, -50, -51, -52, -53, -54, -55, -56, -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -69, -70, -71, -72, -73, -74, -75, -76, -77, -78, -79, -80, -81, -82, -83, -84, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -99, -100